

SPECIFICATIONS SHEET

Fall protection



KOSTO
BUILT STRONG • BÂTI SOLIDE

Trauma Safety Strap for Harness

CSK001

Anti-trauma safety straps are designed to prevent suspension trauma (orthostatic intolerance) in the event of a fall. When a person remains suspended in the air, even for a short period, the harness can exert pressure on the legs, resulting in loss of consciousness and/or serious injury. They enable suspended workers to stand up in the event of a fall, and keep the body upright to relieve pressure on the legs while waiting for help to arrive.

Easily attached to most harnesses.

Material

1" nylon webbing
2 pockets
Steel components

Capacity

190kg (420lb) (equipment included)

Size

One size - Adjustable length

2 zip pockets for quick and easy deployment

Compact and lightweight. Does not interfere with worker activity



The straps are adjustable to fit any size.

Use

Helps maintain good blood circulation in the legs after a fall.

1. Open the pockets on both sides of the harness

2. Connect the end of the strap to the ring and make sure the buckle is in place, locked and secure.



4. Adjust the strap to eliminate strangulation and maintain a sitting position

3. Place foot inside the loop.

Installation instructions




Install Trauma Strap immediately above where leg straps meet side/shoulder straps (as shown).



Pass Trauma Strap web loop behind harness strap and pull back around.



Pull Trauma Strap pouch through web loop and choke down to harness strap. Pouch must be on outside of harness strap

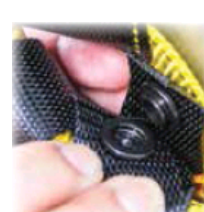

Secure Trauma Strap snap buckle around harness strap.

SPECIFICATIONS SHEET

Fall Protection



KOSTO
BUILT STRONG • BÂTI SOLIDE

Associate Products

XPRO Harness
CHK210

CHK110
Harness

Tool lanyard
CAK050

D-Ring extension
CCK008/CCK018



Arrêt de chute
Classe A

Récupération
Classe E

Arrêt de chute
Classe A



Important

- Do not use this equipment for purposes other than those described in this manual.
- Read and understand the instructions included with the equipment before use.
- The Trauma Safety Strap must not be used as an anchor, lanyard or any other fall protection measure, except as detailed in these instructions.
- Seek immediate medical attention if you are the victim of a fall or suspension.
- The Trauma Safety Strap is not intended to replace a rescue plan. The employer must always have in place a rescue plan appropriate to the work environment, and the means to implement it.

Maintenance and Inspection

Maintenance

Clean after each use to maintain safety and durability.
Use mild soap and water, then rinse and dry.
To dry completely, unroll the strap and hang it up.
NEVER clean the strap with corrosive substances.
When not in use, store in a place where it will not be affected by heat, light, excessive humidity, chemicals or other degrading elements.

Inspection

Before **EACH** use, inspect the anti-trauma safety strap for damage. If you find any defects or damage, remove the strap from service **IMMEDIATELY**.

A competent person should inspect the equipment at least every twelve months.