

DuPont Permeation Guide



TABLE OF CONTENTS

• How to use this Permeation Guide	3
• Independent Testing	3
• What is Permeation?	3
• How Permeation Tests are Conducted	4
• Definitions of Terms	4
• Chemical Class and Subclass Listings	5
• ASTM F1001 List of 21 Challenge Chemicals Data Table	6
• Tychem® Chemical Permeation Data Table	8
• Tyvek® Fabric Information	50
• Tyvek® Chemical Permeation Data Table	51
• Appendix	
• Alphabetical Index	79
• CAS Number Index	101

Caution:

This information is based upon technical data that DuPont believes to be reliable on the date issued. It is subject to revision as additional knowledge and experience are gained. The information set forth herein reflects laboratory performance of fabrics, not complete garments, under controlled conditions. It is intended for informational use by persons having technical skill for evaluation under their specific end-use conditions, at their own discretion and risk.

It is the user's responsibility to determine the level of toxicity and the proper personal protective equipment needed. Anyone intending to use this information should first verify that the garment selected is suitable for the intended use. In many cases, seams and closures have shorter breakthrough times and higher permeation rates than the fabric. If fabric becomes torn,

abraded or punctured, or if seams or closures fail, or if attached gloves, visors, etc. are damaged, end user should discontinue use of garment to avoid potential exposure to chemical.

Since conditions of use are outside our control, **DuPont makes no warranties, express or implied, including, without limitation, no warranties of merchantability or fitness for a particular use and assume no liability in connection with any use of this information.**

This information is not intended as a license to operate under or a recommendation to infringe any patent, trademark or technical information of DuPont or others covering any material or its use.

Warning:

- Tychem® and Tyvek® fabrics should not be used around heat, flames, sparks or in potentially flammable or explosive environments. Only Tychem® ThermoPro, Tychem® Reflector® and Tychem® TK styles 600T/601T (with aluminized outer suit) garments are designed and tested to help reduce burn injury during escape from a flash fire. Users of Tychem® ThermoPro, Tychem® Reflector® and Tychem® TK styles 600T/601T (with aluminized outer suit) garments should not knowingly enter an explosive environment.
- Tychem® garments with attached socks must be worn inside protective outer footwear and are not suitable as outer footwear. These attached socks do not have adequate durability or slip resistance to be worn as the outer foot covering.

How to Use this Permeation Guide

To Find Permeation Test Results

1. Locate the desired chemical in the Chemical Index (Appendix).

The Chemical Index is presented in two ways:

- Alphabetical Index
- Chemical Abstract System (CAS) Number Index

For each chemical, the following information is listed:

- Chemical name
- CAS number
- Chemical class and subclass number(s)
- Synonyms, if applicable

2. Using the chemical name or CAS number, locate the class and subclass (es) of the chemical in the permeation index table.
3. Using the class and subclass, go to the chemical permeation data tables to locate the chemical. The range of fabrics is listed across the top of the table. If testing was done, the permeation data is reported.

Independent Testing

All testing reported in this guide was performed by a third party laboratory.

Permeation data for industrial chemicals is obtained per ASTM F739. Normalized breakthrough times (the time at which the permeation rate exceeds $0.1 \mu\text{g}/\text{cm}^2/\text{min}$) are reported in minutes. All chemicals have been tested between approximately 20°C and 27°C unless otherwise stated. All chemicals have been tested at a concentration of greater than 95% unless otherwise stated.

Chemical warfare agents (Lewisite, Sarin, Soman, Sulfur Mustard, Tabun and VX Nerve Agent) have been tested at 22°C and 50% relative humidity per military standard MIL-STD-282. "Breakthrough time" for chemical warfare agents is defined as the time when the cumulative mass which permeated through the fabric exceeds the limit in MIL-STD-282 [either 1.25 or $4.0 \mu\text{g}/\text{cm}^2$].

What is Permeation?

Permeation is the absorption, diffusion and desorption of a chemical through a barrier material at the molecular level. Penetration, on the other hand, is the bulk passage of a chemical through a pore or opening in the barrier material.


To help you understand the difference between these two mechanisms, consider this example. Have you ever opened a bottle of soda to find out that it was flat? There aren't any holes in the bottle. The liquid is still inside. Why is the soda flat? It's flat because the carbon dioxide that gives soda its fizz has permeated through the bottle over time. If you opened a fresh bottle of soda and did not replace the cap, the carbon dioxide would just escape out of the top of the bottle. That would be penetration.

Permeation tests are best suited for testing liquids and vapors.

How Permeation Tests Are Conducted

Other than for Chemical Warfare Agents, permeation tests are conducted following ASTM F739 "Test Method for Resistance of Protective Clothing Materials to Permeation by Liquids and Gases." A swatch of test fabric is inserted into a special test cell, with the outside surface of the fabric toward the

challenge chamber, thus exposing it to a challenge chemical. The inside surface of the fabric is toward the sampling chamber. If the chemical moves through the fabric and is detected on the inside surface of the fabric, it is said to have permeated through the fabric.

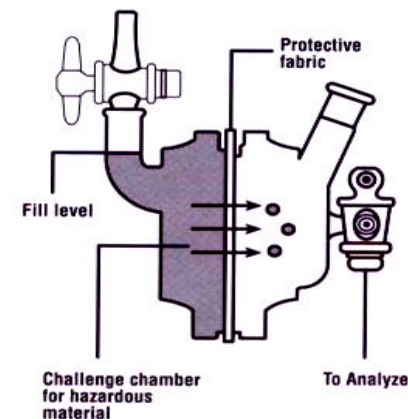

ASTM F739 Test Cell

Definitions of Key Terms for ASTM F739

Breakthrough time: In permeation testing, the actual breakthrough time is the length of time it takes for a challenge chemical to permeate the fabric being tested. It is measured from the point of initial contact of the challenge chemical with the outside surface of the fabric to the time that the challenge chemical is detected on the inside of the fabric. Sensitive analytical equipment is often used to measure the amount of chemical permeating the fabric.

Normalized, or sometimes called "standardized" breakthrough time, is a measure of the elapsed time from initial contact with the challenge chemical until the chemical permeates the fabric at a rate of 0.1 g/cm²/min. This is defined in ASTM F739 test method. Normalized breakthrough times eliminate biased results due to differences in the sensitivity of the detection equipment and are thus the industry

standard measure of breakthrough time. This DuPont Permeation Guide reports normalized breakthrough times using the 0.1 g/cm²/min criteria.

A normalized breakthrough time of >480 minutes does not always mean that there was no chemical permeation; it means that the rate of permeation did not exceed 0.1 g/cm²/min during the 8 hour test. If the permeation rate exceeds 0.1 g/cm²/min in the first 10 minutes of testing, DuPont chooses to report the breakthrough time as "immediate" (imm.).

PLEASE NOTE: In Europe, normalized breakthrough times are based on a permeation rate of 1.0 g/cm²/min. This is 10 times less sensitive than the basis used in North America.

Physical phase: The phase of the challenge chemical during the test: solid-S, liquid-L, gas-G.

Chemical Class & Subclass Listing*

100 Carboxylic acids 102 Aliphatic and Alicyclic, Unsubstituted 103 Aliphatic and Alicyclic, Substituted 104 Aliphatic and Alicyclic, Polybasic 110 Acid Halides, Carboxylic 111 Aliphatic and Alicyclic 112 Aromatic 113 Chloroformates 120 Aldehydes 121 Aliphatic and Alicyclic 122 Aromatic 130 Amides 132 Aliphatic and Alicyclic 135 Acrylamides 140 Amines 141 Aliphatic and Alicyclic, Primary 142 Aliphatic and Alicyclic, Secondary 143 Aliphatic and Alicyclic, Tertiary 145 Aromatic, Primary 146 Aromatic, Secondary and Tertiary 148 Aliphatic and Alicyclic Polyamines 149 Aromatic Polyamines 150 Hydroxlamines and Ketoximes 160 Anhydrides 161 Aliphatic and Alicyclic 210 Isocyanates 211 Aliphatic and Alicyclic 212 Aromatic 220 Carboxylic Esters 221 Formates 222 Acetates 223 Acrylates and Methacrylates 224 Aliphatic, Others 226 Benzoates and Phthalates	230 Non-Carboxylic Esters 233 Carbamates and Others 240 Ethers 241 Aliphatic and Alicyclic 245 Glycol Ethers 246 Vinyllic 260 Halogen Compounds 261 Aliphatic and Alicyclic 263 Aromatic 264 Vinyllic 265 Alylic 266 Benzylic 270 Heterocyclic Compounds 271 Nitrogen, Pyridines 274 Nitrogen, Others 275 Oxygen, Epoxides 277 Oxygen, Furans 278 Oxygen, Others 280 Hydrazines 290 Hydrocarbons 291 Aliphatic and Alicyclic, Saturated 292 Aromatic 293 Aromatic Polynuclear 294 Aliphatic and Alicyclic, Unsaturated 296 Polyenes 300 Peroxides 301 Inorganic 302 Organic 310 Hydroxylic Compounds (includes alcohols) 311 Aliphatic and Alicyclic, Primary 312 Aliphatic and Alicyclic, Secondary 313 Aliphatic and Alicyclic, Tertiary 314 Aliphatic and Alicyclic, Polyols 315 Aliphatic and Alicyclic, Substituted	316 Aromatic, Phenols 318 Aromatic, Others 330 Elements 340 Inorganic Salts and Inorganic Salt Solutions 345 Inorganic Cyano Compounds 350 Inorganic Gases and Vapors 360 Inorganic Acid Halides 365 Inorganic Acid Oxides 370 Inorganic Acids 380 Inorganic Bases 390 Ketones 391 Aliphatic and Alicyclic 430 Nitriles 431 Aliphatic and Alicyclic 432 Aromatic 440 Nitro Compounds 441 Unsubstituted 442 Substituted 450 Nitroso Compounds 460 Organo-Phosphorus Compounds 462 Derivatives of Phosphorus-based acids 470 Organo-Metallic Compounds 480 Organo-Silicon Compounds 500 Sulfur Compounds 501 Thiols 502 Sulfides and Disulfides 503 Sulfones and Sulfoxides 504 Sulfonic Acids 505 Sulfonyl Chlorides 507 Sulfonates, Sulfates, and Sulfites 509 Other 550 Organic Salts and Organic Salt Solutions 590 Miscellaneous (Not classified)
--	---	--

*Partial list based on ASTM F1186. A complete copy of ASTM F1186 may be purchased from ASTM (www.astm.org).

ASTM F1001 List of Challenge Chemicals (Permeation Test Method ASTM F739)

Sub-class	Chemical Name	CAS Number	Phase	Normalized Breakthrough Time (Minutes)									
				Tychem® 2000	Tyvek® 800	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000
100	Acetic acid (10%)	64-19-7	Liquid		imm								
130	Dimethyl formamide, N,N-	68-12-2	Liquid	imm			90	>480	>480	>480	>480	>480	>480
140	Diethyl amine	109-89-7	Liquid	imm			15	>480	>480	>480	>480	>480	>480
140	Ethyl ethanamine, N-	109-89-7	Liquid	imm			15	>480	>480	>480	>480	>480	>480
220	Acetic acid ethyl ester	141-78-6	Liquid	imm			imm	>480	>480	>480	>480	>480	>480
220	Ethyl acetate	141-78-6	Liquid	imm			imm	>480	>480	>480	>480	>480	>480
260	Dichloro methane	75-09-2	Liquid	imm			imm	imm	imm	imm	imm	>480	>480
260	Dichloro methane (10.000 ppm)	75-09-2	Vapor						52	52			
260	Dichloro methane (1000 ppm)	75-09-2	Vapor						>480	>480			
260	Methyl chloride (gaseous)	74-87-3	Vapor	imm			>480	>480	>480	>480	>480	>480	>480
260	Methylene chloride	75-09-2	Liquid	imm			imm	imm	imm	imm	imm	>480	>480
260	Methylene chloride (10.000 ppm)	75-09-2	Vapor						52	52			
260	Methylene chloride (1000 ppm)	75-09-2	Vapor						>480	>480			
260	Ethylene tetrachloride	127-18-4	Liquid	imm			imm	>480	>480	>480	>480	>480	>480
260	Tetrachloro ethylene, 1,1,2,2-	127-18-4	Liquid	imm			imm	>480	>480	>480	>480	>480	>480
270	Epoxy ethane (gaseous)	75-21-8	Vapor	imm			imm	12	126	118	>480	>480	>480
270	Ethylene oxide (gaseous)	75-21-8	Vapor	imm			imm	12	126	118	>480	>480	>480
270	Tetrahydrofuran	109-99-9	Liquid	imm			imm	>480	>480	>480	>480	>480	>480
290	Hexane, n-	110-54-3	Liquid	imm			imm	>480	>480	>480	>480	>480	>480
290	Methyl benzol	108-88-3	Liquid	imm			imm	>480	>480	>480	>480	>480	>480
290	Toluene	108-88-3	Liquid	imm			imm	>480	>480	>480	>480	>480	>480
290	Butadiene, 1,3- (gaseous)	106-99-0	Vapor	imm		imm	>480	>480	>480	>480	>480	>480	>480
290	Vinyl ethylene (gaseous)	106-99-0	Vapor	imm		imm	>480	>480	>480	>480	>480	>480	>480
310	Methanol	67-56-1	Liquid	imm			>480	imm	117	117	117	>480	>480
330	Chlorine (gaseous)	7782-50-5	Vapor	imm			>480	imm	>480	>480	>480	>480	>480
350	Ammonia (gaseous)	7664-41-7	Vapor	imm		imm	26	imm	20	20	90	>480	>480
350	Chlorine (gaseous)	7782-50-5	Vapor	imm			>480	imm	>480	>480	>480	>480	>480
350	Hydrogen chloride (gaseous)	7647-01-0	Vapor	imm			>480	>480	>480	392	>480	>480	>480
370	Hydrogen chloride (gaseous)	7647-01-0	Vapor	imm			>480	>480	>480	392	>480	>480	>480
370	Sulfuric acid (>95%)	7664-93-9	Liquid	>480		>480	>480	>480	>480	>480	50	>480	>480
380	Ammonia (gaseous)	7664-41-7	Vapor	imm		imm	26	imm	20	20	90	>480	>480
390	Acetone	67-64-1	Liquid	imm		imm	13	462	>480	>480	>480	>480	>480
390	Dimethyl ketal	67-64-1	Liquid	imm		imm	13	462	>480	>480	>480	>480	>480
390	Dimethyl ketone	67-64-1	Liquid	imm		imm	13	462	>480	>480	>480	>480	>480
390	Ketone propane	67-64-1	Liquid	imm		imm	13	462	>480	>480	>480	>480	>480
390	Methyl acetyl	67-64-1	Liquid	imm		imm	13	462	>480	>480	>480	>480	>480
390	Methyl ketone	67-64-1	Liquid	imm		imm	13	462	>480	>480	>480	>480	>480
390	Propan -2-one	67-64-1	Liquid	imm		imm	13	462	>480	>480	>480	>480	>480
390	Pyroacetic ether	67-64-1	Liquid	imm		imm	13	462	>480	>480	>480	>480	>480

ASTM F1001 List of Challenge Chemicals (Permeation Test Method ASTM F739)

Sub-class	Chemical Name	CAS Number	Phase	Normalized Breakthrough Time (Minutes)									
				Tychem® 2000	Tyvek® 800	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000
430	Acetonitrile	75-05-8	Liquid	imm		imm	60	imm	131	131	>480	>480	>480
430	Cyanomethane	75-05-8	Liquid	imm		imm	60	imm	131	131	>480	>480	>480
430	Ethane nitrile	75-05-8	Liquid	imm		imm	60	imm	131	131	>480	>480	>480
430	Ethyl nitrile	75-05-8	Liquid	imm		imm	60	imm	131	131	>480	>480	>480
430	Methyl cyanide	75-05-8	Liquid	imm		imm	60	imm	131	131	>480	>480	>480
440	Nitro benzene	98-95-3	Liquid	imm			59	>480	>480	>480	>480	>480	>480
500	Carbon disulfide	75-15-0	Liquid	imm		imm	imm	imm	>480	>480	>480	>480	>480
> = greater than imm. = immediate (<10 minutes) {empty} = not tested L = Liquid G = Gas S = Solid * Actual breakthrough time; normalized breakthrough time is not available. ** Solid tested, vapor phase permeation measured.													

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000	
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR
100																													
102																													
Acetic acid (10%)												64-19-7	Liquid																
Acetic acid (2%)												64-19-7	Liquid																
Acetic acid (30%)												64-19-7	Liquid																
Acetic acid (5%)												64-19-7	Liquid																
Acetic acid (>95%)												64-19-7	Liquid		imm														
Acroleic acid												79-10-7	Liquid		imm														
Acrylic acid												79-10-7	Liquid		imm														
Butyric Acid												107-92-6	Liquid																
Ethyl hexanoic acid												149-57-5	Liquid																
Ethylene carboxylic acid												79-10-7	Liquid		imm														
Formic acid (30%)												64-18-6	Liquid																
Formic acid (50%)												64-18-6	Liquid																
Formic acid (88%)												64-18-6	Liquid																
Formic acid (>95%)												64-18-6	Liquid																
Methacrylic acid												79-41-4	Liquid																
Methyl propenoic acid, 2-												79-41-4	Liquid																
Propanoic acid												79-09-4	Liquid																
Propene acid												79-10-7	Liquid		imm														
103																													
Chloro acetic acid (80%)												79-11-8	Liquid		>480														
Glycolic acid (sat)												79-14-1	Liquid																
Hydroxy acetic acid (sat)												79-14-1	Liquid																
Mercapto acetic acid												68-11-1	Liquid																
Thioglycolic acid												68-11-1	Liquid																
Trichloro acetic acid (sat)												76-03-9	Liquid																
Trifluoro acetic acid												76-05-1	Liquid																
104																													
Citric acid (50%)												77-92-9	Liquid																
Citric acid (sat)												77-92-9	Liquid																
Ethane dioic acid (10.5%)												144-62-7	Liquid																
Ethane dioic acid (sat)												144-62-7	Liquid																
Hydroxy 1,2,3-propanetricarboxylic acid, 2-(50%)												77-92-9	Liquid																
Hydroxy 1,2,3-																													

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																												
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																											
											propanetricarboxylic acid, 2-(sat)	77-92-9	Liquid																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																											

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)											
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM
											Acrolein	107-02-8	Liquid										25*/178	75*/101	75*/101	75*/101	>480	>480
											Acrolein (10 g/m²)	107-02-8	Liquid											>480	>480	>480		
											Acrolein (90%)	107-02-8	Liquid									24						
											Butanal, n-	123-72-8	Liquid	imm								41		>480	>480		>480	>480
											Butenal, 2-	123-73-9	Liquid									34		147	147		>480	>480
											Butyraldehyde, n-	123-72-8	Liquid	imm								41		>480	>480		>480	>480
											Croton aldehyde	123-73-9	Liquid									34		147	147		>480	>480
											Ethane diol dipropanoate, 1,2-	123-73-9	Liquid									34		147	147		>480	>480
											Formaldehyde (10%)	50-00-0	Liquid							imm								
											Formaldehyde (100 ppm)	50-00-0	Vapor														>480	>480
											Formaldehyde (37%)	50-00-0	Liquid									>480	>480	>480	>480	>480		
											Formalin (10%)	50-00-0	Liquid							imm								
											Formalin (100 ppm)	50-00-0	Vapor														>480	>480
											Formalin (3.7%, 1-1.5% Methanol)	50-00-0	Liquid	>480														
											Formalin (37% (10-15% Methanol))	50-00-0	Liquid	imm								>480	>480	>480	>480	>480	>480	>480
											Formalin (37%)	50-00-0	Liquid									>480	>480	>480	>480	>480		
											Glutaral (5%)	111-30-8	Liquid	>480													>480	>480
											Glutaral (50%)	111-30-8	Liquid									>480		170	170	170	>480	>480
											Glutaraldehyde (5%)	111-30-8	Liquid	>480													>480	>480
											Glutaraldehyde (50%)	111-30-8	Liquid									>480		170	170	170	>480	>480
											Methyl acrolein	123-73-9	Liquid									34		147	147		>480	>480
											Pentanedial, 1,5- (5%)	111-30-8	Liquid	>480													>480	>480
											Pentanedial, 1,5- (50%)	111-30-8	Liquid									>480		170	170	170	>480	>480
											Prop-2-en-1-al	107-02-8	Liquid										25*/178	75*/101	75*/101	75*/101	>480	>480
											Prop-2-en-1-al (10 g/m²)	107-02-8	Liquid											>480	>480	>480		

Chemical Permeation Data Tables

C l a s s	S u b - C l a s s	Chemical Name	CAS	P h a s e	Breakthrough Time (Minutes)												Tychem® RESPONDER® CSM	Tychem® 10000
					Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR			
		Prop-2-en-1-al (90%)	107-02-8	Liquid							24							
		Propylene aldehyde	123-73-9	Liquid							34		147	147		>480	>480	
122																		
		Benzaldehyde	100-52-7	Liquid								>480	>480					
130																		
132																		
		Cyanamide (50%)	420-04-2	Liquid								nm	nm					
		Dimethyl acetamide, N,N-	127-19-5	Liquid						imm	96	>480	>480	>480	>480	>480	>480	
		Dimethyl acetamide, N,N- (8%)	127-19-5	Liquid	>480					>480								
		Dimethyl formamide, N,N-	68-12-2	Liquid	imm						90	>480	>480	>480	>480	>480	>480	
		Methyl 2-pyrrolidon, N-	872-50-4	Liquid							101		>480	>480	>480	>480	>480	
		Methyl formamide, N-	123-39-7	Liquid								>480	>480	>480	>480			
135																		
		Acrylamide (50%)	79-06-1	Liquid							>480		>480	>480	>480	>480		>480
		Acrylicamide (50%)	79-06-1	Liquid							>480		>480	>480	>480	>480		>480
		Propenamide (50%)	79-06-1	Liquid							>480		>480	>480	>480	>480	>480	
140																		
141																		
		Amino ethanol, 2-	141-43-5	Liquid								>480	>480	>480	>480	>480	>480	
		Amino ethylpiperazine	140-31-8	Liquid							>480	>480	>480	>480	>480	>480	>480	
		Amino propane, 2-	75-31-0	Liquid								15	>480	>480	>480	>480	>480	
		Butyl amine	109-73-9	Liquid								>480	200	200	200	>480	>480	
		Diisopropylethylamine (DIPEA)	7087-68-5	Liquid								>480			>480			
		Ethanol amine	141-43-5	Liquid								>480	>480	>480	>480	>480	>480	
		Ethyl amine (15 °C, liquid)	75-04-7	Liquid												361	>480	
		Isopropyl amine	75-31-0	Liquid								15	>480	>480	>480	>480	>480	
		Methyl amine (40%)	74-89-5	Liquid								140				261	261	
		Methyl amine (50%)	74-89-5	Liquid												232	232	
		Methyl amine (gaseous)	74-89-5	Vapor									>480	>480	>480	105	>480	

Chemical Permeation Data Tables

C	l	a	s	S ub - C l a s s		Chemical Name	CAS	P h a s e	Breakthrough Time (Minutes)											Tychem® RESPONDER® CSM	Tychem® 10000	
									Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR			
						Propyl amine, n-	107-10-8	Liquid							100	16*/21	16*/21	16*/21				
						Tetraethylene pentamine	112-57-2	Liquid							>480	>480	>480	>480	>480	>480	>480	>480
						Triethylenetetramine (60%)	112-24-3	Liquid							>480	>480	>480	>480	>480	>480	>480	>480
142																						
					Amino ethylethanolamine	111-41-1	Liquid						imm	>480	>480	>480	>480	>480				
					Amino ethylethanolamine (60%)	111-41-1	Liquid						>480	>480	>480	>480	>480	>480				
					Diethanolamine	111-42-2	Liquid						>480				>480					
					Diethyl amine	109-89-7	Liquid	imm					15	>480	>480	>480	>480	>480				
					Dimethyl amine	124-40-3	Vapor							>480	>480	>480	>480					
					Ethyl ethanamine, N-	109-89-7	Liquid	imm					15	>480	>480	>480	>480	>480	>480			
143																						
					Amino 2-methylpropane, 2-	75-64-9	Liquid										>480					
					Butyl amine, tert-	75-64-9	Liquid										>480					
					Diethyl ethanamine, N,N-	121-44-8	Liquid						12*/22		>480	>480	>480	>480				
					Tributyl amine (95%)	102-82-9	Liquid							>480	>480	>480	>480					
					Triethyl amine	121-44-8	Liquid						12*/22		>480	>480	>480	>480				
					Trimethyl amine	75-50-3	Vapor											>480				
					Trimethyl aminomethane	75-64-9	Liquid										>480	>480				
					Tripropyl amine	102-69-2	Liquid										>480	>480				
145																						
					Amino 3,4-dichlorobenzene, 1-	95-76-1	Solid										>480					
					Amino 3,4-dichlorobenzene, 1- (70 °C, molten)	95-76-1	Liquid						imm					216*/284				
					Amino benzene	62-53-3	Liquid	imm					>480	320	>480	>480	>480	>480				
					Amino diphenyl, 4- (1 mg/ml in Methanol)	92-67-1	Liquid						>480	>480	>480	>480	>480	>480				
					Anilin, 4-Trifluoromethoxy-	461-82-5	Liquid								>480	>480	>480					
					Aniline	62-53-3	Liquid	imm					>480	320	>480	>480	>480	>480				
					Benzenamine	62-53-3	Liquid	imm					>480	320	>480	>480	>480	>480				

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000			
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR		
											Benzidine (25% in Methanol)	92-87-5	Liquid																>480	>480	
											Benzidine (75% in Methanol)	92-87-5	Liquid																	>480	>480
											Biphenyl 4,4'-diamine, 1,1'- (25% in Methanol)	92-87-5	Liquid																>480	>480	
											Biphenyl 4,4'-diamine, 1,1'- (75% in Methanol)	92-87-5	Liquid																	>480	>480
											Chloro aniline, p-	106-47-8	Solid																>480	>480	
											Chloro aniline, p- (70 °C, molten)	106-47-8	Liquid							imm			imm	imm	imm				272*/323	272*/323	
											Chloro benzenamine, 4-	106-47-8	Solid																>480	>480	
											Chloro benzenamine, 4- (70 °C, molten)	106-47-8	Liquid							imm			imm	imm	imm				272*/323	272*/323	
											Diaminobiphenyl, 4,4'- (25% in Methanol)	92-87-5	Liquid																>480	>480	
											Diaminobiphenyl, 4,4'- (75% in Methanol)	92-87-5	Liquid																	>480	>480
											Diaminodiphenyl, p- (25% in Methanol)	92-87-5	Liquid																>480	>480	
											Diaminodiphenyl, p- (75% in Methanol)	92-87-5	Liquid																	>480	>480
											Diaminodiphenylmethane, 4,4'-	101-77-9	Liquid																	>480	>480
											Diaminodiphenylmethane, 4,4'- (15% in Methyl Ethyl Ketone)	101-77-9	Liquid																>480	>480	
											Dichloro aniline, 3,4-	95-76-1	Solid																	>480	>480
											Dichloro aniline, 3,4- (70 °C, molten)	95-76-1	Liquid							imm									216*/284	216*/284	
											Diethyl m-toluidine, N,N-	91-67-8	Liquid							>480									>480	>480	
											Methyl aniline, o-	95-53-4	Liquid							>480		>480	>480	>480	>480				>480	>480	
											Methylene dianiline	101-77-9	Liquid																	>480	>480
											Methylene dianiline (15% in Methyl Ethyl Ketone)	101-77-9	Liquid																>480	>480	
											Phenyl amine	62-53-3	Liquid	imm						>480	320	>480	>480	>480	>480	>480	>480	>480	>480	>480	
											Toluidine, m-	108-44-1	Liquid							>480									>480	>480	
											Toluidine, o-	95-53-4	Liquid							>480		>480	>480	>480	>480	>480	>480	>480	>480	>480	
										Xylidine, 2,4-	95-68-1	Liquid										>480	>480								
146																															
											Benzyl methylamine, N-	103-67-3	Liquid									>480	>480	>480							

Chemical Permeation Data Tables

C l a s s	S u b - C l a s s	Chemical Name	CAS	P h a s e	Breakthrough Time (Minutes)												
					Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000
		Diethyl aniline crude	91-66-7	Liquid							>480					>480	
		Diethyl aniline, N,N-	91-66-7	Liquid								>480					>480
		Dimethyl aniline, N,N-	121-69-7	Liquid								imm	>480	>480	>480	>480	>480
		Dimethyl phenylamine, N,N-	121-69-7	Liquid								imm	>480	>480	>480	>480	>480
		Methyl benzylamine, N-	103-67-3	Liquid									>480	>480	>480		
148																	
	Amino ethylethanolamine	111-41-1	Liquid								imm	>480	>480	>480	>480	>480	
	Amino ethylethanolamine (60%)	111-41-1	Liquid								>480	>480	>480	>480	>480	>480	
	Amino ethylpiperazine	140-31-8	Liquid								>480	>480	>480	>480	>480	>480	
	Diaminoethane, 1,2-	107-15-3	Liquid	>480							>480	>480	>480	>480	>480	>480	
	Diethylene triamine	111-40-0	Liquid								imm*/321	>480	>480	>480	>480	>480	
	Dytek® A	15520-10-2	Liquid									>480	>480	>480	>480		
	Ethylene diamine	107-15-3	Liquid	>480							>480	>480	>480	>480	>480	>480	
	Hexamethylene diamine (45 °C, molten)	124-09-4	Liquid										>480	>480	>480	>480	
	Hexamethylene diamine (50 °C, molten)	124-09-4	Liquid								80	45				80	
	Methylen Isocyclohexylamine, 4,4- (40 °C)	1761-71-3	Liquid										>480	>480			
	Methylen Isocyclohexylamine, 4,4- (50 °C, molten)	1761-71-3	Liquid								>480						
	Tetraethylene pentamine	112-57-2	Liquid								>480	>480	>480	>480	>480	>480	
	Tetramethylethylene diamine (TMEDA)	110-18-9	Liquid									>480			>480		
	Tributyl amine (95%)	102-82-9	Liquid									>480	>480	>480	>480		
	Triethylenetetramine (60%)	112-24-3	Liquid								>480	>480	>480	>480	>480	>480	
149																	
	Benzidine (25% in Methanol)	92-87-5	Liquid													>480	
	Benzidine (75% in Methanol)	92-87-5	Liquid														
	Biphenyl 4,4'-diamine, 1,1'- (25% in Methanol)	92-87-5	Liquid													>480	

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)													
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000	
											Biphenyl 4,4'-diamine, 1,1'- (75% in Methanol)	92-87-5	Liquid																>480	
											Diaminobiphenyl, 4,4'- (25% in Methanol)	92-87-5	Liquid															>480	>480	
											Diaminobiphenyl, 4,4'- (75% in Methanol)	92-87-5	Liquid																>480	
											Diaminodiphenyl, p- (25% in Methanol)	92-87-5	Liquid															>480	>480	
											Diaminodiphenyl, p- (75% in Methanol)	92-87-5	Liquid																>480	
											Diaminodiphenylmethane, 4,4'-	101-77-9	Liquid																>480	
											Diaminodiphenylmethane, 4,4'- (15% in Methyl Ethyl Ketone)	101-77-9	Liquid															>480	>480	
											Dichloro -4,4'-methylenedianiline, 2,2'- (sat in Methanol)	101-14-4	Liquid								>480							>480	>480	
											Methylene bis(2-Chloroaniline), 4,4- (sat in Methanol)	101-14-4	Liquid								>480							>480	>480	
											Methylene dianiline	101-77-9	Liquid																>480	
											Methylene dianiline (15% in Methyl Ethyl Ketone)	101-77-9	Liquid															>480	>480	
150																														
150																														
Butanone oxime, 2-	96-29-7	Liquid									>480			>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480			
Methyl ethyl ketoxime	96-29-7	Liquid									>480			>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480			
Tetraethyl ammonium hydroxide (35%)	77-98-5	Liquid									>480										>480									
160																														
161																														
Acetic anhydride	108-24-7	Liquid									12*/48	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480			
Maleic anhydride (66 °C, molten)	108-31-6	Liquid									13			22	22															
210																														
211																														
Cyclo hexyl isocanyte	3173-53-3	Liquid									36*/54										36*/54									
Hexamethylene diisocyanate	822-06-0	Liquid	>480								>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480			
Methyl isocyanate	624-83-9	Liquid									imm	12	imm	imm	imm	imm		>480	>480	>480	>480	>480	>480	>480	>480	>480	>480			
212																														

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000															
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR																
220											Diphenyl methane diisocyanate, 4,4'-	101-68-8	Solid																>480	>480													
											Diphenyl methane diisocyanate, 4,4'- (50 °C, molten)	101-68-8					>480							>480	>480	>480	>480	>480	>480	>480	>480												
											Methylene diphenyl diisocyanate, 4,4'-	101-68-8																	>480	>480													
											Methylene diphenyl diisocyanate, 4,4'- (50 °C, molten)	101-68-8					>480							>480	>480	>480	>480	>480	>480	>480	>480												
											Paraphenylene diisocyanate (PPDI) crude	104-49-4																	>480	>480													
											Polymethylene polyphenylene isocyanate (p-MDI)	9016-87-9					>480							>480	>480	>480	>480	>480	>480	>480	>480												
											Toluene diisocyanate, 1,3-	26471-62-5																	>480	>480													
											Toluene diisocyanate, 2,4-	584-84-9					imm							>480	>480	>480	>480	>480	>480	>480	>480												
											Toluene diisocyanate, 2,4- (80%)	584-84-9					60							>480	>480	>480	>480	>480	>480	>480	>480												
220																																											
220																																											
221											Dimethylmalonate	108-59-8	Vapor														>480	>480															
											Butylchloroformate	592-34-7														>480	>480																
											Diphosgene	503-38-8														>480	>480																
											Ethylchloroformate	541-41-3														>480	>480																
											Hexyl chloro formate, 2-	6092-54-2														>480	>480																
											Octyl chlor formiate	7452-59-7														>480	>480																
											Phenyl chlor formiate	1885-14-9														>480	>480																
											Propylchloroformate	109-61-5														>480	>480																
222																																											
											Acetic acid ethenyl ester	108-05-4	Liquid											24	>480	>480	>480	>480	>480	>480													
											Acetic acid ethyl ester	141-78-6					imm							imm	>480	>480	>480	>480	>480	>480													
											Acetic acid pentyl ester	628-63-7													>480	>480	>480	>480	>480	>480													

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																														
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																													
											Amyl acetate, n-	628-63-7	Liquid																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																													

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																									
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																								
											Dimethyl maleate	6	Liquid																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																								

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																					
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																				
											Acetic acid 2 ethoxy ethyl ester	9	Liquid																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																				

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																															
											Propylchloroformate	5	Liquid																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																															</

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)												
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000
											Epichlorohydrin	106-89-8	Liquid										15	36*/67	395	395	395	>480	>480
											Ethane trichloride	79-00-5	Liquid												164*/232	164*/232	164*/232	>480	>480
											Ethyl chloride	75-00-3	Vapor																>480
											Ethylene chlorohydrin	107-07-3	Liquid	imm										>480	>480	>480	>480	>480	>480
											Ethylene dibromide	106-93-4	Liquid										>480	144*/288	144*/288	144*/288	>480	>480	
											Ethylene dichloride	107-06-2	Liquid									imm	>480	93	93	93	>480	>480	
											Glycol chlorohydrin	107-07-3	Liquid	imm									>480	>480	>480	>480	>480	>480	
											Hexachloro cyclohexane, 1,2,3,4,5,6- (sat in Acetone)	58-89-9	Liquid														>480	>480	
											Hexachloro cyclohexane, 1,2,3,4,5,6- (sat in Methanol)	58-89-9	Liquid															>480	
											Hexafluoro ethane	76-16-4	Vapor														>480	>480	
											Hexafluoro isobutylene	382-10-5	Vapor														>480	>480	
											Iodomethane	74-88-4	Liquid									imm		296	296	296	>480	>480	
											Lindane (sat in Acetone)	58-89-9	Liquid														>480	>480	
											Lindane (sat in Methanol)	58-89-9	Liquid															>480	
											Methyl bromide	74-83-9	Vapor									>480					>480	>480	
											Methyl chloride (-70 °C, liquid)	74-87-3	Liquid															>180	
											Methyl chloride (gaseous)	74-87-3	Vapor	imm								>480	>480	>480	>480	>480	>480	>480	
											Methyl chloroform	71-55-6	Liquid									>480			>480	>480	>480	>480	
											Methyl fluoride	593-53-3	Vapor														>480	>480	
											Methyl iodide	74-88-4	Liquid									imm		296	296	296	>480	>480	
											Methyl trichloromethane	71-55-6	Liquid										>480			>480	>480	>480	
											Methylene bromide	74-95-3	Liquid										40	imm	imm	imm			
											Methylene chloride	75-09-2	Liquid	imm								imm	imm	imm	imm	imm	>480	>480	
											Methylene chloride (10.000 ppm)	75-09-2	Vapor											52	52				
											Methylene chloride (1000 ppm)	75-09-2	Vapor											>480	>480				
											Nitro chlormethan	76-06-2	Liquid											>480	>480	>480			
											Norflurane	811-97-2	Vapor									>480	>480	>480	>480		>480	>480	
											Perfluoro 2-propoxy propionyl fluoride	2062-98-8	Liquid														>480	>480	
											Perfluoroethane	76-16-4	Vapor														>480	>480	
												106-94-																	

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000					
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR				
											Propyl bromide, n-	5	Liquid								12	>480	>480	>480			12						
											Propylene dichloride	78-87-5	Liquid														>480	>480					
											Tetrachloro ethane, 1,1,2,2,-	79-34-5	Liquid							25	>480	>480	>480	>480		>480	>480						
											Tetrachloro methane	56-23-5	Liquid								>480	imm*/11	imm*/11	imm*/11		>480	>480						
											Tetrachloro methane (1000 ppm)	56-23-5	Vapor									>480	>480										
											Tetrafluoroethane, 1,1,1,2-	811-97-2	Vapor							>480	>480	>480	>480			>480	>480						
											Tetrafluoromethane	75-73-0	Vapor													>480	>480						
											Trichloro 1,2,2-trifluoroethane, 1,1,2-	76-13-1	Liquid							>480						>480	>480						
											Trichloro acetone, 1,1,3- (87.7%)	921-03-9	Liquid									467*/476	467*/476	467*/476									
											Trichloro ethane, 1,1,1-	71-55-6	Liquid								>480				>480	>480	>480	>480					
											Trichloro ethane, 1,1,2-	79-00-5	Liquid									164*/232	164*/232	164*/232		>480	>480						
											Trichloro methane	67-66-3	Liquid	imm						imm	imm	imm	imm	imm		>480	>480						
											Trichloro methane (1000 ppm)	67-66-3	Vapor									>480	>480										
											Trifluoro 2-(trifluoromethyl) propene, 3,3,3-	382-10-5	Vapor													>480	>480						
											Trifluoro acetic acid	76-05-1	Liquid							>480		>480	>480	>480		>480	>480						
										Trifluoro methane	75-46-7	Vapor													>480	>480							
263																																	
											Amino 3,4-dichlorobenzene, 1-	95-76-1	Solid													>480	>480						
											Amino 3,4-dichlorobenzene, 1- (70 °C, molten)	95-76-1	Liquid							imm							216*/284	216*/284					
											Benzo trichloride	98-07-7	Liquid								>480												
											Bromo 4-fluorobenzene, 1-	460-00-4	Liquid								>480	>480	>480	>480		>480	>480						
											Bromo fluorobenzene, 4-	460-00-4	Liquid								>480	>480	>480	>480		>480	>480						
											Chloro 1-methylbenzene, 2-	95-49-8	Liquid							13	>480	>480	>480	>480		>480	>480						
											Chloro 2-nitrobenzene, 1-	88-73-3	Solid	15																			
											Chloro 2-nitrobenzene, 1- (35-40 °C, molten)	88-73-3	Liquid									>480	>480	>480									
											Chloro benzene	108-90-7	Liquid								63	>480	>480	>480		>480	>480						
											Chloro benzotrichloride, 4-	5216-25-1	Liquid								>480												
											Chloro benzotrifluoride, 4-	98-56-6	Liquid								460												
											Chloro phenol, p- (sat in Methanol)	106-48-9	Liquid													>480	>480						
											Chloro toluene, o-	95-49-8	Liquid							13	>480	>480	>480	>480	>480		>480	>480					

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000				
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR			
											Cyanide chloride (20% in Toluene)	108-77-0	Liquid																	>480	>480	
											Dichlorbenzen, 1,2-	95-50-1	Liquid											76	>480	>480	>480			>480	>480	
											Dichlorbenzen, 1,3-	541-73-1	Liquid											45	>480	>480	>480	>480		>480	>480	
											Dichlorbenzen, 1,4- (50% in Ethanol)	106-46-7	Liquid											>480	131	>480	>480			>480	>480	
											Dichloro aniline, 3,4-	95-76-1	Solid																	>480	>480	
											Dichloro aniline, 3,4- (70 °C, molten)	95-76-1	Liquid											imm						216*/284	216*/284	
											Fluorobenzene	462-06-6	Liquid											imm	>480	>480	>480	>480		>480	>480	
											Hydroxy chlorobenzene (sat in Methanol)	106-48-9	Liquid																	>480	>480	
											Nitro chlorobenzene, p-	100-00-5	Solid		imm																	
											PCB (50% in Trichlorbenzene)	mix	Liquid																	>480	>480	
											PCB 1254 (50% in Mineral Oil)	11097-69-1	Liquid											>480						>480		
											PCB 1254 (90%)	11097-69-1	Liquid											>480								
											PCB in transformer oil (mix)	mix	Liquid												>480	>480	>480	>480				
											Phenyl chloride	108-90-7	Liquid												63	>480	>480	>480	>480		>480	>480
											Tetrachloro bisphenol-A, 2,2', 6,6'-	79-95-8	Solid													>480	>480	>480				
											Trichloro 1,3,5-triazine, 2,4,6- (20% in Toluene)	108-77-0	Liquid																	>480	>480	
											Trichloro benzene, 1,2,4-	120-82-1	Liquid		imm										87	>480	>480	>480	>480	>480	>480	>480
264																																
											Chloro acrylonitrile, 2-	920-37-6	Liquid													146	>480	>480	>480	>480		
											Chloro ethene	75-01-4	Vapor											>480	>480	>480	>480	>480	>480	>480	>480	>480
											Dichloro ethylene, 1,1-	75-35-4	Liquid													170	>480	>480	>480	>480	>480	>480
											Ethylene tetrachloride	127-18-4	Liquid		imm									imm	>480	>480	>480	>480	>480	>480	>480	>480
											Ethylene trichloride	79-01-6	Liquid											imm	>480	>480	>480	>480	>480	>480	>480	>480
											Hexachloro butadiene	87-68-3	Liquid																		>480	>480
											Tetrachloro ethylene, 1,1,2,2-	127-18-4	Liquid		imm									imm	>480	>480	>480	>480	>480	>480	>480	>480
											Trichloro ethylene	79-01-6	Liquid											imm	>480	>480	>480	>480	>480	>480	>480	>480
											Vinyl chloride	75-01-4	Vapor											>480	>480	>480	>480	>480	>480	>480	>480	>480

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR
											Vinylidene chloride	75-35-4	Liquid									170	>480	>480	>480	>480	>480
265																											
											Allyl chloride	107-05-1	Liquid								12	381*/447	381*/447	381*/447	>480	>480	
											Chlor allylene	107-05-1	Liquid								12	381*/447	381*/447	381*/447	>480	>480	
											Chloro prene, 3-	107-05-1	Liquid								12	381*/447	381*/447	381*/447	>480	>480	
266																											
											Benzyl chloride	100-44-7	Liquid								>480	>480	>480	>480	>480	>480	
											Chloro toluene, alpha-	100-44-7	Liquid								>480	>480	>480	>480	>480	>480	
270																											
270																											
											2-Methyl-4-isothiazolin-3-one (20%)	2682-20-4	Liquid	>480						>480		>480	>480				
											Benzisothiazol, 1,2- (20%)	2634-33-5	Liquid	>480						>480		>480	>480				
271																											
											Amino pyridine, 2- (sat)	504-29-0	Liquid							>480					>480		
											Methyl pyridine, 2-	109-06-8	Liquid							>480	>480	>480	>480	>480	>480	>480	
											Methyl pyridine, 3-	108-99-6	Liquid							>480	>480	>480	>480	>480	>480	>480	
											Nicotine	54-11-5	Liquid							>480	>480	>480	>480	>480	>480	>480	
											Nicotine (9 mg/ml)	54-11-5	Liquid		>480	>480											
											Picoline, 2-	109-06-8	Liquid							>480	>480	>480	>480	>480	>480	>480	
											Picoline, 3-	108-99-6	Liquid							>480	>480	>480	>480	>480	>480	>480	
											Pyridene, 2-fluoro-6-(trifluoromethyl)	94239-04-0	Liquid							>480	>480	>480					
											Pyridine	110-86-1	Liquid						31	>480	>480	>480	>480	>480	>480	>480	
											Vinyl pyridine, 4-	100-43-6	Liquid						15					15			
274																											
											2-Methyl-4-isothiazolin-3-one (20%)	2682-20-4	Liquid	>480					>480		>480	>480					
											Amino ethylpiperazine	140-31-8	Liquid						>480	>480	>480	>480	>480	>480	>480	>480	

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)												
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000
											Aziridine	151-56-4	Liquid															59	>480
											Azolidine	123-75-1	Liquid								342	45*/100	45*/100	45*/100			413	413	
											Benzisothiazol, 1,2- (20%)	2634-33-5	Liquid	>480						>480		>480	>480						
											Cyanide chloride (20% in Toluene)	108-77-0	Liquid														>480	>480	
											Dichloro -6-isopropyl-S-triazine, 2,4- (22% in Toluene)	30894-74-7	Liquid													>480	>480		
											Diethylene imide oxide	110-91-8	Liquid							158							>480	>480	
											Ethylene imine	151-56-4	Liquid														59	>480	
											Methyl imidazole, 1-	616-47-7	Liquid									>480	>480						
											Morpholine	110-91-8	Liquid							158							>480	>480	
											N-Methylmorpholine (NMM)	109-02-4	Liquid								>480			>480					
											Propylene imine (90%)	75-55-8	Liquid														150	150	
											Pyrrolidine	123-75-1	Liquid								342	45*/100	45*/100	45*/100			413	413	
											Thiazol, 1,3-	288-47-1	Liquid									>480	>480						
											Trichloro 1,3,5-triazine, 2,4,6- (20% in Toluene)	108-77-0	Liquid													>480	>480		
275																												>480	
											Bis (4-(2,3-epoxypropoxy)phenyl) propane	1675-54-3	Liquid								>480	>480	>480			>480	>480		
											Bis (4-(2,3-epoxypropoxy)phenyl) propane (80%)	1675-54-3	Liquid							>480									
											Bis phenol A diglycidyl ether	1675-54-3	Liquid									>480	>480	>480		>480	>480		
											Bis phenol A diglycidyl ether (80%)	1675-54-3	Liquid							>480									
											Chloro 2,3-epoxy propane, 1-	106-89-8	Liquid							15	36*/67	395	395	395		>480	>480		
											Epichlorohydrin	106-89-8	Liquid							15	36*/67	395	395	395		>480	>480		
											Epoxy ethane (-70 °C, liquid)	75-21-8	Liquid																>180
											Epoxy ethane (0 °C, liquid)	75-21-8	Liquid													>480	>480		
											Epoxy ethane (10% in HCFC)	75-21-8	Vapor															>480	
											Epoxy ethane (11 °C, liquid)	75-21-8	Liquid								18								

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)																		
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000						
																	Epoxy ethane (gaseous)	75-21-8	Vapor	imm							imm	12	126	118	>480	>480	>480		
																	Epoxy propane, 1,2-	75-56-9	Liquid											47	43	43	13*/20	>480	>480
																	Ethylene oxide (-70 °C, liquid)	75-21-8	Liquid																>180
																	Ethylene oxide (0 °C, liquid)	75-21-8	Liquid															>480	>480
																	Ethylene oxide (10% in HCFC)	75-21-8	Vapor																>480
																	Ethylene oxide (11 °C, liquid)	75-21-8	Liquid										18						
																	Ethylene oxide (gaseous)	75-21-8	Vapor	imm							imm	12	126	118	>480	>480	>480	>480	>480
																	Isopropylidenediphenol diglycidyl ether, 4,4'-	1675-54-3	Liquid										>480	>480	>480	>480	>480	>480	>480
																	Isopropylidenediphenol diglycidyl ether, 4,4'- (80%)	1675-54-3	Liquid								>480								
																	Phenyl glycidyl ether	122-60-1	Liquid								>480						>480		
																	Propylene oxide, 1,2-	75-56-9	Liquid									47	43	43	13*/20	>480		>480	
277																																			
																	Furaldehyde, 2-	98-01-1	Liquid							198*/227	>480	>480	>480	>480	>480	>480			
																	Furan	110-00-9	Liquid											97	97				
																	Furfural	98-01-1	Liquid									198*/227	>480	>480	>480	>480	>480	>480	>480
																	Tetrahydrofuran	109-99-9	Liquid	imm								imm	>480	>480	>480	>480	>480	>480	>480
278																																			
																	Diethylene imide oxide	110-91-8	Liquid							158					>480	>480			
																	Diketene Acetone (95%)	5394-63-8	Liquid											>480	>480				
																	Dioxane, 1,4-	123-91-1	Liquid										>480	>480	>480	>480	>480	>480	
																	Morpholine	110-91-8	Liquid								158						>480	>480	
																	N-Methylmorpholine (NMM)	109-02-4	Liquid										>480			>480			
280																																			
280																																			
																	Dimethyl hydrazine, N,N-	57-14-7	Liquid							13					>480 ⁸	>480 ⁸			
																	Hydrazine	302-01-2	Liquid										>480		283	283	283	>480	>480
																	Hydrazine hydrate (51%)	10217-52-4	Liquid																>480
																	Hydrazine hydrate (85%)	10217-52-4	Liquid														440	440	
																	Methyl hydrazine	60-34-4	Liquid											183*/283	183*/283	183*/283	>480	>480	

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																															
290																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																												
290																																>480																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																												
Diesel Fuel Grade D-2												mix	Liquid																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																															

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																															
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																														
											White spirit	mix	Liquid																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																														

Chemical Permeation Data Tables

[illegible]

Chemical Permeation Data Tables

C	l	a	s	S	u	b	-	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																						
																		Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																										
												Amino ethylethanolamine (60%)	1	Liquid																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																										

Chemical Permeation Data Tables

C	S	Sub - C	Classes	Chemical Name	CAS	Phase	Breakthrough Time (Minutes)													
							Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000	
				Isopropanol (70%)	67-63-0	Liquid	imm				imm			>480				>480		
				Isopropyl alcohol	67-63-0	Liquid	imm					imm		>480	>480	>480	>480	>480	>480	>480
				Isopropyl alcohol (70%)	67-63-0	Liquid	imm					imm		>480				>480		
				Methyl butan-1-ol, 3-	123-51-3	Liquid							>480						>480	
				Propan -2-ol	67-63-0	Liquid	imm					imm		>480	>480	>480	>480	>480	>480	>480
				Propan -2-ol (70%)	67-63-0	Liquid	imm					imm		>480				>480		
313																				
				2-Methyl-2-Butanol	75-85-4	Liquid								>480	>480					
				Acetone cyanohydrin	75-86-5	Liquid								>480	>480	>480	>480	>480	>480	
				Amyl alcohol, tert-	75-85-4	Liquid								>480	>480					
				Butanol, tert-	75-65-0	Liquid								37*/205	37*/205	37*/205				
				Cyanopropan-2-ol, 2-	75-86-5	Liquid								>480	>480	>480	>480	>480	>480	
				Hydroxy 2-methylpropionitrile, 2-	75-86-5	Liquid								>480	>480	>480	>480	>480	>480	
				Hydroxy isobutyronitrile	75-86-5	Liquid								>480	>480	>480	>480	>480	>480	
				Methyl propan-2-ol, 2-	75-65-0	Liquid								37*/205	37*/205	37*/205				
				Pentanol, tert-	75-85-4	Liquid								>480	>480					
314																				
				Chloro 1,2-propanediol, 3-	96-24-2	Liquid												>480	>480	
				Ethane 1,2-diol	107-21-1	Liquid	>480	imm	imm	imm			>480		>480	>480	>480	>480	>480	
				Ethylene glycol	107-21-1	Liquid	>480	imm	imm	imm			>480		>480	>480	>480	>480	>480	
				Glycerine	56-81-5	Liquid		>480	>480											
				Glycerol	56-81-5	Liquid		>480	>480											
				Glycol alcohol	107-21-1	Liquid	>480	imm	imm	imm		>480		>480	>480	>480	>480	>480	>480	
				Propane -1,2,3-triol	56-81-5	Liquid		>480	>480											
315																				
				Chloro ethanol, 2-	107-07-3	Liquid	imm						>480	>480	>480	>480	>480	>480	>480	
				Ethylene chlorohydrin	107-07-3	Liquid	imm						>480	>480	>480	>480	>480	>480	>480	
				Glycol chlorohydrin	107-07-3	Liquid	imm						>480	>480	>480	>480	>480	>480	>480	
				Trichloro ethanol, 2,2,2-	115-20-8	Liquid						>480	>480	>480	>480	>480	>480	>480	>480	
				Trifluoro ethanol, 2,2,2-	75-89-8	Liquid	imm											>480	>480	
316																				
				Chloro 1-methylbenzene, 2-	95-49-8	Liquid						13	>480	>480	>480	>480	>480	>480	>480	

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	e	Breakthrough Time (Minutes)														
																		Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000		
											Chloro phenol, p- (sat in Methanol)	106-48-9	Liquid																	>480	>480	
											Chloro toluene, o-	95-49-8	Liquid																	>480	>480	
											Creosote	8001-58-9	Liquid																	>480	>480	
											Cresol o-	95-48-7	Liquid		13															>480		
											Cresols, mixed isomers	1319-77-3	Liquid		71															>480	>480	
											Cresylic acid	1319-77-3	Liquid		71															>480	>480	
											Dinitro-o-cresol, 4,6- (sat in Methanol)	534-52-1	Liquid																	>480	>480	
											Dinitrocresol (sat in Methanol)	534-52-1	Liquid																	>480	>480	
											Hydroxy 2-nitrobenzene, 1- (70 °C, molten)	88-75-5	Liquid																	208	208	
											Hydroxy chlorobenzene (sat in Methanol)	106-48-9	Liquid																	>480	>480	
											Hydroxy toluene, o-	95-48-7	Liquid		13															>480		
											Methyl phenols	1319-77-3	Liquid		71															>480	>480	
											Nitro phenol, o- (70 °C, molten)	88-75-5	Liquid																	208	208	
											Pentachlorophenol (sat in Methanol)	87-86-5	Liquid																	>480	>480	
											Phenol (45 °C, molten)	108-95-2	Liquid																	101	>480	
											Phenol (60 °C, molten)	108-95-2	Liquid																	121	125	
											Phenol (85% at 45 °C)	108-95-2	Liquid																	149	>480	
											Phenol (85%)	108-95-2	Liquid																	11	>480	>480
											Tetrachloro bisphenol-A, 2,2', 6,6'-	79-95-8	Solid																	>480	>480	>480
											m-Cresol 55%, p-Cresol 30%, Phenol 15% (mix)		mix	Liquid																>480	>480	
	318																															
											Phenethyl alcohol, 2-	60-12-8	Liquid																			
											Phenyl ethanol, 1-	98-85-1	Liquid																	>480	>480	
330																																
330																																
											Bromine	7726-95-6	Liquid		imm															imm	15	

C	l	a	s	S ub - C l a s s		CAS	P h a s e	Breakthrough Time (Minutes)									Tychem® RESPONDER® CSM	Tychem® 10000
								Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000		
	Bromine (10 g/m²)	7726-95-6	Liquid													>480		
	Bromine (sat vapour)	7726-95-6	Vapor													30*/40		
	Chlorine (-70 °C, liquid)	7782-50-5	Liquid								>480				441	>480		
	Chlorine (20 ppm)	7782-50-5	Vapor	>480 ⁸														
	Chlorine (gaseous)	7782-50-5	Vapor	imm					>480	imm	>480	>480	>480	>480	>480	>480		
	Iodine	7553-56-2	Solid						>480									
	Mercury	7439-97-6	Liquid	>480						>480	>480	>480	>480	>480	>480	>480		
340																		
340																		
Ammonium bifluoride (sat)	1341-49-7	Liquid									>480	>480	>480					
Ammonium chloride (sat)	12125-02-9	Liquid								>480								
Ammonium fluoride (40%)	12125-01-8	Liquid									>480	>480		>480	>480			
Ammonium hydrogendifluoride (sat)	1341-49-7	Liquid									>480	>480	>480					
Arsenic (III) chloride	7784-34-1	Liquid									32*/38	32*/38	32*/38					
Arsenic trichloride	7784-34-1	Liquid									32*/38	32*/38	32*/38					
Calomel (sat)	10112-91-1	Liquid									>480	>480	>480					
Disodium sulfide (60% (slurry))	1313-82-2	Liquid	>480						>480	>480				>480	>480			
Ferric (II) chloride (sat)	7758-94-3	Liquid									>480	>480		>480				
Ferric (III) chloride (40%)	7705-08-0	Liquid									>480	>480						
Ferric (III) chloride (50%)	7705-08-0	Liquid							>480					>480				
Lithium chloride (20%)	7447-41-8	Liquid	>480															
Mercuric I chloride (sat)	10112-91-1	Liquid									>480	>480	>480					
Mercuric II chloride (sat)	7487-94-7	Liquid							>480					>480 ⁸	>480 ⁸			

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P h a s e	Breakthrough Time (Minutes)												Tychem® RESPONDER® CSM	Tychem® 10000																																																																																																																																																																																																																																																																																																																																																																																																																																																												
														Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR																																																																																																																																																																																																																																																																																																																																																																																																																																																															
											Potassium acetate (sat)	127-08-2	Liquid							>480		>480	>480		>480 ⁸	>480 ⁸																																																																																																																																																																																																																																																																																																																																																																																																																																																													
											Potassium carbonate (sat)	584-08-7	Liquid							>480																																																																																																																																																																																																																																																																																																																																																																																																																																																																			
											Potassium chromate (sat)	7789-00-6	Liquid		>480	>480				>480		>480	>480	>480	>480 ⁸	>480 ⁸																																																																																																																																																																																																																																																																																																																																																																																																																																																													
											Potassium permanganate (sat)	7722-64-7	Liquid	>480																																																																																																																																																																																																																																																																																																																																																																																																																																																																									
											Sodium fluoride (sat)	7681-49-4	Liquid							>480						>480																																																																																																																																																																																																																																																																																																																																																																																																																																																													
											Sodium hypochlorite (10-15 % active chlorine)	7681-52-9	Liquid		>240	>240	>480																																																																																																																																																																																																																																																																																																																																																																																																																																																																						
											Sodium hypochlorite (15%)	7681-52-9	Liquid	>480					>480	>480	>480	>480	>480	>480	>480	>480	>480																																																																																																																																																																																																																																																																																																																																																																																																																																																												
											Sodium hypochlorite (5.25-6%)	7681-52-9	Liquid	>480	>480	>480	>480																																																																																																																																																																																																																																																																																																																																																																																																																																																																						
											Sodium metabisulphite (38%)	7681-57-4	Liquid	imm						>480	23					>480	>480																																																																																																																																																																																																																																																																																																																																																																																																																																																												
											Sodium silicate (40-42%)	6834-92-0	Liquid	>480																																																																																																																																																																																																																																																																																																																																																																																																																																																																									
345																																																																																																																																																																																																																																																																																																																																																																																																																																																																																							

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)														
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000		
											Arsine	42-1	Vapor																>480	>480	
											Boron trichloride	10294-34-5	Vapor																>480	>480	
											Boron trifluoride	7637-07-2	Vapor																>480	>480	
											Carbon monoxide	630-08-0	Vapor																330	330	
											Chlorine (-70 °C, liquid)	7782-50-5	Liquid																441	>480	
											Chlorine (20 ppm)	7782-50-5	Vapor		>480 ⁸																
											Chlorine (gaseous)	7782-50-5	Vapor		imm														>480	>480	
											Chlorine trifluoride	7790-91-2	Vapor																45	45	
											Diborane (10%)	19287-45-7	Vapor																>480	>480	
											Fluorine	7782-41-4	Vapor																	>480	
											Hydrofluoric acid (10%)	7664-39-3	Liquid																		
											Hydrofluoric acid (48-51%)	7664-39-3	Liquid		280														400	>480	>480
											Hydrofluoric acid (60%)	7664-39-3	Liquid																52	52	
											Hydrofluoric acid (70%)	7664-39-3	Liquid																143	126	
											Hydrogen bromide (gaseous)	10035-10-6	Vapor																>480	>480	
											Hydrogen chloride (-90 °C, liquid)	7647-01-0	Liquid																		
											Hydrogen chloride (gaseous)	7647-01-0	Vapor		imm														>480	>480	
											Hydrogen cyanide (21 °C, liquid)	74-90-8	Liquid																	135	>480
											Hydrogen cyanide (27 °C, gaseous)	74-90-8	Vapor																	>480	>480
											Hydrogen fluoride (20-27 °C, gaseous)	7664-39-3	Vapor		imm														93*/134	186	
											Hydrogen selenide	7783-07-5	Vapor																	imm	
											Hydrogen sulfide	7783-06-4	Vapor																>480	>480	
											Methanethiol	74-93-1	Vapor																>480	>480	

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																	
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																
											Methyl mercaptan	74-93-1	Vapor																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																</

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)												
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000
											Titan(IV) chloride	7550-45-0	Liquid									imm	120	>480	>480	>480	>480	>480	>480
											Titanium tetrachloride	7550-45-0	Liquid								imm	120	>480	>480	>480	>480	>480	>480	>480
											Vanadium tetrachloride	7632-51-1	Liquid												>480				
365																													
											Sulfur dioxide	7446-09-5	Vapor	imm							>480		28*/46	28*/46	26*/37	>480	>480		
											Sulfur trioxide	7446-11-9	Liquid									imm				90	90		
370																													
370																													
											Amido sulfonic acid (15%)	5329-14-6	Liquid	>480									>480	>480		>480	>480		
											Chlorosulfonic acid	7790-94-5	Liquid							41	>480	330	>480	>480	17	>480	>480		
											Chromic acid (CrO3) (44.9%)	1333-82-0	Liquid							>480	>480		>480	>480		>480	>480		
											Fluoroboric acid (48-50%)	16872-11-0	Liquid								>480					>480			
											Fluorosilicic acid (33-35%)	16961-83-4	Liquid								>480	>480	>480	>480	>480	>480			
											Fluorosulfonic acid	7789-21-1	Liquid										194	194		>480	>480		
											Hydriodic acid (47%)	10034-85-2	Liquid								>480					>480			
											Hydriodic acid (55-57%)	10034-85-2	Liquid									>480	>480	>480	>480	>480	>480		
											Hydrobromic acid (48%)	10035-10-6	Liquid									>480	>480	>480					
											Hydrochloric acid (16%)	7647-01-0	Liquid			imm	imm	imm											
											Hydrochloric acid (32%)	7647-01-0	Liquid			imm	imm	imm											
											Hydrochloric acid (37%)	7647-01-0	Liquid	140					54	>480	>480	>480	>480	>480	>480	>480	>480		
											Hydrofluoric acid (10%)	7664-39-3	Liquid				imm												
											Hydrofluoric acid (48-51%)	7664-39-3	Liquid	280					400	>480	>480	>480	>480	>480	15	>480	>480		
											Hydrofluoric acid (60%)	7664-39-3	Liquid										52	52					
												7664-																	

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																											
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																															
											Hydrofluoric acid (70%)	39-3	Liquid																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																															

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																					
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																				
											Phosphoric acid (50%)	38-2	Liquid				>480	>480	>480																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																														</

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)												
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000
											Ammonium hydroxide (32%)	21-6	Liquid							55			>480	>480	35				
											Caustic ammonia (16%)	1336-21-6	Liquid			imm	imm	imm											
											Caustic ammonia (2-3% in Household cleaner)	1336-21-6	Liquid							>480					>480	>480			
											Caustic ammonia (28% - 30%)	1336-21-6	Liquid	imm	imm	imm					89					160	>480		
											Caustic ammonia (32%)	1336-21-6	Liquid							55			>480	>480	35				
											Caustic soda (10%)	1310-73-2	Liquid			>480	>480	>480											
											Caustic soda (40%)	1310-73-2	Liquid			>30	>30												
											Caustic soda (50% at 50 °C)	1310-73-2	Liquid										>480	>480					
											Caustic soda (50%)	1310-73-2	Liquid	>480	>30	>30	>30		>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480
											Caustic soda (>95%, solid)	1310-73-2	Solid			>480	>480												
											Lithium hydroxide (14.9%)	1310-65-2	Liquid	>480						>480									
											Methanethiol	74-93-1	Vapor									>480	>480	>480	>480	>480	>480	>480	>480
											Methyl mercaptan	74-93-1	Vapor									>480	>480	>480	>480	>480	>480	>480	>480
											Potassium hydroxide (40%)	1310-58-3	Liquid			imm	imm	>120											
											Potassium hydroxide (45%)	1310-58-3	Liquid	>480						>480	>480	>480	>480	>480	>480	>480	>480	>480	>480
											Potassium hydroxide (50%)	1310-58-3	Liquid										>480	>480	>480				
											Sodium hydroxide (10%)	1310-73-2	Liquid			>480	>480	>480											
											Sodium hydroxide (40%)	1310-73-2	Liquid			>30	>30												
											Sodium hydroxide (50% at 50 ° C)	1310-73-2	Liquid										>480	>480					
											Sodium hydroxide (50%)	1310-73-2	Liquid	>480	>30	>30	>30		>480	>480	>480	>480	>480	>480	>480	>480	>480	>480	>480
											Sodium hydroxide (>95%, solid)	1310-73-2	Solid			>480	>480												
390																													
390																													
											2-Methyl-4-isothiazolin-3-one (20%)	2682-20-4	Liquid	>480						>480			>480	>480					
												2634-																	

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000				
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR			
											Benzisothiazol, 1,2- (20%)	33-5	Liquid		>480								>480		>480							
391																																
											2-Methyl-4-isothiazolin-3-one (20%)	2682-20-4	Liquid		>480								>480		>480		>480					
											Acetone	67-64-1	Liquid		imm							imm	13	462	>480	>480	>480	>480	>480	>480		
											Benzisothiazol, 1,2- (20%)	2634-33-5	Liquid		>480								>480		>480	>480						
											But-3-en-2-one	78-94-4	Liquid											>480	>480	>480						
											Butanone	78-93-3	Liquid										18	>480	40*/64	40*/64	40*/64	>480		>480		
											Chloro acetone (95%)	78-95-5	Liquid										258	>480	>480	>480	>480	>480	>480 ⁸			
											Chloro propan-2-one, 1- (95%)	78-95-5	Liquid										258	>480	>480	>480	>480	>480	>480 ⁸			
											Cyclo hexanone	108-94-1	Liquid										136		>480	>480	>480	>480	>480	>480		>480
											Dichloro -2-propanone, 1,3- (45 ° C, molten)	534-07-6	Liquid												>480	>480	>480					
											Dichloro -2-propanone, 1,3- (95% at 40 °C, molten)	534-07-6	Liquid																	>480		
											Dichloro acetone, 1,3- (45 °C, molten)	534-07-6	Liquid												>480	>480	>480					
											Dichloro acetone, 1,3- (95% at 40 °C, molten)	534-07-6	Liquid																	>480		
											Diketene Acetone (95%)	5394-63-8	Liquid												>480	>480						
											Dimethyl ketal	67-64-1	Liquid		imm							imm	13	462	>480	>480	>480	>480	>480	>480	>480	
											Dimethyl ketone	67-64-1	Liquid		imm							imm	13	462	>480	>480	>480	>480	>480	>480	>480	
											Hexanone	108-94-1	Liquid										136		>480	>480	>480	>480	>480	>480		>480
											Hexone	108-10-1	Liquid											>480	>480	>480	>480	>480	>480	>480		>480
											Isobutyl methyl ketone	108-10-1	Liquid											>480	>480	>480	>480	>480	>480	>480		>480
											Ketone propane	67-64-1	Liquid		imm							imm	13	462	>480	>480	>480	>480	>480	>480	>480	
											MEK	78-93-3	Liquid										18	>480	40*/64	40*/64	40*/64	>480	>480	>480		>480
											Methyl acetyl	67-64-1	Liquid		imm							imm	13	462	>480	>480	>480	>480	>480	>480	>480	
											Methyl ethyl ketone	78-93-3	Liquid										18	>480	40*/64	40*/64	40*/64	>480	>480	>480	>480	
											Methyl ketone	67-64-1	Liquid		imm							imm	13	462	>480	>480	>480	>480	>480	>480	>480	
											Methyl pentan-2-one, 4-	108-10-1	Liquid											>480	>480	>480	>480	>480	>480	>480		>480
											Methyl vinyl ketone	78-94-4	Liquid												>480	>480	>480					
											Pimelic ketone	108-94-1	Liquid										136		>480	>480	>480	>480	>480	>480		>480
											Propan -2-one	67-64-1	Liquid		imm							imm	13	462	>480	>480	>480	>480	>480	>480	>480	

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																										
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																									
											Pyroacetic ether	67-64-1	Liquid																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																									</

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR		
Propenoic acid nitrile												107-13-1	Liquid	imm								36*/48	31	73*/92	73*/92	108	>480	>480
Vinyl cyanide												107-13-1	Liquid	imm								36*/48	31	73*/92	73*/92	108	>480	>480
432																												
Benzo nitrile												100-47-0	Liquid									450	>480	>480	>480	>480	>480	
Benzyl cyanide												140-29-4	Liquid									>480	>390	>390	>390			
Cyanobenzene												100-47-0	Liquid									450	>480	>480	>480	>480	>480	
Phenyl acetonitrile												140-29-4	Liquid									>480	>390	>390	>390			
Phenyl cyanide												100-47-0	Liquid									450	>480	>480	>480	>480	>480	
440																												
441																												
Nitro benzene												98-95-3	Liquid	imm							59	>480	>480	>480	>480	>480	>480	
Nitro methane												75-52-5	Liquid									>480	233	233	233	>480	>480	
Nitro propane, 2-												79-46-9	Liquid									>480	>480	>480	>480	>480	>480	
442																												
Chloro 2-nitrobenzene, 1-												88-73-3	Solid	15														
Chloro 2-nitrobenzene, 1- (35-40 °C, molten)												88-73-3	Liquid									>480	>480	>480				
Dinitro-o-cresol, 4,6- (sat in Methanol)												534-52-1	Liquid												>480	>480		
Dinitrocresol (sat in Methanol)												534-52-1	Liquid												>480	>480		
Hydroxy 2-nitrobenzene, 1- (70 °C, molten)												88-75-5	Liquid							imm					208	208		
Nitro chlorobenzene, p-												100-00-5	Solid	imm														
Nitro phenol, o- (70 °C, molten)												88-75-5	Liquid							imm					208	208		
Nitro toluene, 2-												88-72-2	Liquid							95		>480	>480		95			
Nitro toluene, p-												99-99-0	Solid	imm														
450																												
450																												
Dimethyl nitrosamine												62-75-9	Liquid									>480	>480	>480				
Methyl N-nitrosomethanamine, N-												62-75-9	Liquid									>480	>480	>480				
460																												
462																												

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)																	
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000					
																	Ethyl parathion	56-38-2	Liquid											>480	>480			
																	Malathion	121-75-5	Liquid														>480	>480
																	Sarin (GB), MIL-STD-282 (10 g/m ²)	107-44-8	Liquid							>480 ⁸	120 ⁸					>480 ⁸	>480 ⁸	
																	Sarin (GB), MIL-STD-282 (100 g /m ²)	107-44-8	Liquid									>480 ⁸	>480 ⁸	>480 ⁸	>480 ⁸	>480 ⁸	>480 ⁸	
																	Soman (GD), FINABEL 0.7.C	96-64-0	Liquid									>1400 ⁸	>1400 ⁸	>1400 ⁸				
																	Soman (GD), MIL-STD-282 (10 g /m ²)	96-64-0	Liquid								>480 ⁸				>480 ⁸	>480 ⁸	>480 ⁸	
																	Soman (GD), MIL-STD-282 (100 g/m ²)	96-64-0	Liquid									>480 ⁸	>480 ⁸	>480 ⁸		>480 ⁸	>480 ⁸	
																	Tabun (GA), FINABEL 0.7.C	77-81-6	Liquid									>1400 ⁸	>1400 ⁸	>1400 ⁸				
																	Tabun (GA), MIL-STD-282 (10 g /m ²)	77-81-6	Liquid												>480 ⁸	>480 ⁸	>480 ⁸	
																	Tabun (GA), MIL-STD-282 (100 g /m ²)	77-81-6	Liquid									>480 ⁸	>480 ⁸	>480 ⁸		>480 ⁸	>480 ⁸	
																	Trimethyl phosphate	512-56-1	Liquid												>480	>480	>480	
																	Trimethyl phosphite	121-45-9	Liquid							210					>480	>480	>480	
																	VX Nerve Agent, FINABEL 0.7. C	50782-69-9	Liquid									>1400 ⁸	>1400 ⁸	>1400 ⁸				
																	VX Nerve Agent, MIL-STD-282 (10 g/m ²)	50782-69-9	Liquid							>480 ⁸	>480 ⁸				>480 ⁸	>480 ⁸	>480 ⁸	
																	VX Nerve Agent, MIL-STD-282 (100 g/m ²)	50782-69-9	Liquid									>480 ⁸	>480 ⁸	>480 ⁸	>480 ⁸	>480 ⁸	>480 ⁸	
470																																		
470																																		
																	Butyl stannium trichloride	1118-46-3	Liquid									>480	>480	>480				
																	Dimethyl mercury in decane (100 ppm in Decane)	593-74-8	Liquid												>480			
																	Lewisite (L), FINABEL 0.7.C	541-25-3	Liquid									>155 ⁸	>155 ⁸	>155 ⁸				
																	Lewisite (L), MIL-STD-282 (10 g /m ²)	541-25-3	Liquid							>360 ⁸	120 ⁸				>480 ⁸	>480 ⁸	>480 ⁸	
																	Lewisite (L), MIL-STD-282 (100 g /m ²)	541-25-3	Liquid									360 ⁸	360 ⁸	360 ⁸	120 ⁸	>480 ⁸	>480 ⁸	
																	Nickel carbonyl	13463-39-3	Liquid														>480	>480
																		13463-																

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000			
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR		
											Tetracarbonylnickel	39-3	Liquid																	>480	
											Tetraethyl lead	78-00-2	Liquid														>480			>480	
											Tetramethyl tin (0.5% in Pentane)	594-27-4	Liquid														>480			>480	
											Tin chloride, mono-n-butyl	1118-46-3	Liquid											>480	>480	>480					
											Tin chloride, tri-n-butyl	1461-22-9	Liquid											nm	nm	nm					
											Vinyl magnesium chloride (15% in Tetrahydrofuran)	3536-96-7	Liquid															imm			
											Vinyl magnesium chloride (16.5% in Tetrahydrofuran)	3536-96-7	Liquid															>480		>480	
480																															
480																															
											Dichloro silane	4109-96-0	Vapor															>480		>480	
											Dimethyl dichlorosilane	75-78-5	Liquid												46		>480	>480	>480	46	>480
											Hexamethyl disilazane	999-97-3	Liquid													>480				>480	>480
											Hexamethyl disilazane, 1,1,1,3,3,3-	999-97-3	Liquid													>480				>480	>480
											Methyl trichlorosilane	75-79-6	Liquid												>480	>480	>480	>480	>480	>480	>480
											Phenyl trichlorosilane	98-13-5	Liquid												>480	>480	>480	>480	>480	>480	>480
											Silane	7803-62-5	Vapor												>480	>480	>480	>480	>480	>480	>480
											Silicon tetrachloride	10026-04-7	Liquid												35	>480	>480	>480	>480	>480	>480
											Tetraethoxysilane	78-10-4	Liquid																>480		>480
											Trichlor vinylsilane	75-94-5	Liquid												100					100	
											Trichloro phenylsilane	98-13-5	Liquid												>480	>480	>480	>480	>480	>480	>480
											Trichloro silane	10025-78-2	Liquid												60				>480	>480	>480
500																															
500																															
											2-Methyl-4-isothiazolin-3-one (20%)	2682-20-4	Liquid		>480										>480		>480	>480			
											Benzisothiazol, 1,2- (20%)	2634-33-5	Liquid		>480										>480		>480	>480			
501																															
											Benzene thiol	108-98-5	Liquid																>480		>480
											Ethane thiol	75-08-1	Liquid												imm	>480	>480	>480	>480	>480	>480

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)															
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000			
											Ethyl mercaptan	75-08-1	Liquid											imm	>480	>480	>480	>480	>480	>480	>480	
											Hydroxy 1-ethanethiol, 2-	60-24-2	Liquid													>480	>480	>480	>480	>480	>480	>480
											Mercapto acetic acid	68-11-1	Liquid												>480	>480	>480	>480	>480	>480	>480	>480
											Mercapto ethanol	60-24-2	Liquid													>480	>480	>480	>480	>480	>480	>480
											Methanethiol	74-93-1	Vapor												>480	>480	>480	>480	>480	>480	>480	>480
											Methyl mercaptan	74-93-1	Vapor												>480	>480	>480	>480	>480	>480	>480	>480
											Phenyl mercaptan	108-98-5	Liquid																>480	>480	>480	>480
											Thioglycolic acid	68-11-1	Liquid												>480	>480	>480	>480	>480	>480	>480	>480
502																																
											Carbon disulfide	75-15-0	Liquid		imm								imm	imm	imm	>480	>480	>480	>480	>480	>480	>480
											Chlorine sulfide	10545-99-0	Liquid																			440
											Chlorine sulfide (80%)	10545-99-0	Liquid												imm					70	>480	>480
											Dimethyl sulfide	75-18-3	Liquid												>480	271	271	271				
											Disulphur dichloride	10025-67-9	Liquid																>480	>480	>480	>480
											Hydrogen sulfide	7783-06-4	Vapor												imm			>480	>480	>480	>480	>480
											Sulfur Mustard (HD), FINABEL 0.7.C	505-60-2	Liquid													>1400 ⁸	>1400 ⁸	>1400 ⁸				
											Sulfur Mustard (HD), MIL-STD-282 (10 g/m²)	505-60-2	Liquid											>480 ⁸	120 ⁸				>480 ⁸	>480 ⁸	>480 ⁸	>480 ⁸
											Sulfur Mustard (HD), MIL-STD-282 (100 g/m²)	505-60-2	Liquid													>480 ⁸	>480 ⁸	>480 ⁸	>480 ⁸	>480 ⁸	>480 ⁸	>480 ⁸
											Sulfur monochloride	10025-67-9	Liquid																>480	>480	>480	>480
											Sulphur dichloride	10545-99-0	Liquid																			440
											Sulphur dichloride (80%)	10545-99-0	Liquid												imm					70	>480	>480
503																																
											Dimethyl sulfoxide	67-68-5	Liquid												>480	>480	>480	>480	>480	>480	>480	>480
504																																
											Chlorosulfonic acid	7790-94-5	Liquid									41	>480	330	>480	>480	17	>480		>480	>480	
											Ethansulphonic acid (70%)	594-45-6	Liquid												>480	>480						
											Methanesulphonic acid	75-75-2	Liquid												>480	>480	>480					
											Methanesulphonic acid (70%)	75-75-2	Liquid											>480				>480				
												1493-																				

Chemical Permeation Data Tables

C	S	Sub - C	Classes	Chemical Name	CAS	Phase	Breakthrough Time (Minutes)											Tychem® RESPONDER® CSM	Tychem® 10000
							Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR		
				Trifluoro methansulfonic acid	13-6	Liquid						>480		>480	>480	>480	>480	>480	
505																			
				Benzene sulfone chloride	98-09-9	Liquid						>480	>480	>480	>480		>480	>480	
				Benzene sulfonyl chloride	98-09-9	Liquid						>480	>480	>480	>480	>480	>480	>480	
				Methanesulfonyl chloride	124-63-0	Liquid							>480	>480	>480	>480	>480	>480	
507																			
				Diethyl sulfate	64-67-5	Liquid						>480	>480	>480	>480			>480	
				Dimethyl sulfate	77-78-1	Liquid		imm	imm			>480	>480	>480	>480	>480	>480	>480	
				Sodium bisulphite (38-40%)	7631-90-5	Liquid						>480		>480	>480				
				Sulfuric acid diethyl ester	64-67-5	Liquid						>480	>480	>480	>480	>480		>480	
				Sulfuric acid dimethyl ester	77-78-1	Liquid		imm	imm			>480	>480	>480	>480	>480	>480	>480	
509																			
				2-Methyl-4-isothiazolin-3-one (20%)	2682-20-4	Liquid	>480					>480		>480	>480				
				Amido sulfonic acid (15%)	5329-14-6	Liquid	>480							>480	>480		>480	>480	
				Benzisothiazol, 1,2- (20%)	2634-33-5	Liquid	>480					>480		>480	>480				
				Brom thiophene, 2-	1003-09-4	Liquid								>480	>480				
				Sulfamic acid (15%)	5329-14-6	Liquid	>480							>480	>480		>480	>480	
				Sulfamidic acid (15%)	5329-14-6	Liquid	>480							>480	>480		>480	>480	
				Sulfur hexafluoride	2551-62-4	Vapor											>480	>480	
550																			
550																			
				Sodium acetate (sat)	127-09-3	Liquid		>480	>480										
				Sodium methylate (50% in Methanol)	124-41-4	Liquid											>480	>480	
				Tetraethyl ammonium hydroxide (35%)	77-98-5	Liquid						>480					>480		
				Tetramethyl ammonium hydroxide (25%)	75-59-2	Liquid	>480					>480		>480	>480	>480		>480	
590																			
590																			
				Black Liquor (mix)	mix	Liquid	>480					>480	>480	>480	>480	>480	>480	>480	
					109-63-														

Chemical Permeation Data Tables

C	l	a	s	S	u	b	C	l	a	s	Chemical Name	CAS	P	h	a	s	Breakthrough Time (Minutes)										Tychem® RESPONDER® CSM	Tychem® 10000																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																	
																	Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR			Tychem® 6000 FR																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																
											Boron fluoride ethyl ether	7	Liquid																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																

Chemical Permeation Data Tables

C l a s s	S u b - C l a s s	Chemical Name	CAS	P h a s e	Breakthrough Time (Minutes)												
					Tychem® 2000	Tyvek® 500	Tyvek® 600	Tyvek® 800	Tyvek® IsoClean® CS	Tychem® 2000 SFR	Tychem® 4000	Tychem® 5000	Tychem® 6000	Tychem® 6000 SFR	Tychem® 6000 FR	Tychem® RESPONDER® CSM	Tychem® 10000
		Ifosfamide (50 mg/ml)	73-2	Liquid		imm	imm	>240	imm								
		Irinotecan (20 mg/ml)	100286-90-6	Liquid		>240	>240										
		Methotrexate (25 mg/ml, 0.1 N NaOH)	59-05-2	Liquid		>240	>240	>240									
		Mitomycin (0.5 mg/ml)	50-07-7	Liquid		>240	>240	>240									
		Oxaliplatin (5 mg/ml)	63121-00-6	Liquid		imm	imm	>240	imm								
		Paclitaxel (Hospira) (6 mg/ml, 49.7 % (v/v) Ethanol)	33069-62-4	Liquid	>240	>240	>240	>240	>240								
		Sodium chloride (9 g/l)	7647-14-5	Liquid		>240	>240										
		Thiotepa (10 mg/ml)	52-24-4	Liquid	>240	imm	imm	>240	imm								
		Vincristine sulfate (1 mg/ml)	2068-78-2	Liquid		>240	>240										
		Vinorelbine (0.1 mg/ml)	71486-22-1	Liquid		>240	>240										
> = greater than imm. = immediate (<10 minutes) {empty} = not tested L = Liquid G = Gas S = Solid																	
* Actual breakthrough time; normalized breakthrough time is not available.																	
** Solid tested, vapor phase permeation measured.																	

Permeation data for Tyvek® Plus and Tyvek® Xpert

DuPont™ Tyvek® fabric provides an ideal balance of protection, durability and comfort. Tyvek® garments are composed of flash spun high density polyethylene fabric which creates a unique, nonwoven material available only from DuPont.

Tyvek® Plus and Tyvek® Xpert garments use a special type of Tyvek® fabric which has different physical properties and improved chemical resistance properties when compared to fabric used in standard Tyvek® garments.

Tyvek® Xpert garments have external sewn seams where the seam thread is visible on the outside of the garment. This seam design, when coupled with the enhanced fabric, offers improved overall garment protection levels. Tyvek® Xpert garments are CE certified to Types 5 & 6 (light liquid aerosols and airborne solid particles).

Tyvek® Plus garments have sewn seams which are over-taped. This seam design, when coupled with the enhanced fabric, offers further improved overall garment protection levels. Tyvek® Plus garments are CE certified to Types 4, 5 & 6 (light and heavy liquid aerosols and airborne solid particles).

NOTE

The permeation data provided in the following table only applies to Tyvek® Xpert and Tyvek® Plus garment fabrics.

Chemical Permeation Data Table

C l a s s	S u b - C l a s s	Chemical Name	CAS	P h a s e	Breakthrough Time (Minutes)			Tyvek® IsoClean® CS
					Tyvek® 500	Tyvek® 600	Tyvek® 800	
100								
102								
		Acetic acid (10%)	64-19-7	Liquid			imm	
		Acetic acid (2%)	64-19-7	Liquid			imm	
		Acetic acid (30%)	64-19-7	Liquid	imm	imm	imm	
		Acetic acid (5%)	64-19-7	Liquid			imm	
		Formic acid (30%)	64-18-6	Liquid	imm	imm		
120								
121								
		Formaldehyde (10%)	50-00-0	Liquid			imm	
		Formalin (10%)	50-00-0	Liquid			imm	
270								
271								
		Nicotine (9 mg/ml)	54-11-5	Liquid	>480	>480		
300								
301								
		Hydrogen peroxide (10%)	7722-84-1	Liquid	>10	>10		
		Hydrogen peroxide (30%)	7722-84-1	Liquid	imm	imm		
310								
311								
		Ethanol	64-17-5	Liquid			imm	
		Ethyl alcohol	64-17-5	Liquid			imm	
		Spiritus	64-17-5	Liquid			imm	
312								
		Isopropanol	67-63-0	Liquid			imm	
		Isopropanol (70%)	67-63-0	Liquid			imm	
		Isopropyl alcohol	67-63-0	Liquid			imm	
		Isopropyl alcohol (70%)	67-63-0	Liquid			imm	
		Propan -2-ol	67-63-0	Liquid			imm	

Chemical Permeation Data Table

C l a s s	S u b - C l a s s	Chemical Name	CAS	P h a s e	Breakthrough Time (Minutes)			Tyvek® IsoClean® CS
					Tyvek® 500	Tyvek® 600	Tyvek® 800	
314		Propan -2-ol (70%)	67-63-0	Liquid			imm	
		Ethane 1,2-diol	107-21-1	Liquid	imm	imm	imm	
		Ethylene glycol	107-21-1	Liquid	imm	imm	imm	
		Glycerine	56-81-5	Liquid	>480	>480		
		Glycerol	56-81-5	Liquid	>480	>480		
		Glycol alcohol	107-21-1	Liquid	imm	imm	imm	
		Propane -1,2,3-triol	56-81-5	Liquid	>480	>480		
340		Potassium chromate (sat)	7789-00-6	Liquid	>480	>480		
		Sodium hypochlorite (10-15 % active chlorine)	7681-52-9	Liquid	>240	>240	>480	
		Sodium hypochlorite (5.25-6%)	7681-52-9	Liquid	>480	>480	>480	
350		Hydrofluoric acid (10%)	7664-39-3	Liquid			imm	
370		Hydrochloric acid (16%)	7647-01-0	Liquid	imm	imm	imm	
		Hydrochloric acid (32%)	7647-01-0	Liquid	imm	imm	imm	
		Hydrofluoric acid (10%)	7664-39-3	Liquid			imm	
		Nitric acid (10%)	7697-37-2	Liquid	>120	>120		
		Nitric acid (30%)	7697-37-2	Liquid	imm	imm	imm	
		Phosphoric acid (50%)	7664-38-2	Liquid	>480	>480	>480	
		Sulfuric acid (18%)	7664-93-9	Liquid	>240	>240	>480	
		Sulfuric acid (30%)	7664-93-9	Liquid	>240	>240	>480	
		Sulfuric acid (50%)	7664-93-9	Liquid	>30	>30		
380								

Chemical Permeation Data Table

C l a s s	S u b - C l a s s	Chemical Name	CAS	P h a s e	Breakthrough Time (Minutes)			Tyvek® IsoClean® CS
					Tyvek® 500	Tyvek® 600	Tyvek® 800	
500		Ammonium hydroxide (16%)	1336-21-6	Liquid	imm	imm	imm	
		Ammonium hydroxide (28% - 30%)	1336-21-6	Liquid	imm	imm		
		Caustic ammonia (16%)	1336-21-6	Liquid	imm	imm	imm	
		Caustic ammonia (28% - 30%)	1336-21-6	Liquid	imm	imm		
		Caustic soda (10%)	1310-73-2	Liquid	>480	>480	>480	
		Caustic soda (40%)	1310-73-2	Liquid	>30	>30		
		Caustic soda (50%)	1310-73-2	Liquid	>30	>30	>30	
		Caustic soda (>95%, solid)	1310-73-2	Solid	>480	>480		
		Potassium hydroxide (40%)	1310-58-3	Liquid	imm	imm	>120	
		Sodium hydroxide (10%)	1310-73-2	Liquid	>480	>480	>480	
		Sodium hydroxide (40%)	1310-73-2	Liquid	>30	>30		
		Sodium hydroxide (50%)	1310-73-2	Liquid	>30	>30	>30	
		Sodium hydroxide (>95%, solid)	1310-73-2	Solid	>480	>480		
		500						
507								
	Dimethyl sulfate	77-78-1	Liquid	imm	imm			
	Sulfuric acid dimethyl ester	77-78-1	Liquid	imm	imm			
550								
550								
	Sodium acetate (sat)	127-09-3	Liquid	>480	>480			
990								
991								
	Carboplatin (10 mg/ml)	41575-94-4	Liquid	>240	>240	>240	>240	
	Carmustine (3.3 mg/ml, 10 % Ethanol)	154-93-8	Liquid	imm	imm	>240	imm	
	Cisplatin (1 mg/ml)	15663-27-1	Liquid	>240	>240	>240	>240	
	Cyclo phosphamide (20 mg/ml)	50-18-0	Liquid	>240	>240	>240	>10	
	Doxorubicin HCl (2 mg/ml)	25136-40-9	Liquid	>240	>240	>240	>240	

Chemical Permeation Data Table

C l a s s	S u b - C l a s s	Chemical Name	CAS	P h a s e	Breakthrough Time (Minutes)			Tyvek® IsoClean® CS
					Tyvek® 500	Tyvek® 600	Tyvek® 800	
		Etoposide (Toposar®, Teva) (20 mg/ml, 33.2 % (v/v) Ethanol)	33419-42-0	Liquid	>240	>240	>240	>240
		Fluorouracil, 5- (50 mg/ml)	51-21-8	Liquid	imm	imm	>240	imm
		Ganciclovir (3 mg/ml)	82410-32-0	Liquid	>240	>240		
		Gemcitabine (38 mg/ml)	95058-81-4	Liquid	>60	>60	>240	>60
		Ifosfamide (50 mg/ml)	3778-73-2	Liquid	imm	imm	>240	imm
		Irinotecan (20 mg/ml)	100286-90-6	Liquid	>240	>240		
		Methotrexate (25 mg/ml, 0.1 N NaOH)	59-05-2	Liquid	>240	>240	>240	
		Mitomycin (0.5 mg/ml)	50-07-7	Liquid	>240	>240	>240	
		Oxaliplatin (5 mg/ml)	63121-00-6	Liquid	imm	imm	>240	imm
		Paclitaxel (Hospira) (6 mg/ml, 49.7 % (v/v) Ethanol)	33069-62-4	Liquid	>240	>240	>240	>240
		Sodium chloride (9 g/l)	7647-14-5	Liquid	>240	>240		
		Thiotepa (10 mg/ml)	52-24-4	Liquid	imm	imm	>240	imm
		Vincristine sulfate (1 mg/ml)	2068-78-2	Liquid	>240	>240		
		Vinorelbine (0.1 mg/ml)	71486-22-1	Liquid	>240	>240		
> = greater than imm. = immediate (<10 minutes) {empty} = not tested L = Liquid G = Gas S = Solid * Actual breakthrough time; normalized breakthrough time is not available. ** Solid tested, vapor phase permeation measured.								

APPENDIX
CHEMICAL INDEX - Alphabetical Listing - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class
109-55-7	1,3-Propanediamine, N,N'-Dimethyl		140	148
112-34-5	2-(2-Butoxyethoxy) ethanol	Diethylene glycol monobutyl ether	310	311
112-34-5	2-(2-Butoxyethoxy) ethanol	Diethylene glycol monobutyl ether	240	245
111-90-0	2-(2-Ethoxyethoxy) ethanol		240	245
75-85-4	2-Methyl-2-Butanol	2-Methyl-2-Butanol::Amyl alcohol, tert-	310	313
2682-20-4	2-Methyl-4-isothiazolin-3-one	2-Methyl-4-isothiazolin-3-one	390	390
2682-20-4	2-Methyl-4-isothiazolin-3-one	2-Methyl-4-isothiazolin-3-one	270	270
2682-20-4	2-Methyl-4-isothiazolin-3-one	2-Methyl-4-isothiazolin-3-one	270	274
2682-20-4	2-Methyl-4-isothiazolin-3-one	2-Methyl-4-isothiazolin-3-one	500	509
2682-20-4	2-Methyl-4-isothiazolin-3-one	2-Methyl-4-isothiazolin-3-one	390	391
2682-20-4	2-Methyl-4-isothiazolin-3-one	2-Methyl-4-isothiazolin-3-one	500	500
75-07-0	Acetaldehyde		120	121
64-19-7	Acetic acid		100	102
111-15-9	Acetic acid 2 ethoxy ethyl ester	Acetic acid 2 ethoxy ethyl ester::Ethyl glycol acetate::Ethylene glycol mono ethyl ether acetate	240	245
110-49-6	Acetic acid 2 methoxy ethyl ester	Acetic acid 2 methoxy ethyl ester::Ethylene glycol monomethyl ether acetate	240	245
108-05-4	Acetic acid ethenyl ester	Acetic acid ethenyl ester	220	222
141-78-6	Acetic acid ethyl ester	Acetic acid ethyl ester	220	222
628-63-7	Acetic acid pentyl ester	Acetic acid pentyl ester::Amyl ester acetic acid::Pentyl acetate	220	222
108-24-7	Acetic anhydride		160	161
75-36-5	Acetic chloride	Acetic chloride::Ethanoyl chloride	110	111
67-64-1	Acetone	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391
75-86-5	Acetone cyanohydrin	Cyanopropan-2-ol, 2::Hydroxy 2-methylpropionitrile, 2::Hydroxy isobutyronitrile	430	431
75-86-5	Acetone cyanohydrin	Cyanopropan-2-ol, 2::Hydroxy 2-methylpropionitrile, 2::Hydroxy isobutyronitrile	310	313
75-05-8	Acetonitrile	Cyanomethane::Ethane nitrile::Ethyl nitrile::Methyl cyanide	430	431
13831-31-7	Acetoxycetyl Chloride		110	111
75-36-5	Acetyl chloride	Acetic chloride::Ethanoyl chloride	110	111
79-10-7	Acroleic acid	Acroleic acid::Ethylene carboxylic acid::Propene acid	100	102
107-02-8	Acrolein	Prop-2-en-1-al	120	121
79-06-1	Acrylamide	Acrylicamide::Propenamide	130	135
79-10-7	Acrylic acid	Acroleic acid::Ethylene carboxylic acid::Propene acid	100	102
140-88-5	Acrylic acid ethyl ester	Acrylic acid ethyl ester	220	223
141-32-2	Acrylic acid n-butyl ester	Acrylic acid n-butyl ester::Propenoic acid butyl ester, 2-	220	223
79-06-1	Acrylicamide	Acrylicamide::Propenamide	130	135
107-13-1	Acrylonitrile	Cyanoethylene::Propenenitrile, 2::Propenoic acid nitrile::Vinyl cyanide	430	431
814-68-6	Acryloyl Chloride		110	111
111-69-3	Adipic acid dinitrile	Adipic acid dinitrile::Adipic acid nitrile::Adipyl dinitrile::Dicyanobutane, 1,4-	430	431
111-69-3	Adipic acid nitrile	Adipic acid dinitrile::Adipic acid nitrile::Adipyl dinitrile::Dicyanobutane, 1,4-	430	431
111-69-3	Adiponitrile	Adipic acid dinitrile::Adipic acid nitrile::Adipyl dinitrile::Dicyanobutane, 1,4-	430	431

CAS Number	Chemical Name	Synonym	Class	Sub-Class
95-76-1	Amino 3,4-dichlorobenzene, 1-	Amino 3,4-dichlorobenzene, 1-	140	145
62-53-3	Amino benzene	Amino benzene::Benzenamine::Phenyl amine	140	145
92-67-1	Amino diphenyl, 4-		140	145
141-43-5	Amino ethanol, 2-	Amino ethanol, 2-	310	311
141-43-5	Amino ethanol, 2-	Amino ethanol, 2-	140	141
111-41-1	Amino ethylethanolamine		310	311
111-41-1	Amino ethylethanolamine		140	142
111-41-1	Amino ethylethanolamine		140	148
140-31-8	Amino ethylpiperazine		140	141
140-31-8	Amino ethylpiperazine		270	274
140-31-8	Amino ethylpiperazine		140	148
75-31-0	Amino propane, 2-	Amino propane, 2-	140	141
504-29-0	Amino pyridine, 2-		270	271
7664-41-7	Ammonia	30081410	350	350
7664-41-7	Ammonia		380	380
7664-41-7	Ammonia	30081410	380	380
7664-41-7	Ammonia		350	350
1341-49-7	Ammonium bifluoride	Ammonium hydrogendifluoride	340	340
1341-49-7	Ammonium bifluoride	Ammonium hydrogendifluoride	350	350
12125-02-9	Ammonium chloride		340	340
12125-01-8	Ammonium fluoride		340	340
1341-49-7	Ammonium hydrogendifluoride	Ammonium hydrogendifluoride	350	350
1341-49-7	Ammonium hydrogendifluoride	Ammonium hydrogendifluoride	340	340
1336-21-6	Ammonium hydroxide	Caustic ammonia	380	380
628-63-7	Amyl acetate, n-	Acetic acid pentyl ester::Amyl ester acetic acid::Pentyl acetate	220	222
71-41-0	Amyl alcohol	Amyl alcohol	310	311
75-85-4	Amyl alcohol, tert-	2-Methyl-2-Butanol::Amyl alcohol, tert-	310	313
628-63-7	Amyl ester acetic acid	Acetic acid pentyl ester::Amyl ester acetic acid::Pentyl acetate	220	222
461-82-5	Anilin, 4-Trifluoromethoxy-		140	145
62-53-3	Aniline	Amino benzene::Benzenamine::Phenyl amine	140	145
120-12-7	Anthracene	Anthracin	290	293
120-12-7	Anthracin	Anthracin	290	293
7647-18-9	Antimony pentachloride	Pentachloroantimony	360	360
8007-56-5	Aqua regia	Aqua regia	370	370
7784-34-1	Arsenic (III) chloride	Arsenic trichloride	340	340
7784-34-1	Arsenic trichloride	Arsenic trichloride	340	340
7784-42-1	Arsine		350	350
151-56-4	Aziridine	Aziridine	270	274
123-75-1	Azolidine	Azolidine	270	274
100-52-7	Benzaldehyde	Benzaldehyde	120	122
62-53-3	Benzenamine	Amino benzene::Benzenamine::Phenyl amine	140	145
71-43-2	Benzene		290	292
98-88-4	Benzene carbonyl chloride	Benzene carbonyl chloride	110	112
98-09-9	Benzene sulfone chloride	Benzene sulfone chloride	500	505
98-09-9	Benzene sulfonyl chloride	Benzene sulfone chloride	500	505

111-69-3	Adipyl dinitrile	Adipic acid dinitrile::Adipic acid nitrile:: Adipyl dinitrile::Dicyanobutane, 1,4-	430	431
107-18-6	Allyl alcohol	Hydroxy propene::Propen 1-ol, 2-::Vinyl carbinol	310	311
107-05-1	Allyl chloride	Chlor allylene::Chloro prene, 3-	260	265
5329-14-6	Amido sulfonic acid	Amido sulfonic acid::Sulfamidic acid	500	509
5329-14-6	Amido sulfonic acid	Amido sulfonic acid::Sulfamidic acid	370	370
75-64-9	Amino 2-methylpropane, 2-	Amino 2-methylpropane, 2-::Trimethyl aminomethane	140	143
95-76-1	Amino 3,4-dichlorobenzene, 1-	Amino 3,4-dichlorobenzene, 1-	260	263

APPENDIX
CHEMICAL INDEX - Alphabetical Listing - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class
108-98-5	Benzene thiol	Benzene thiol	500	501
328-84-7	Benzene, Dichloro-4-Trifluoro		260	263
92-87-5	Benzidine	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	149
92-87-5	Benzidine	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	145
2634-33-5	Benzisothiazol, 1,2-	Benzisothiazol, 1,2-	390	390
2634-33-5	Benzisothiazol, 1,2-	Benzisothiazol, 1,2-	500	500
2634-33-5	Benzisothiazol, 1,2-	Benzisothiazol, 1,2-	500	509
2634-33-5	Benzisothiazol, 1,2-	Benzisothiazol, 1,2-	270	270
2634-33-5	Benzisothiazol, 1,2-	Benzisothiazol, 1,2-	270	274
2634-33-5	Benzisothiazol, 1,2-	Benzisothiazol, 1,2-	390	391
100-47-0	Benzo nitrile	Cyanobenzene::Phenyl cyanide	430	432
98-07-7	Benzo trichloride		260	263
98-88-4	Benzoyl chloride	Benzene carbonyl chloride	110	112
100-51-6	Benzyl alcohol	Hydroxy toluene	310	312
100-44-7	Benzyl chloride	Chloro toluene, alpha-	260	266
501-53-1	Benzyl chloro formate		110	113
140-29-4	Benzyl cyanide	Phenyl acetonitrile	430	432
103-67-3	Benzyl methylamine, N-	Methyl benzylamine, N-	140	146
103-67-3	Benzyl methylamine, N-	Methyl benzylamine, N-	290	292
92-87-5	Biphenyl 4,4'-diamine, 1,1'-	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	145
92-87-5	Biphenyl 4,4'-diamine, 1,1'-	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	149
1675-54-3	Bis (4-(2,3-epoxypropoxy)phenyl)propane	Bis (4-(2,3-epoxypropoxy)phenyl)propane::Isopropylidenediphenol diglycidyl ether, 4,4'-	270	275
1675-54-3	Bis phenol A diglycidyl ether	Bis (4-(2,3-epoxypropoxy)phenyl)propane::Isopropylidenediphenol diglycidyl ether, 4,4'-	270	275
mix	Black Liquor		590	590
109-63-7	Boron fluoride ethyl ether	Boron fluoride ethyl ether::Boron trifluoride diethyl etherate	590	590
10294-34-5	Boron trichloride		350	350
10294-34-5	Boron trichloride		360	360
7637-07-2	Boron trifluoride		350	350
7637-07-2	Boron trifluoride		360	360
109-63-7	Boron trifluoride diethyl etherate	Boron fluoride ethyl ether::Boron trifluoride diethyl etherate	590	590
353-42-4	Boron trifluoride dimethyl etherate		590	590
109-63-7	Boron trifluoride etherate	Boron fluoride ethyl ether::Boron trifluoride diethyl etherate	590	590
1003-09-4	Brom thiophene, 2-		500	509
7726-95-6	Bromine		330	330
460-00-4	Bromo 4-fluorobenzene, 1-	Bromo 4-fluorobenzene, 1-	260	263
460-00-4	Bromo fluorobenzene, 4-	Bromo 4-fluorobenzene, 1-	260	263
74-83-9	Bromo methane	Bromo methane	260	261
927-68-4	Bromoethyl Acetate, 2-		220	222
927-68-4	Bromoethyl Acetate, 2-		260	261
75-25-2	Bromoform		260	261
78-94-4	But-3-en-2-one	But-3-en-2-one	390	391

CAS Number	Chemical Name	Synonym	Class	Sub-Class
75-65-0	Butanol, tert-	Methyl propan-2-ol, 2-	310	313
78-93-3	Butanone	Butanone::MEK	390	391
96-29-7	Butanone oxime, 2-	Butanone oxime, 2-	150	150
123-73-9	Butenal, 2-	Butenal, 2-::Ethane diol dipropionate, 1,2-::Methyl acrolein::Propylene aldehyde	120	121
111-76-2	Butoxy ethanol, 2-	Ethylene glycol monobutyl ether	240	245
143-22-6	Butoxytriglycol		240	245
123-86-4	Butyl acetate, n-		220	222
141-32-2	Butyl acrylate, n-	Acrylic acid n-butyl ester::Propenoic acid butyl ester, 2-	220	223
71-36-3	Butyl alcohol, n-	Butanol, n-::Butyl alcohol, n-	310	311
109-73-9	Butyl amine		140	141
75-64-9	Butyl amine, tert-	Amino 2-methylpropane, 2-::Trimethyl aminomethane	140	143
112-07-2	Butyl Cellosolve Acetate		240	245
29911-28-2	Butyl Dipropasol Solvent		240	245
142-96-1	Butyl ether, n-		240	241
1118-46-3	Butyl stannium trichloride	Butyl stannium trichloride	470	470
592-34-7	Butylchloroformate		110	113
592-34-7	Butylchloroformate		260	260
592-34-7	Butylchloroformate		220	221
123-72-8	Butyraldehyde, n-	Butyraldehyde, n-	120	121
107-92-6	Butyric Acid		100	102
10112-91-1	Calomel	Calomel	340	340
75-15-0	Carbon disulfide		500	502
630-08-0	Carbon monoxide		350	350
56-23-5	Carbon tetrachloride	Tetrachloro methane	260	261
75-73-0	Carbon tetrafluoride	Carbon tetrafluoride	260	261
41575-94-4	Carboplatin		990	991
154-93-8	Carmustine		990	991
1336-21-6	Caustic ammonia	Caustic ammonia	380	380
1310-73-2	Caustic soda	Caustic soda	380	380
110-80-5	Cellosolve acetate	Cellosolve acetate::Ethyl Cellosolve®::Ethylene glycol monoethyl ether	240	245
mix	Chemguard S-764P14A	Chemguard S-764P14A	590	590
mix	Chemidize 727 ND		590	590
107-05-1	Chlor allylene	Chlor allylene::Chloro prene, 3-	260	265
76-06-2	Chlor trinitromethan	Chloro picrin::Nitro chlormethan	260	261
57-74-9	Chlordane		260	261
7782-50-5	Chlorine		330	330
7782-50-5	Chlorine		350	350
10545-99-0	Chlorine sulfide	Sulphur dichloride	500	502
7790-91-2	Chlorine trifluoride		350	350
96-24-2	Chloro 1,2-propanediol, 3-		310	314
95-49-8	Chloro 1-methylbenzene, 2-	Chloro 1-methylbenzene, 2-	260	263
95-49-8	Chloro 1-methylbenzene, 2-	Chloro 1-methylbenzene, 2-	310	316
106-89-8	Chloro 2,3-epoxy propane, 1-	Chloro 2,3-epoxy propane, 1-	260	261
106-89-8	Chloro 2,3-epoxy propane, 1-	Chloro 2,3-epoxy propane, 1-	270	275
88-73-3	Chloro 2-nitrobenzene, 1-	Chloro 2-nitrobenzene, 1-	260	263



DuPont Permeation Guide



106-99-0	Butadiene, 1,3-	Vinyl ethylene	290	296
123-72-8	Butanal, n-	Butyraldehyde, n-	120	121
71-36-3	Butanol, 1-	Butanol, n-; Butyl alcohol, n-	310	311
71-36-3	Butanol, n-	Butanol, n-; Butyl alcohol, n-	310	311



APPENDIX
CHEMICAL INDEX - Alphabetical Listing - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class
88-73-3	Chloro 2-nitrobenzene, 1-	Chloro 2-nitrobenzene, 1-	440	442
79-11-8	Chloro acetic acid		100	103
78-95-5	Chloro acetone	Chloro propan-2-one, 1-	390	391
79-04-9	Chloro acetyl chloride		110	111
920-37-6	Chloro acrylonitrile, 2-		430	431
920-37-6	Chloro acrylonitrile, 2-		260	264
106-47-8	Chloro aniline, p-	Chloro benzenamine, 4-	140	145
106-47-8	Chloro benzenamine, 4-	Chloro benzenamine, 4-	140	145
108-90-7	Chloro benzene	Phenyl chloride	260	263
5216-25-1	Chloro benzotrichloride, 4-		260	263
98-56-6	Chloro benzotrifluoride, 4-		260	263
107-07-3	Chloro ethanol, 2-	Ethylene chlorohydrin::Glycol chlorohydrin	310	315
107-07-3	Chloro ethanol, 2-	Ethylene chlorohydrin::Glycol chlorohydrin	260	261
75-01-4	Chloro ethene	Chloro ethene	260	264
107-30-2	Chloro methyl methyl ether	Methoxy chloromethane	240	241
106-48-9	Chloro phenol, p-	Hydroxy chlorobenzene	310	316
106-48-9	Chloro phenol, p-	Hydroxy chlorobenzene	260	263
76-06-2	Chloro picrin	Chloro picrin::Nitro chlormethan	260	261
107-05-1	Chloro prene, 3-	Chlor allylene::Chloro prene, 3-	260	265
78-95-5	Chloro propan-2-one, 1-	Chloro propan-2-one, 1-	390	391
100-44-7	Chloro toluene, alpha-	Chloro toluene, alpha-	260	266
95-49-8	Chloro toluene, o-	Chloro 1-methylbenzene, 2-	260	263
95-49-8	Chloro toluene, o-	Chloro 1-methylbenzene, 2-	310	316
105-39-5	Chloroacetic ethylester		220	222
67-66-3	Chloroform	Trichloro methane	260	261
7790-94-5	Chlorosulfonic acid		370	370
7790-94-5	Chlorosulfonic acid		500	504
1333-82-0	Chromic acid (CrO3)		370	370
1333-82-0	Chromic acid (H2SO4 x CrO3)		370	370
15663-27-1	Cisplatin		990	991
77-92-9	Citric acid	Hydroxy 1,2,3-propanetricarboxylic acid, 2-	100	104
68956-56-9	Citrus Terpenes Mixture		140	148
8001-58-9	Creosote		310	316
95-48-7	Cresol o-	Hydroxy toluene, o-	310	316
1319-77-3	Cresols, mixed isomers	Cresylic acid::Methyl phenols	310	316
1319-77-3	Cresylic acid	Cresylic acid::Methyl phenols	310	316
123-73-9	Croton aldehyde	Butenal, 2-::Ethane diol dipropionate, 1,2-::Methyl acrolein::Propylene aldehyde	120	121
8002-05-9	Crude oil, California	Mineral oil	290	291
8002-05-9	Crude oil, California	Mineral oil	290	294
98-82-8	Cumene	Isopropyl benzene::Phenyl propane, 2-	290	292
420-04-2	Cyanamide		130	132
108-77-0	Cyanide chloride	Trichloro 1,3,5-triazine, 2,4,6-	270	274
108-77-0	Cyanide chloride	Trichloro 1,3,5-triazine, 2,4,6-	260	263
100-47-0	Cyanobenzene	Cyanobenzene::Phenyl cyanide	430	432
107-13-1	Cyanoethylene	Cyanoethylene::Propenenitrile, 2-::Propenoic acid nitrile::Vinyl cyanide	430	431

CAS Number	Chemical Name	Synonym	Class	Sub-Class
75-05-8	Cyanomethane	Cyanomethane::Ethane nitrile::Ethyl nitrile::Methyl cyanide	430	431
75-86-5	Cyanopropan-2-ol, 2-	Cyanopropan-2-ol, 2-::Hydroxy 2-methylpropionitrile, 2-::Hydroxy isobutyronitrile	310	313
75-86-5	Cyanopropan-2-ol, 2-	Cyanopropan-2-ol, 2-::Hydroxy 2-methylpropionitrile, 2-::Hydroxy isobutyronitrile	430	431
110-82-7	Cyclo hexane		290	291
108-94-1	Cyclo hexanone	Hexanone::Pimelic ketone	390	391
3173-53-3	Cyclo hexyl isocyanate		210	211
1552-12-1	Cyclo octadiene		290	296
50-18-0	Cyclo phosphamide		990	991
108-93-0	Cyclohexanol	Hexalin	310	312
mix	Dahlgren Decon solution	Dahlgren Decon solution	590	590
117-81-7	DEHP	DEHP	220	226
108-83-8	Di Isobutyl Ketone	Dimethyl-4-Heptanone, 2,6-	390	391
123-42-2	Diacetone Alcohol		390	391
13360-57-1	Diamino sulfo chloride		260	261
92-87-5	Diaminobiphenyl, 4,4'-	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	149
92-87-5	Diaminobiphenyl, 4,4'-	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	145
92-87-5	Diaminodiphenyl, p-	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	149
92-87-5	Diaminodiphenyl, p-	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	145
101-77-9	Diaminodiphenylmethane, 4,4'-	Diaminodiphenylmethane, 4,4'-	140	149
101-77-9	Diaminodiphenylmethane, 4,4'-	Diaminodiphenylmethane, 4,4'-	140	145
107-15-3	Diaminoethane, 1,2-	Diaminoethane, 1,2-	140	148
19287-45-7	Diborane		350	350
96-12-8	Dibromo -3-chloropropane, 1,2-		260	261
106-93-4	Dibromoethane, 1,2-	Dibromoethane, 1,2-	260	261
84-74-2	Dibutyl 1,2-benzenedicarboxylate	Dibutyl 1,2-benzenedicarboxylate	220	226
84-74-2	Dibutyl phthalate	Dibutyl 1,2-benzenedicarboxylate	220	226
109-43-3	Dibutyl sebacate		220	224
95-50-1	Dichlorbenzen, 1,2-		260	263
541-73-1	Dichlorbenzen, 1,3-		260	263
106-46-7	Dichlorbenzen, 1,4-		260	263
107-06-2	Dichlorethane, 1,2-	Ethylene dichloride	260	261
534-07-6	Dichloro -2-propanone, 1,3-	Dichloro -2-propanone, 1,3-	260	261
534-07-6	Dichloro -2-propanone, 1,3-	Dichloro -2-propanone, 1,3-	390	391
101-14-4	Dichloro -4,4'-methylenedianiline, 2,2'-	Dichloro -4,4'-methylenedianiline, 2,2'-	140	149
30894-74-7	Dichloro -6-isopropyl-S-triazine, 2,4-		270	274
534-07-6	Dichloro acetone, 1,3-	Dichloro -2-propanone, 1,3-	390	391
534-07-6	Dichloro acetone, 1,3-	Dichloro -2-propanone, 1,3-	260	261
79-36-7	Dichloro acetyl chloride		110	111
95-76-1	Dichloro aniline, 3,4-	Amino 3,4-dichlorobenzene, 1-	260	263
95-76-1	Dichloro aniline, 3,4-	Amino 3,4-dichlorobenzene, 1-	140	145
111-44-4	Dichloro ethyl ether		240	241
111-44-4	Dichloro ethyl ether		260	261
75-25-4	Dichloro ethylene, 1,1-	Dichloro ethylene, 1,1-	260	264



DuPont Permeation Guide



75-09-2	Dichloro methane	Methylene chloride	260	261
542-75-6	Dichloro propene, 1,3-		260	261



APPENDIX
CHEMICAL INDEX - Alphabetical Listing - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class	CAS Number	Chemical Name	Synonym	Class	Sub-Class
78-88-6	Dichloro propene, 2,3-		260	261	75-18-3	Dimethyl sulfide		500	502
4109-96-0	Dichloro silane		480	480	67-68-5	Dimethyl sulfoxide		500	503
628-76-2	Dichloropentane		260	261	108-83-8	Dimethyl-4-Heptanone, 2,6-	Dimethyl-4-Heptanone, 2,6-	390	391
111-69-3	Dicyanobutane, 1,4-	Adipic acid dinitrile::Adipic acid nitrile::Adipyl dinitrile::Dicyanobutane, 1,4-	430	431	108-59-8	Dimethylmalonate	Dimethylmalonate	220	224
mix	Diesel automotive test fuel		290	291	108-59-8	Dimethylmalonate	Dimethylmalonate	220	220
68334-30-5	Diesel fuel		290	291	534-52-1	Dinitro-o-cresol, 4,6-	Dinitro-o-cresol, 4,6-	440	442
mix	Diesel Fuel Grade D-2		290	290	534-52-1	Dinitro-o-cresol, 4,6-	Dinitro-o-cresol, 4,6-	310	316
111-42-2	Diethanolamine		140	142	534-52-1	Dinitrocresol	Dinitro-o-cresol, 4,6-	440	442
109-89-7	Diethyl amine	Ethyl ethanamine, N-	140	142	534-52-1	Dinitrocresol	Dinitro-o-cresol, 4,6-	310	316
91-66-7	Diethyl aniline crude		140	146	123-91-1	Dioxane, 1,4-		270	278
91-66-7	Diethyl aniline, N,N-		140	146	101-68-8	Diphenyl methane diisocyanate, 4,4'-	Methylene diphenyl diisocyanate, 4,4'-	210	212
25340-17-4	Diethyl benzene		290	292	503-38-8	Diphosgene		260	260
121-44-8	Diethyl ethanamine, N,N-	Diethyl ethanamine, N,N-	140	143	503-38-8	Diphosgene		220	221
60-29-7	Diethyl ether	Diethyl ether	240	241	503-38-8	Diphosgene		110	113
117-81-7	Diethyl hexyl phthalate	DEHP	220	226	29911-27-1	Dipropylene Glycol Monopropyl Ether		240	245
91-67-8	Diethyl m-toluidine, N,N-		140	145	1313-82-2	Disodium sulfide		340	340
64-67-5	Diethyl sulfate	Sulfuric acid diethyl ester	500	507	10025-67-9	Disulphur dichloride	Disulphur dichloride	500	502
111-46-6	Diethylene Glycol		310	314	1321-74-0	Divinyl Benzene		290	292
112-34-5	Diethylene glycol monobutyl ether	Diethylene glycol monobutyl ether	240	245	mix	Dowtherm Heat Transfer Fluid	Dowtherm Heat Transfer Fluid	590	590
112-34-5	Diethylene glycol monobutyl ether	Diethylene glycol monobutyl ether	310	311	25136-40-9	Doxorubicin HCl		990	991
111-77-3	Diethylene Glycol Monomethyl Ether		240	245	mix	DuPont Activator 193S		590	590
6881-94-3	Diethylene Glycol Monopropyl Ether		240	245	mix	DuPont Activator 4505S		590	590
110-91-8	Diethylene imide oxide	Diethylene imide oxide	270	278	mix	DuPont Activator 4507S		590	590
110-91-8	Diethylene imide oxide	Diethylene imide oxide	270	274	15520-10-2	Dytek® A		140	148
111-40-0	Diethylene triamine		140	148	106-89-8	Epichlorohydrin	Chloro 2,3-epoxy propane, 1-	260	261
755-95-3	Diiodo-1,1,2,2-tetrafluorobutane, 1,4-		260	261	106-89-8	Epichlorohydrin	Chloro 2,3-epoxy propane, 1-	270	275
7087-68-5	Diisopropylethylamine (DIPEA)		140	141	75-21-8	Epoxy ethane	Epoxy ethane	270	275
5394-63-8	Diketene Acetone		270	278	75-56-9	Epoxy propane, 1,2-	Epoxy propane, 1,2-	270	275
5394-63-8	Diketene Acetone		390	391	107-21-1	Ethane 1,2-diol	Ethane 1,2-diol::Glycol alcohol	310	314
127-19-5	Dimethyl acetamide, N,N-		130	132	144-62-7	Ethane dioic acid	Ethane dioic acid	100	104
124-40-3	Dimethyl amine		140	142	123-73-9	Ethane diol dipropanoate, 1,2-	Butenal, 2-::Ethane diol dipropanoate, 1,2-::Methyl acrolein::Propylene aldehyde	120	121
121-69-7	Dimethyl aniline, N,N-	Dimethyl phenylamine, N,N-	140	146	75-05-8	Ethane nitrile	Cyanomethane::Ethane nitrile::Ethyl nitrile::Methyl cyanide	430	431
75-78-5	Dimethyl dichlorosilane		480	480	75-08-1	Ethane thiol	Ethane thiol	500	501
115-10-6	Dimethyl ether		240	241	79-00-5	Ethane trichloride	Ethane trichloride	260	261
68-12-2	Dimethyl formamide, N,N-		130	132	64-17-5	Ethanol	Ethyl alcohol::Spiritus	310	311
624-49-7	Dimethyl fumarate		220	224	141-43-5	Ethanol amine	Amino ethanol, 2-	140	141
57-14-7	Dimethyl hydrazine, N,N-		280	280	141-43-5	Ethanol amine	Amino ethanol, 2-	310	311
67-64-1	Dimethyl ketal	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391	75-36-5	Ethanoyl chloride	Acetic chloride::Ethanoyl chloride	110	111
67-64-1	Dimethyl ketone	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391	594-45-6	Ethansulphonic acid		500	504
624-48-6	Dimethyl maleate		220	224	110-80-5	Ethoxy ethanol, 2-	Cellosolve acetate::Ethyl Cellosolve®::Ethylene glycol monoethyl ether	240	245
593-74-8	Dimethyl mercury in decane		470	470	111-15-9	Ethoxy ethylacetat	Acetic acid 2 ethoxy ethyl ester::Ethyl glycol acetate::Ethylene glycol mono ethyl ether acetate	240	245
756-79-6	Dimethyl Methyl Phosphonate		460	462	112-50-5	Ethoxytriglycol		240	245
62-75-9	Dimethyl nitrosamine	Methyl N-nitrosomethanamine, N-	450	450	141-78-6	Ethyl acetate	Acetic acid ethyl ester	220	222
121-69-7	Dimethyl phenylamine, N,N-	Methyl phenylamine, N,N-	140	146	140-88-5	Ethyl acrylate	Acrylic acid ethyl ester	220	223
77-78-1	Dimethyl sulfate	Sulfuric acid dimethyl ester	500	507	64-17-5	Ethyl alcohol	Ethyl alcohol::Spiritus	310	311



APPENDIX
CHEMICAL INDEX - Alphabetical Listing - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class
75-04-7	Ethyl amine		140	141
100-41-4	Ethyl benzene	Phenyl ethane	290	292
97-95-0	Ethyl Butanol		310	312
110-80-5	Ethyl Cellosolve®	Cellosolve acetate::Ethyl Cellosolve®::Ethylene glycol monoethyl ether	240	245
75-00-3	Ethyl chloride		260	261
109-89-7	Ethyl ethanamine, N-	Ethyl ethanamine, N-	140	142
60-29-7	Ethyl ether	Diethyl ether	240	241
111-15-9	Ethyl glycol acetate	Acetic acid 2 ethoxy ethyl ester::Ethyl glycol acetate::Ethylene glycol mono ethyl ether acetate	240	245
149-57-5	Ethyl hexanoic acid		100	102
75-08-1	Ethyl mercaptan	Ethane thiol	500	501
75-05-8	Ethyl nitrile	Cyanomethane::Ethane nitrile::Ethyl nitrile::Methyl cyanide	430	431
56-38-2	Ethyl parathion		460	462
541-41-3	Ethylchloroformate		260	260
541-41-3	Ethylchloroformate		110	113
541-41-3	Ethylchloroformate		220	221
79-10-7	Ethylene carboxylic acid	Acroleic acid::Ethylene carboxylic acid::Propene acid	100	102
107-07-3	Ethylene chlorohydrin	Ethylene chlorohydrin::Glycol chlorohydrin	310	315
107-07-3	Ethylene chlorohydrin	Ethylene chlorohydrin::Glycol chlorohydrin	260	261
107-15-3	Ethylene diamine	Diaminoethane, 1,2-	140	148
106-93-4	Ethylene dibromide	Dibromoethane, 1,2-	260	261
107-06-2	Ethylene dichloride	Ethylene dichloride	260	261
107-21-1	Ethylene glycol	Ethane 1,2-diol::Glycol alcohol	310	314
818-61-1	Ethylene glycol acrylate		220	223
111-15-9	Ethylene glycol mono ethyl ether acetate	Acetic acid 2 ethoxy ethyl ester::Ethyl glycol acetate::Ethylene glycol mono ethyl ether acetate	240	245
111-76-2	Ethylene glycol monobutyl ether	Ethylene glycol monobutyl ether	240	245
110-80-5	Ethylene glycol monoethyl ether	Cellosolve acetate::Ethyl Cellosolve®::Ethylene glycol monoethyl ether	240	245
112-25-4	Ethylene Glycol Monohexyl Ether		240	245
109-86-4	Ethylene glycol monomethyl ether	Ethylene glycol monomethyl ether	240	245
109-86-4	Ethylene glycol monomethyl ether	Ethylene glycol monomethyl ether	310	311
110-49-6	Ethylene glycol monomethyl ether acetate	Acetic acid 2 methoxy ethyl ester::Ethylene glycol monomethyl ether acetate	240	245
151-56-4	Ethylene imine	Aziridine	270	274
75-21-8	Ethylene oxide	Epoxy ethane	270	275
127-18-4	Ethylene tetrachloride	Ethylene tetrachloride	260	264
79-01-6	Ethylene trichloride	Ethylene trichloride	260	264
33419-42-0	Etoposide (Toposar®, Teva)		990	991
7758-94-3	Ferric (II) chloride		340	340
7705-08-0	Ferric (III) chloride		340	340
7782-41-4	Fluorine		350	350
462-06-6	Fluorobenzene		260	263
16872-11-0	Fluoroboric acid		370	370
16961-83-4	Fluorosilicic acid		370	370
7789-21-1	Fluorosulfonic acid		370	370
51-21-8	Fluorouracil, 5-		990	991
50-00-0	Formaldehyde	Formalin	120	121

CAS Number	Chemical Name	Synonym	Class	Sub-Class
50-00-0	Formalin		120	121
64-18-6	Formic acid		100	102
68476-30-2	Fuel-oil no 2		290	291
98-01-1	Furaldehyde, 2-	Furaldehyde, 2-	270	277
110-00-9	Furan		270	277
98-01-1	Furfural	Furaldehyde, 2-	270	277
82410-32-0	Ganciclovir		990	991
	mix Gasoline, leaded		290	291
86290-81-5	Gasoline, unleaded		290	291
308066-70-8	Gasoline, unleaded E10 (87 Octane)		290	291
95058-81-4	Gemcitabine		990	991
111-30-8	Glutaral	Glutaral::Pentanedial, 1,5-	120	121
111-30-8	Glutaraldehyde	Glutaral::Pentanedial, 1,5-	120	121
56-81-5	Glycerine	Glycerine::Propane -1,2,3-triol	310	314
56-81-5	Glycerol	Glycerine::Propane -1,2,3-triol	310	314
107-21-1	Glycol alcohol	Ethane 1,2-diol::Glycol alcohol	310	314
107-07-3	Glycol chlorohydrin	Ethylene chlorohydrin::Glycol chlorohydrin	310	315
107-07-3	Glycol chlorohydrin	Ethylene chlorohydrin::Glycol chlorohydrin	260	261
79-14-1	Glycolic acid	Hydroxy acetic acid	100	103
	mix Green Liquor		590	590
142-82-5	Heptane		290	291
87-68-3	Hexachloro butadiene		260	264
58-89-9	Hexachloro cyclohexane, 1,2,3,4,5,6-	Hexachloro cyclohexane, 1,2,3,4,5,6-	260	261
76-16-4	Hexafluoro ethane	Perfluoroethane	260	261
382-10-5	Hexafluoro isobutylene	Trifluoro 2-(trifluoromethyl)propene, 3,3,3-	260	261
108-93-0	Hexalin	Hexalin	310	312
999-97-3	Hexamethyl disilazane	Hexamethyl disilazane, 1,1,1,3,3,3-	480	480
999-97-3	Hexamethyl disilazane, 1,1,1,3,3,3-	Hexamethyl disilazane, 1,1,1,3,3,3-	480	480
124-09-4	Hexamethylene diamine		140	148
822-06-0	Hexamethylene diisocyanate		210	211
110-54-3	Hexane, n-		290	291
108-94-1	Hexanone	Hexanone::Pimelic ketone	390	391
592-41-6	Hexene		290	294
108-10-1	Hexone	Isobutyl methyl ketone::Methyl pentan-2-one, 4-	390	391
112-59-4	Hexyl Carbitol Solvent		240	245
6092-54-2	Hexyl chloro formate, 2-		220	221
302-01-2	Hydrazine		280	280
10217-52-4	Hydrazine hydrate		280	280
10034-85-2	Hydriodic acid		370	370
10035-10-6	Hydrobromic acid		370	370
7647-01-0	Hydrochloric acid		370	370
7664-39-3	Hydrofluoric acid		350	350
7664-39-3	Hydrofluoric acid		370	370
10035-10-6	Hydrogen bromide		370	370
10035-10-6	Hydrogen bromide		350	350



50-00-0	Formalin	Formalin	120	121
50-00-0	Formalin	Formalin	120	121



APPENDIX
CHEMICAL INDEX - Alphabetical Listing - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class	CAS Number	Chemical Name	Synonym	Class	Sub-Class
7647-01-0	Hydrogen chloride		350	350					
7647-01-0	Hydrogen chloride		370	370	1675-54-3	Isopropylidenediphenol diglycidyl ether, 4,4'-	Bis (4-(2,3-epoxypropoxy)phenyl) propane::Isopropylidenediphenol diglycidyl ether, 4,4'-	270	275
74-90-8	Hydrogen cyanide		350	350	50815-00-4	JP-4 Jet Fuel		290	291
74-90-8	Hydrogen cyanide		370	370	94114-58-6	JP-8 Jet Fuel		290	291
74-90-8	Hydrogen cyanide		340	345	8008-20-6	Kerosene		290	291
7664-39-3	Hydrogen fluoride		370	370	67-64-1	Ketone propane	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391
7664-39-3	Hydrogen fluoride		350	350	50-21-5	Lactic Acid		100	103
7722-84-1	Hydrogen peroxide		300	301	541-25-3	Lewisite (L), FINABEL 0.7.C		470	470
7783-07-5	Hydrogen selenide		350	350	541-25-3	Lewisite (L), MIL-STD-282		470	470
7783-06-4	Hydrogen sulfide		350	350	5989-27-5	Limonene d-	Methyl 4-isopropenyl-1-cyclohexene, 1-	290	296
7783-06-4	Hydrogen sulfide		500	502	58-89-9	Lindane	Hexachloro cyclohexane, 1,2,3,4,5,6-	260	261
77-92-9	Hydroxy 1,2,3-propanetricarboxylic acid, 2-	Hydroxy 1,2,3-propanetricarboxylic acid, 2-	100	104	7447-41-8	Lithium chloride		340	340
60-24-2	Hydroxy 1-ethanethiol, 2-	Hydroxy 1-ethanethiol, 2-	500	501	1310-65-2	Lithium hydroxide		380	380
60-24-2	Hydroxy 1-ethanethiol, 2-	Hydroxy 1-ethanethiol, 2-	310	311	8052-41-3	Low boiling point naphtha - unspecified	Low boiling point naphtha - unspecified	290	291
75-86-5	Hydroxy 2-methylpropionitrile, 2-	Cyanopropan-2-ol, 2-::Hydroxy 2-methylpropionitrile, 2-::Hydroxy isobutyronitrile	310	313		m-Cresol 55%, p-Cresol 30%, Phenol 15%		310	316
75-86-5	Hydroxy 2-methylpropionitrile, 2-	Cyanopropan-2-ol, 2-::Hydroxy 2-methylpropionitrile, 2-::Hydroxy isobutyronitrile	430	431	121-75-5	Malathion		460	462
88-75-5	Hydroxy 2-nitrobenzene, 1-	Hydroxy 2-nitrobenzene, 1-	310	316	108-31-6	Maleic anhydride		160	161
88-75-5	Hydroxy 2-nitrobenzene, 1-	Hydroxy 2-nitrobenzene, 1-	440	442	78-93-3	MEK	Butanone::MEK	390	391
79-14-1	Hydroxy acetic acid	Hydroxy acetic acid	100	103	68-11-1	Mercapto acetic acid	Mercapto acetic acid	500	501
106-48-9	Hydroxy chlorobenzene	Hydroxy chlorobenzene	260	263	68-11-1	Mercapto acetic acid	Mercapto acetic acid	100	103
106-48-9	Hydroxy chlorobenzene	Hydroxy chlorobenzene	310	316	60-24-2	Mercapto ethanol	Hydroxy 1-ethanethiol, 2-	310	311
					60-24-2	Mercapto ethanol	Hydroxy 1-ethanethiol, 2-	500	501
75-86-5	Hydroxy isobutyronitrile	Cyanopropan-2-ol, 2-::Hydroxy 2-methylpropionitrile, 2-::Hydroxy isobutyronitrile	430	431	10112-91-1	Mercuric I chloride	Calomel	340	340
					7487-94-7	Mercuric II chloride		340	340
75-86-5	Hydroxy isobutyronitrile	Cyanopropan-2-ol, 2-::Hydroxy 2-methylpropionitrile, 2-::Hydroxy isobutyronitrile	310	313	7439-97-6	Mercury		330	330
					79-41-4	Methacrylic acid	Methyl propenoic acid, 2-	100	102
107-18-6	Hydroxy propene	Hydroxy propene::Propen 1-ol, 2-::Vinyl carbinol	310	311	124-63-0	Methanesulfonyl chloride		500	505
100-51-6	Hydroxy toluene	Hydroxy toluene	310	312	75-75-2	Methanesulphonic acid		500	504
95-48-7	Hydroxy toluene, o-	Hydroxy toluene, o-	310	316	74-93-1	Methanethiol	Methanethiol	500	501
6303-21-5	Hypophosphorus acid	Phosphinic acid	370	370	74-93-1	Methanethiol	Methanethiol	380	380
3778-73-2	Ilofamide		990	991	74-93-1	Methanethiol	Methanethiol	350	350
7553-56-2	Iodine		330	330	67-56-1	Methanol		310	311
74-88-4	Iodomethane	Iodomethane	260	261	16752-77-5	Methomyl		230	233
100286-90-6	Irinotecan		990	991	59-05-2	Methotrexate		990	991
123-92-2	Iso Amyl Acetate		220	222	1634-04-4	Methoxy 2-methylpropane, 2-	Methoxy 2-methylpropane, 2-	240	241
123-51-3	Isoamyl alcohol	Methyl butan-1-ol, 3-	310	312	107-30-2	Methoxy chloromethane	Methoxy chloromethane	240	241
78-83-1	Isobutanol		310	311	109-86-4	Methoxy ethanol, 2	Ethylene glycol monomethyl ether	310	311
78-83-1	Isobutanol		310	312	109-86-4	Methoxy ethanol, 2	Ethylene glycol monomethyl ether	240	245
108-10-1	Isobutyl methyl ketone	Isobutyl methyl ketone::Methyl pentan-2-one, 4-	390	391	110-49-6	Methoxy ethylacetate, 2-	Acetic acid 2 methoxy ethyl ester::Ethylene glycol monomethyl ether acetate	240	245
99-63-8	Isophthaloyldichloride		110	112	112-35-6	Methoxytriglycol		240	245
67-63-0	Isopropanol	Isopropanol::Isopropyl alcohol	310	312	1658-42-0	Methyl -2-pyridyl acetate		220	222
108-21-4	Isopropyl Acetate		220	222	4553-62-2	Methyl 1,5-pentantedinitrile, 2-		430	431
67-63-0	Isopropyl alcohol	Isopropanol::Isopropyl alcohol	310	312	80-62-6	Methyl 2-methyl-2-propenoate	Methyl 2-methyl-2-propenoate	220	223
					872-50-4	Methyl 2-pyrrolidon, N-		130	132
75-31-0	Isopropyl amine	Amino propane, 2-	140	141	5989-27-5	Methyl 4-isopropenyl-1-cyclohexene, 1-	Methyl 4-isopropenyl-1-cyclohexene, 1-	290	296
98-82-8	Isopropyl benzene	Isopropyl benzene::Phenyl propane, 2-	290	292	79-20-9	Methyl Acetate		220	222
29921-57-1	Isopropyl bromoacetate		260	260					
29921-57-1	Isopropyl bromoacetate		220	222					



DuPont Permeation Guide



29921-57-1	Isopropyl bromoacetate		110	110
------------	------------------------	--	-----	-----



APPENDIX
CHEMICAL INDEX - Alphabetical Listing - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class
67-64-1	Methyl acetyl	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391
123-73-9	Methyl acrolein	Butenal, 2-::Ethane diol dipropionate, 1,2-::Methyl acrolein::Propylene aldehyde	120	121
96-33-3	Methyl acrylate		220	223
74-89-5	Methyl amine		140	141
95-53-4	Methyl aniline, o-	Methyl aniline, o-	140	145
108-88-3	Methyl benzol	Methyl benzol	290	292
103-67-3	Methyl benzylamine, N-	Methyl benzylamine, N-	290	292
103-67-3	Methyl benzylamine, N-	Methyl benzylamine, N-	140	146
74-83-9	Methyl bromide	Bromo methane	260	261
123-51-3	Methyl butan-1-ol, 3-	Methyl butan-1-ol, 3-	310	312
74-87-3	Methyl chloride		260	261
79-22-1	Methyl chloro formate		110	113
71-55-6	Methyl chloroform	Methyl chloroform::Methyl trichloromethane	260	261
75-05-8	Methyl cyanide	Cyanomethane::Ethane nitrile::Ethyl nitrile::Methyl cyanide	430	431
78-93-3	Methyl ethyl ketone	Butanone::MEK	390	391
1338-23-4	Methyl Ethyl Ketone Peroxide	Methyl Ethyl Ketone Peroxide	300	300
1338-23-4	Methyl Ethyl Ketone Peroxide	Methyl Ethyl Ketone Peroxide	300	302
96-29-7	Methyl ethyl ketoxime	Butanone oxime, 2-	150	150
593-53-3	Methyl fluoride		260	261
123-39-7	Methyl formamide, N-		130	132
107-31-3	Methyl formate		220	221
60-34-4	Methyl hydrazine		280	280
616-47-7	Methyl imidazole, 1-		270	274
74-88-4	Methyl iodide	Iodomethane	260	261
105-44-2	Methyl isobutyl Ketoxime		150	150
624-83-9	Methyl isocyanate		210	211
563-80-4	Methyl isopropyl Ketone		390	391
67-64-1	Methyl ketone	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391
74-93-1	Methyl mercaptan	Methanethiol	500	501
74-93-1	Methyl mercaptan	Methanethiol	350	350
74-93-1	Methyl mercaptan	Methanethiol	380	380
80-62-6	Methyl methacrylate	Methyl 2-methyl-2-propenoate	220	223
62-75-9	Methyl N-nitrosomethanamine, N-	Methyl N-nitrosomethanamine, N-	450	450
108-10-1	Methyl pentan-2-one, 4-	Isobutyl methyl ketone::Methyl pentan-2-one, 4-	390	391
1319-77-3	Methyl phenols	Cresylic acid::Methyl phenols	310	316
75-65-0	Methyl propan-2-ol, 2-	Methyl propan-2-ol, 2-	310	313
79-41-4	Methyl propenoic acid, 2-	Methyl propenoic acid, 2-	100	102
107-87-9	Methyl Propyl Ketone		390	391
109-06-8	Methyl pyridine, 2-	Methyl pyridine, 2-	270	271
108-99-6	Methyl pyridine, 3-	Methyl pyridine, 3-	270	271
119-36-8	Methyl salicylate		220	226
1634-04-4	Methyl tert-butyl ether	Methoxy 2-methylpropane, 2-	240	241
71-55-6	Methyl trichloromethane	Methyl chloroform::Methyl trichloromethane	260	261
75-79-6	Methyl trichlorosilane		480	480
78-94-4	Methyl vinyl ketone	But-3-en-2-one	390	391

CAS Number	Chemical Name	Synonym	Class	Sub-Class
1761-71-3	Methylen Isocyclohexylamine, 4,4-		140	148
101-14-4	Methylene bis(2-Chloroaniline), 4,4-	Dichloro -4,4'-methylenedianiline, 2,2'-	140	149
74-95-3	Methylene bromide		260	261
75-09-2	Methylene chloride	Methylene chloride	260	261
101-77-9	Methylene dianiline	Diaminodiphenylmethane, 4,4'-	140	145
101-77-9	Methylene dianiline	Diaminodiphenylmethane, 4,4'-	140	149
101-68-8	Methylene diphenyl diisocyanate, 4,4'-	Methylene diphenyl diisocyanate, 4,4'-	210	212
8012-95-1	Mineral oil		290	291
64475-85-0	Mineral spirit		290	291
50-07-7	Mitomycin		990	991
110-91-8	Morpholine	Diethylene imide oxide	270	274
110-91-8	Morpholine	Diethylene imide oxide	270	278
109-02-4	N-Methylmorpholine (NMM)		270	278
109-02-4	N-Methylmorpholine (NMM)		270	274
8032-32-4	Naphtha		290	292
91-20-3	Naphthalene		290	293
13463-39-3	Nickel carbonyl	Tetracarbonylnickel	470	470
54-11-5	Nicotine		270	271
7697-37-2	Nitric acid		370	370
52583-42-3	Nitric acid, red fuming		370	370
10102-43-9	Nitric oxide		350	350
97697-37-4	Nitric/Hydrofluoric Pickling Solution		370	370
98-95-3	Nitro benzene		440	441
76-06-2	Nitro chlormethan	Chloro picrin::Nitro chlormethan	260	261
100-00-5	Nitro chlorobenzene, p-		440	442
100-00-5	Nitro chlorobenzene, p-		260	263
75-52-5	Nitro methane		440	441
88-75-5	Nitro phenol, o-	Hydroxy 2-nitrobenzene, 1-	310	316
88-75-5	Nitro phenol, o-	Hydroxy 2-nitrobenzene, 1-	440	442
79-46-9	Nitro propane, 2-		440	441
88-72-2	Nitro toluene, 2-		440	442
99-99-0	Nitro toluene, p-		440	442
10102-44-0	Nitrogen dioxide		350	350
10102-44-0	Nitrogen Dioxide (liquid)	Nitrogen Dioxide (liquid)	350	350
10544-72-6	Nitrogen tetroxide		350	350
7783-54-2	Nitrogen trifluoride		350	350
8007-56-5	Nitrohydrochloric Acid	Aqua regia	370	370
10024-97-2	Nitrous oxide		350	350
811-97-2	Norflurane	Norflurane	260	261
111-65-9	Octane, n-		290	291
111-87-5	Octanol, n-		310	311
7452-59-7	Octyl chlor formiate		110	113
7452-59-7	Octyl chlor formiate		220	221
112-80-1	Oleic Acid		100	102
8014-95-7	Oleum	Sulfuric acid fuming	370	370





APPENDIX
CHEMICAL INDEX - Alphabetical Listing - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class
144-62-7	Oxalic acid	Ethane dioic acid	100	104
63121-00-6	Oxaliplatin		990	991
98-51-1	P-Tert Butyl Toluene		290	292
33069-62-4	Paclitaxel (Hospira)		990	991
104-49-4	Paraphenylene diisocyanate (PPDI) crude		210	212
mix	PCB		260	263
11097-69-1	PCB 1254		260	263
mix	PCB in transformer oil		260	263
7647-18-9	Pentachloroantimony	Pentachloroantimony	360	360
87-86-5	Pentachlorophenol		310	316
109-66-0	Pentane		290	291
111-30-8	Pentanedial, 1,5-	Glutaral::Pentanedial, 1,5-	120	121
109-52-4	Pentanoic acid		290	291
71-41-0	Pentanol, 1-	Amyl alcohol	310	311
75-85-4	Pentanol, tert-	2-Methyl-2-Butanol::Amyl alcohol, tert-	310	313
13284-42-9	Pentene nitrile, 2-		430	431
4635-87-4	Pentene nitrile, 3-		430	431
25899-50-7	Pentene nitrile, cis-2-		430	431
628-63-7	Pentyl acetate	Acetic acid pentyl ester::Amyl ester acetic acid::Pentyl acetate	220	222
79-21-0	Peracetic Acid		100	102
79-21-0	Peracetic Acid		300	302
79-21-0	Peracetic Acid	Peracetic Acid	300	302
79-21-0	Peracetic Acid	Peracetic Acid	300	300
7601-90-3	Perchloric acid		370	370
2062-98-8	Perfluoro 2-propoxy propionyl fluoride		110	111
2062-98-8	Perfluoro 2-propoxy propionyl fluoride		240	241
2062-98-8	Perfluoro 2-propoxy propionyl fluoride		260	261
76-16-4	Perfluoroethane	Perfluoroethane	260	261
60-12-8	Phenethyl alcohol, 2-		310	318
100-42-5	Phenethylene	Phenethylene::Vinyl benzol	290	292
108-95-2	Phenol		310	316
140-29-4	Phenyl acetone nitrile	Phenyl acetone nitrile	430	432
62-53-3	Phenyl amine	Amino benzene::Benzenamine::Phenyl amine	140	145
1885-14-9	Phenyl chlor formate		220	221
108-90-7	Phenyl chloride	Phenyl chloride	260	263
100-47-0	Phenyl cyanide	Cyanobenzene::Phenyl cyanide	430	432
100-41-4	Phenyl ethane	Phenyl ethane	290	292
98-85-1	Phenyl ethanol, 1-		310	318
122-60-1	Phenyl glycidyl ether		270	275
108-98-5	Phenyl mercaptan	Benzene thiol	500	501
98-82-8	Phenyl propane, 2-	Isopropyl benzene::Phenyl propane, 2-	290	292
98-13-5	Phenyl trichlorosilane	Phenyl trichlorosilane	480	480
75-44-5	Phosgene		350	350
7803-51-2	Phosphine		350	350
6303-21-5	Phosphinic acid	Phosphinic acid	370	370

CAS Number	Chemical Name	Synonym	Class	Sub-Class
7664-38-2	Phosphoric acid		370	370
10025-87-3	Phosphorus oxychloride		360	360
7719-12-2	Phosphorus trichloride		360	360
109-06-8	Picoline, 2-	Methyl pyridine, 2-	270	271
108-99-6	Picoline, 3-	Methyl pyridine, 3-	270	271
108-94-1	Pimelic ketone	Hexanone::Pimelic ketone	390	391
24991-55-7	Polyethylene glycol dimethyl ether		240	245
9016-87-9	Polymethylene polyphenyle isocyanate (p-MDI)		210	212
127-08-2	Potassium acetate		340	340
584-08-7	Potassium carbonate		340	340
7789-00-6	Potassium chromate		340	340
151-50-8	Potassium cyanide		340	345
1310-58-3	Potassium hydroxide		380	380
7722-64-7	Potassium permanganate		340	340
107-02-8	Prop-2-en-1-al	Prop-2-en-1-al	120	121
107-19-7	Prop-2-yn-1-ol	Prop-2-yn-1-ol	310	311
71-23-8	Propan-1-ol	Propanol, 1::Propanol, n::Propyl alcohol	310	311
67-63-0	Propan-2-ol	Isopropanol::Isopropyl alcohol	310	312
67-64-1	Propan-2-one	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan-2-one::Pyroacetic ether	390	391
74-98-6	Propane		290	291
56-81-5	Propane-1,2,3-triol	Glycerine::Propane-1,2,3-triol	310	314
79-09-4	Propanoic acid		100	102
71-23-8	Propanol, 1-	Propanol, 1::Propanol, n::Propyl alcohol	310	311
71-23-8	Propanol, n-	Propanol, 1::Propanol, n::Propyl alcohol	310	311
107-19-7	Propargyl alcohol	Prop-2-yn-1-ol	310	311
107-18-6	Propen-1-ol, 2-	Hydroxy propene::Propen-1-ol, 2::Vinyl carbinol	310	311
79-06-1	Propenamide	Acrylamide::Propenamide	130	135
79-10-7	Propene acid	Acroleic acid::Ethylene carboxylic acid::Propene acid	100	102
107-13-1	Propenenitrile, 2-	Cyanoethylene::Propenenitrile, 2::Propenoic acid nitrile::Vinyl cyanide	430	431
141-32-2	Propenoic acid butyl ester, 2-	Acrylic acid n-butyl ester::Propenoic acid butyl ester, 2-	220	223
107-13-1	Propenoic acid nitrile	Cyanoethylene::Propenenitrile, 2::Propenoic acid nitrile::Vinyl cyanide	430	431
1569-01-3	Propoxypropanol		240	245
109-61-5	Propylchloroformate		110	113
109-61-5	Propylchloroformate		260	260
109-61-5	Propylchloroformate		220	221
109-60-4	Propyl Acetate		220	222
71-23-8	Propyl alcohol	Propanol, 1::Propanol, n::Propyl alcohol	310	311
107-10-8	Propyl amine, n-		140	141
106-94-5	Propyl bromide, n-		260	261
2807-30-9	Propyl Cellosolve, n-		240	245
123-73-9	Propylene aldehyde	Butenal, 2::Ethane diol dipropionate, 1,2::Methyl acrolein::Propylene aldehyde	120	121
78-87-5	Propylene dichloride		260	261
57-55-6	Propylene Glycol		310	314
75-55-8	Propylene imine		270	274
75-56-9	Propylene oxide, 1,2-	Epoxy propane, 1,2-	270	275

APPENDIX

CHEMICAL INDEX - Alphabetical Listing - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class	CAS Number	Chemical Name	Synonym	Class	Sub-Class
94239-04-0	Pyridene, 2-fluoro-6-(trifluoromethyl)		270	271	8014-95-7	Sulfuric acid fuming	Sulfuric acid fuming	370	370
110-86-1	Pyridine		270	271	10545-99-0	Sulphur dichloride	Sulphur dichloride	500	502
67-64-1	Pyroacetic ether	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391	mix	t-Sodium-amylate / t-amyl alcohol		590	590
123-75-1	Pyrrolidine	Azolidine	270	274	77-81-6	Tabun (GA), FINABEL 0.7.C		460	462
1717-00-6	Refrigerant 141B		260	261	77-81-6	Tabun (GA), MIL-STD-282		460	462
31218-83-4	Safrotin		460	462	75-91-2	Tert-Butyl Hydroperoxide	Tert-Butyl Hydroperoxide	300	300
107-44-8	Sarin (GB), MIL-STD-282		460	462	75-91-2	Tert-Butyl Hydroperoxide	Tert-Butyl Hydroperoxide	300	302
7803-62-5	Silane		480	480	13463-39-3	Tetracarbonylnickel	Tetracarbonylnickel	470	470
10026-04-7	Silicon tetrachloride		360	360	79-95-8	Tetrachloro bisphenol-A, 2,2',6,6'-		260	263
10026-04-7	Silicon tetrachloride		480	480	79-95-8	Tetrachloro bisphenol-A, 2,2',6,6'-		310	316
mix	Skydrol 4D	Skydrol 4D	590	590	79-34-5	Tetrachloro ethane, 1,1,2,2,-		260	261
mix	Skydrol 5	Skydrol 5	590	590	127-18-4	Tetrachloro ethylene, 1,1,2,2,-	Ethylene tetrachloride	260	264
126-73-8	Skydrol 500 B-4		460	462	56-23-5	Tetrachloro methane	Tetrachloro methane	260	261
mix	Skydrol PE-5	Skydrol PE-5	590	590	78-10-4	Tetraethoxysilane		480	480
127-09-3	Sodium acetate		550	550	77-98-5	Tetraethyl ammonium hydroxide		550	550
7631-90-5	Sodium bisulphite		500	507	77-98-5	Tetraethyl ammonium hydroxide		150	150
7647-14-5	Sodium chloride		990	991	78-00-2	Tetraethyl lead		470	470
143-33-9	Sodium cyanide		340	345	112-57-2	Tetraethylene pentamine		140	148
7681-49-4	Sodium fluoride		340	340	112-57-2	Tetraethylene pentamine		140	141
1310-73-2	Sodium hydroxide	Caustic soda	380	380	811-97-2	Tetrafluoroethane, 1,1,1,2,-	Norflurane	260	261
7681-52-9	Sodium hypochlorite		340	340	75-73-0	Tetrafluoromethane	Carbon tetrafluoride	260	261
7681-57-4	Sodium metabisulphite		340	340	109-99-9	Tetrahydrofuran		270	277
124-41-4	Sodium methylate		550	550	75-59-2	Tetramethyl ammonium hydroxide		550	550
6834-92-0	Sodium silicate		340	340	594-27-4	Tetramethyl tin		470	470
96-64-0	Soman (GD), FINABEL 0.7.C		460	462	110-18-9	Tetramethylethylene diamine (TMEDA)		140	148
96-64-0	Soman (GD), MIL-STD-282		460	462	288-47-1	Thiazol, 1,3,-		270	274
mix	Spectracide® (50% Malathion, 44% Aromatic Solvent)	Spectracide® (50% Malathion, 44% Aromatic Solvent)	590	590	68-11-1	Thioglycolic acid	Mercapto acetic acid	500	501
64-17-5	Spiritus	Ethyl alcohol::Spiritus	310	311	68-11-1	Thioglycolic acid	Mercapto acetic acid	100	103
8052-41-3	Stoddard solvent	Low boiling point naphtha - unspecified	290	291	7719-09-7	Thionyl chloride		360	360
100-42-5	Styrene	Phenethylene::Vinyl benzol	290	292	52-24-4	Thiotepa		990	991
5329-14-6	Sulfamic acid	Amido sulfonic acid::Sulfamidic acid	500	509	1118-46-3	Tin chloride, mono-n-butyl	Butyl stannium trichloride	470	470
5329-14-6	Sulfamic acid	Amido sulfonic acid::Sulfamidic acid	370	370	1461-22-9	Tin chloride, tri-n-butyl		470	470
5329-14-6	Sulfamidic acid	Amido sulfonic acid::Sulfamidic acid	500	509	7550-45-0	Titan(IV) chloride	Titan(IV) chloride	360	360
5329-14-6	Sulfamidic acid	Amido sulfonic acid::Sulfamidic acid	370	370	7550-45-0	Titanium tetrachloride	Titan(IV) chloride	360	360
7446-09-5	Sulfur dioxide		350	350	108-88-3	Toluene	Methyl benzol	290	292
7446-09-5	Sulfur dioxide		360	365	26471-62-5	Toluene diisocyanate, 1,3,-		210	212
2551-62-4	Sulfur hexafluoride		350	350	584-84-9	Toluene diisocyanate, 2,4,-		210	212
2551-62-4	Sulfur hexafluoride		500	509	108-44-1	Toluidine, m-		140	145
10025-67-9	Sulfur monochloride	Disulphur dichloride	500	502	95-53-4	Toluidine, o-	Methyl aniline, o-	140	145
505-60-2	Sulfur Mustard (HD), FINABEL 0.7.C		500	502	102-82-9	Tributyl amine		140	148
505-60-2	Sulfur Mustard (HD), MIL-STD-282		500	502	102-82-9	Tributyl amine		140	143
7446-11-9	Sulfur trioxide		360	365	75-94-5	Trichlor vinylsilane		480	480
7664-93-9	Sulfuric acid		370	370	76-13-1	Trichloro 1,2,2-trifluoroethane, 1,1,2,-		260	261
64-67-5	Sulfuric acid diethyl ester	Sulfuric acid diethyl ester	500	507	108-77-0	Trichloro 1,3,5-triazine, 2,4,6,-	Trichloro 1,3,5-triazine, 2,4,6,-	260	263
77-78-1	Sulfuric acid dimethyl ester	Sulfuric acid dimethyl ester	500	507	108-77-0	Trichloro 1,3,5-triazine, 2,4,6,-	Trichloro 1,3,5-triazine, 2,4,6,-	270	274



APPENDIX
CHEMICAL INDEX - Alphabetical Listing - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class
76-03-9	Trichloro acetic acid		100	103
921-03-9	Trichloro acetone, 1,1,3-		260	261
921-03-9	Trichloro acetone, 1,1,3-		390	391
120-82-1	Trichloro benzene, 1,2,4-		260	263
71-55-6	Trichloro ethane, 1,1,1-	Methyl chloroform::Methyl trichloromethane	260	261
79-00-5	Trichloro ethane, 1,1,2-	Ethane trichloride	260	261
115-20-8	Trichloro ethanol, 2,2,2-		310	315
79-01-6	Trichloro ethylene	Ethylene trichloride	260	264
67-66-3	Trichloro methane	Trichloro methane	260	261
98-13-5	Trichloro phenylsilane	Phenyl trichlorosilane	480	480
10025-78-2	Trichloro silane		480	480
102-71-6	Triethanolamine		140	143
97-93-8	Triethyl aluminum		470	470
121-44-8	Triethyl amine	Diethyl ethanamine, N,N-	140	143
78-40-0	Triethyl Phosphate		460	462
112-24-3	Triethylenetetramine		140	141
112-24-3	Triethylenetetramine		140	148
98-08-8	Trifluoromethylbenzene		260	263
382-10-5	Trifluoro 2-(trifluoromethyl)propene, 3,3,3-	Trifluoro 2-(trifluoromethyl)propene, 3,3,3-	260	261
76-05-1	Trifluoro acetic acid		260	261
76-05-1	Trifluoro acetic acid		100	103
75-89-8	Trifluoro ethanol, 2,2,2-		310	315
75-46-7	Trifluoro methane		260	261
1493-13-6	Trifluoro methanesulfonic acid		500	504
75-50-3	Trimethyl amine		140	143
75-64-9	Trimethyl aminomethane	Amino 2-methylpropane, 2-::Trimethyl aminomethane	140	143
512-56-1	Trimethyl phosphate		460	462
121-45-9	Trimethyl phosphite		460	462
102-69-2	Tripropyl amine		140	143
7783-82-6	Tungsten hexafluoride		350	350
8006-64-2	Turpentine		290	296
8006-64-2	Turpentine		290	294
83016-70-0	Urethane Catalyst Alkanol		240	245
7632-51-1	Vanadium tetrachloride		360	360
2068-78-2	Vincristine sulfate		990	991
71486-22-1	Vinorelbine		990	991
108-05-4	Vinyl acetate	Acetic acid ethenyl ester	220	222
100-42-5	Vinyl benzol	Phenethylene::Vinyl benzol	290	292
107-18-6	Vinyl carbinol	Hydroxy propene::Propen 1-ol, 2-::Vinyl carbinol	310	311
75-01-4	Vinyl chloride	Chloro ethene	260	264
107-13-1	Vinyl cyanide	Cyanoethylene::Propenenitrile, 2-::Propenoic acid nitrile::Vinyl cyanide	430	431
106-99-0	Vinyl ethylene	Vinyl ethylene	290	296
3536-96-7	Vinyl magnesium chloride		470	470
100-43-6	Vinyl pyridine, 4-		270	271
88-12-0	Vinyl Pyrrolidinone		270	274

CAS Number	Chemical Name	Synonym	Class	Sub-Class
75-35-4	Vinylidene chloride	Dichloro ethylene, 1,1-	260	264
8030-30-6	VM & P Naphtha		290	291
50782-69-9	VX Nerve Agent, FINABEL 0.7.C		460	462
50782-69-9	VX Nerve Agent, MIL-STD-282		460	462
mix	White Liquor		590	590
mix	White spirit		290	291
1330-20-7	Xylene, mixed isomers		290	292
95-47-6	Xylene, o-		290	292
95-68-1	Xylidine, 2,4-		140	145

APPENDIX
CHEMICAL INDEX - Chemical Abstract System (CAS) Number - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class
50-00-0	Formaldehyde	Formalin	120	121
50-00-0	Formalin	Formalin	120	121
50-00-0	Formalin		120	121
50-07-7	Mitomycin		990	991
50-18-0	Cyclo phosphamide		990	991
50-21-5	Lactic Acid		100	103
51-21-8	Fluorouracil, 5-		990	991
52-24-4	Thiotepa		990	991
54-11-5	Nicotine		270	271
56-23-5	Carbon tetrachloride	Tetrachloro methane	260	261
56-23-5	Tetrachloro methane	Tetrachloro methane	260	261
56-38-2	Ethyl parathion		460	462
56-81-5	Glycerine	Glycerine::Propane -1,2,3-triol	310	314
56-81-5	Glycerol	Glycerine::Propane -1,2,3-triol	310	314
56-81-5	Propane -1,2,3-triol	Glycerine::Propane -1,2,3-triol	310	314
57-14-7	Dimethyl hydrazine, N,N-		280	280
57-55-6	Propylene Glycol		310	314
57-74-9	Chlordane		260	261
58-89-9	Hexachloro cyclohexane, 1,2,3,4,5,6-	Hexachloro cyclohexane, 1,2,3,4,5,6-	260	261
58-89-9	Lindane	Hexachloro cyclohexane, 1,2,3,4,5,6-	260	261
59-05-2	Methotrexate		990	991
60-12-8	Phenethyl alcohol, 2-		310	318
60-24-2	Hydroxy 1-ethanethiol, 2-	Hydroxy 1-ethanethiol, 2-	500	501
60-24-2	Hydroxy 1-ethanethiol, 2-	Hydroxy 1-ethanethiol, 2-	310	311
60-24-2	Mercapto ethanol	Hydroxy 1-ethanethiol, 2-	500	501
60-24-2	Mercapto ethanol	Hydroxy 1-ethanethiol, 2-	310	311
60-29-7	Diethyl ether	Diethyl ether	240	241
60-29-7	Ethyl ether	Diethyl ether	240	241
60-34-4	Methyl hydrazine		280	280
62-53-3	Amino benzene	Amino benzene::Benzenamine::Phenyl amine	140	145
62-53-3	Aniline	Amino benzene::Benzenamine::Phenyl amine	140	145
62-53-3	Benzenamine	Amino benzene::Benzenamine::Phenyl amine	140	145
62-53-3	Phenyl amine	Amino benzene::Benzenamine::Phenyl amine	140	145
62-75-9	Dimethyl nitrosamine	Methyl N-nitrosomethanamine, N-	450	450
62-75-9	Methyl N-nitrosomethanamine, N-	Methyl N-nitrosomethanamine, N-	450	450
64-17-5	Ethanol	Ethyl alcohol::Spiritus	310	311
64-17-5	Ethyl alcohol	Ethyl alcohol::Spiritus	310	311
64-17-5	Spiritus	Ethyl alcohol::Spiritus	310	311
64-18-6	Formic acid		100	102
64-19-7	Acetic acid		100	102
64-67-5	Diethyl sulfate	Sulfuric acid diethyl ester	500	507
64-67-5	Sulfuric acid diethyl ester	Sulfuric acid diethyl ester	500	507
67-56-1	Methanol		310	311
67-63-0	Isopropanol	Isopropanol::Isopropyl alcohol	310	312
67-63-0	Isopropyl alcohol	Isopropanol::Isopropyl alcohol	310	312

CAS Number	Chemical Name	Synonym	Class	Sub-Class
67-63-0	Propan -2-ol	Isopropanol::Isopropyl alcohol	310	312
67-64-1	Acetone	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391
67-64-1	Dimethyl ketal	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391
67-64-1	Dimethyl ketone	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391
67-64-1	Ketone propane	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391
67-64-1	Methyl acetyl	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391
67-64-1	Methyl ketone	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391
67-64-1	Propan -2-one	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391
67-64-1	Pyroacetic ether	Dimethyl ketal::Dimethyl ketone::Ketone propane::Methyl acetyl::Methyl ketone::Propan -2-one::Pyroacetic ether	390	391
67-66-3	Chloroform	Trichloro methane	260	261
67-66-3	Trichloro methane	Trichloro methane	260	261
67-68-5	Dimethyl sulfoxide		500	503
68-11-1	Mercapto acetic acid	Mercapto acetic acid	100	103
68-11-1	Mercapto acetic acid	Mercapto acetic acid	500	501
68-11-1	Thioglycolic acid	Mercapto acetic acid	100	103
68-11-1	Thioglycolic acid	Mercapto acetic acid	500	501
68-12-2	Dimethyl formamide, N,N-		130	132
71-23-8	Propan -1-ol	Propanol, 1-::Propanol, n-::Propyl alcohol	310	311
71-23-8	Propanol, 1-	Propanol, 1-::Propanol, n-::Propyl alcohol	310	311
71-23-8	Propanol, n-	Propanol, 1-::Propanol, n-::Propyl alcohol	310	311
71-23-8	Propyl alcohol	Propanol, 1-::Propanol, n-::Propyl alcohol	310	311
71-36-3	Butanol, 1-	Butanol, n-::Butyl alcohol, n-	310	311
71-36-3	Butanol, n-	Butanol, n-::Butyl alcohol, n-	310	311
71-36-3	Butyl alcohol, n-	Butanol, n-::Butyl alcohol, n-	310	311
71-41-0	Amyl alcohol	Amyl alcohol	310	311
71-41-0	Pentanol, 1-	Amyl alcohol	310	311
71-43-2	Benzene		290	292
71-55-6	Methyl chloroform	Methyl chloroform::Methyl trichloromethane	260	261
71-55-6	Methyl trichloromethane	Methyl chloroform::Methyl trichloromethane	260	261
71-55-6	Trichloro ethane, 1,1,1-	Methyl chloroform::Methyl trichloromethane	260	261
74-83-9	Bromo methane	Bromo methane	260	261
74-83-9	Methyl bromide	Bromo methane	260	261
74-87-3	Methyl chloride		260	261
74-88-4	Iodomethane	Iodomethane	260	261
74-88-4	Methyl iodide	Iodomethane	260	261
74-89-5	Methyl amine		140	141
74-90-8	Hydrogen cyanide		350	350
74-90-8	Hydrogen cyanide		370	370

74-90-8 Hydrogen cyanide		340	345
74-93-1 Methanethiol	Methanethiol	380	380
74-93-1 Methanethiol	Methanethiol	350	350
74-93-1 Methanethiol	Methanethiol	500	501
74-93-1 Methyl mercaptan	Methanethiol	350	350
74-93-1 Methyl mercaptan	Methanethiol	500	501
74-93-1 Methyl mercaptan	Methanethiol	380	380

APPENDIX
CHEMICAL INDEX - Chemical Abstract System (CAS) Number - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class
74-95-3	Methylene bromide		260	261
74-98-6	Propane		290	291
75-00-3	Ethyl chloride		260	261
75-01-4	Chloro ethene	Chloro ethene	260	264
75-01-4	Vinyl chloride	Chloro ethene	260	264
75-04-7	Ethyl amine		140	141
75-05-8	Acetonitrile	Cyanomethane::Ethane nitrile::Ethyl nitrile::Methyl cyanide	430	431
75-05-8	Cyanomethane	Cyanomethane::Ethane nitrile::Ethyl nitrile::Methyl cyanide	430	431
75-05-8	Ethane nitrile	Cyanomethane::Ethane nitrile::Ethyl nitrile::Methyl cyanide	430	431
75-05-8	Ethyl nitrile	Cyanomethane::Ethane nitrile::Ethyl nitrile::Methyl cyanide	430	431
75-05-8	Methyl cyanide	Cyanomethane::Ethane nitrile::Ethyl nitrile::Methyl cyanide	430	431
75-07-0	Acetaldehyde		120	121
75-08-1	Ethane thiol	Ethane thiol	500	501
75-08-1	Ethyl mercaptan	Ethane thiol	500	501
75-09-2	Dichloro methane	Methylene chloride	260	261
75-09-2	Methylene chloride	Methylene chloride	260	261
75-15-0	Carbon disulfide		500	502
75-18-3	Dimethyl sulfide		500	502
75-21-8	Epoxy ethane	Epoxy ethane	270	275
75-21-8	Ethylene oxide	Epoxy ethane	270	275
75-25-2	Bromoform		260	261
75-31-0	Amino propane, 2-	Amino propane, 2-	140	141
75-31-0	Isopropyl amine	Amino propane, 2-	140	141
75-35-4	Dichloro ethylene, 1,1-	Dichloro ethylene, 1,1-	260	264
75-35-4	Vinylidene chloride	Dichloro ethylene, 1,1-	260	264
75-36-5	Acetic chloride	Acetic chloride::Ethanoyl chloride	110	111
75-36-5	Acetyl chloride	Acetic chloride::Ethanoyl chloride	110	111
75-36-5	Ethanoyl chloride	Acetic chloride::Ethanoyl chloride	110	111
75-44-5	Phosgene		350	350
75-46-7	Trifluoro methane		260	261
75-50-3	Trimethyl amine		140	143
75-52-5	Nitro methane		440	441
75-55-8	Propylene imine		270	274
75-56-9	Epoxy propane, 1,2-	Epoxy propane, 1,2-	270	275
75-56-9	Propylene oxide, 1,2-	Epoxy propane, 1,2-	270	275
75-59-2	Tetramethyl ammonium hydroxide		550	550
75-64-9	Amino 2-methylpropane, 2-	Amino 2-methylpropane, 2::Trimethyl aminomethane	140	143
75-64-9	Butyl amine, tert-	Amino 2-methylpropane, 2::Trimethyl aminomethane	140	143
75-64-9	Trimethyl aminomethane	Amino 2-methylpropane, 2::Trimethyl aminomethane	140	143
75-65-0	Butanol, tert-	Methyl propan-2-ol, 2-	310	313
75-65-0	Methyl propan-2-ol, 2-	Methyl propan-2-ol, 2-	310	313
75-73-0	Carbon tetrafluoride	Carbon tetrafluoride	260	261
75-73-0	Tetrafluoromethane	Carbon tetrafluoride	260	261
75-75-2	Methanesulphonic acid		500	504
75-78-5	Dimethyl dichlorosilane		480	480

CAS Number	Chemical Name	Synonym	Class	Sub-Class
75-79-6	Methyl trichlorosilane		480	480
75-85-4	2-Methyl-2-Butanol	2-Methyl-2-Butanol::Amyl alcohol, tert-	310	313
75-85-4	Amyl alcohol, tert-	2-Methyl-2-Butanol::Amyl alcohol, tert-	310	313
75-85-4	Pentanol, tert-	2-Methyl-2-Butanol::Amyl alcohol, tert-	310	313
75-86-5	Acetone cyanohydrin	Cyanopropan-2-ol, 2::Hydroxy 2-methylpropionitrile, 2::Hydroxy isobutyronitrile	310	313
75-86-5	Acetone cyanohydrin	Cyanopropan-2-ol, 2::Hydroxy 2-methylpropionitrile, 2::Hydroxy isobutyronitrile	430	431
75-86-5	Cyanopropan-2-ol, 2-	Cyanopropan-2-ol, 2::Hydroxy 2-methylpropionitrile, 2::Hydroxy isobutyronitrile	310	313
75-86-5	Cyanopropan-2-ol, 2-	Cyanopropan-2-ol, 2::Hydroxy 2-methylpropionitrile, 2::Hydroxy isobutyronitrile	430	431
75-86-5	Hydroxy 2-methylpropionitrile, 2-	Cyanopropan-2-ol, 2::Hydroxy 2-methylpropionitrile, 2::Hydroxy isobutyronitrile	430	431
75-86-5	Hydroxy 2-methylpropionitrile, 2-	Cyanopropan-2-ol, 2::Hydroxy 2-methylpropionitrile, 2::Hydroxy isobutyronitrile	310	313
75-86-5	Hydroxy isobutyronitrile	Cyanopropan-2-ol, 2::Hydroxy 2-methylpropionitrile, 2::Hydroxy isobutyronitrile	430	431
75-86-5	Hydroxy isobutyronitrile	Cyanopropan-2-ol, 2::Hydroxy 2-methylpropionitrile, 2::Hydroxy isobutyronitrile	310	313
75-89-8	Trifluoro ethanol, 2,2,2-		310	315
75-91-2	Tert-Butyl Hydroperoxide	Tert-Butyl Hydroperoxide	300	300
75-91-2	Tert-Butyl Hydroperoxide	Tert-Butyl Hydroperoxide	300	302
75-94-5	Trichlor vinylsilane		480	480
76-03-9	Trichloro acetic acid		100	103
76-05-1	Trifluoro acetic acid		260	261
76-05-1	Trifluoro acetic acid		100	103
76-06-2	Chloro trinitromethan	Chloro picrin::Nitro chlormethan	260	261
76-06-2	Chloro picrin	Chloro picrin::Nitro chlormethan	260	261
76-06-2	Nitro chlormethan	Chloro picrin::Nitro chlormethan	260	261
76-13-1	Trichloro 1,2,2-trifluoroethane, 1,1,2-		260	261
76-16-4	Hexafluoro ethane	Perfluoroethane	260	261
76-16-4	Perfluoroethane	Perfluoroethane	260	261
77-78-1	Dimethyl sulfate	Sulfuric acid dimethyl ester	500	507
77-78-1	Sulfuric acid dimethyl ester	Sulfuric acid dimethyl ester	500	507
77-81-6	Tabun (GA), FINABEL 0.7.C		460	462
77-81-6	Tabun (GA), MIL-STD-282		460	462
77-92-9	Citric acid	Hydroxy 1,2,3-propanetricarboxylic acid, 2-	100	104
77-92-9	Hydroxy 1,2,3-propanetricarboxylic acid, 2-	Hydroxy 1,2,3-propanetricarboxylic acid, 2-	100	104
77-98-5	Tetraethyl ammonium hydroxide		150	150
77-98-5	Tetraethyl ammonium hydroxide		550	550
78-00-2	Tetraethyl lead		470	470
78-10-4	Tetraethoxysilane		480	480
78-40-0	Triethyl Phosphate		460	462
78-83-1	Isobutanol		310	311
78-83-1	Isobutanol		310	312
78-87-5	Proxylene dichloride		260	261

78-88-6	Dichloro propene, 2,3-		260	261
78-93-3	Butanone	Butanone::MEK	390	391
78-93-3	MEK	Butanone::MEK	390	391
78-93-3	Methyl ethyl ketone	Butanone::MEK	390	391
78-94-4	But-3-en-2-one	But-3-en-2-one	390	391
78-94-4	Methyl vinyl ketone	But-3-en-2-one	390	391

APPENDIX
CHEMICAL INDEX - Chemical Abstract System (CAS) Number - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class
78-95-5	Chloro acetone	Chloro propan-2-one, 1-	390	391
78-95-5	Chloro propan-2-one, 1-	Chloro propan-2-one, 1-	390	391
79-00-5	Ethane trichloride	Ethane trichloride	260	261
79-00-5	Trichloro ethane, 1,1,2-	Ethane trichloride	260	261
79-01-6	Ethylene trichloride	Ethylene trichloride	260	264
79-01-6	Trichloro ethylene	Ethylene trichloride	260	264
79-04-9	Chloro acetyl chloride		110	111
79-06-1	Acrylamide	Acrylicamide::Propenamide	130	135
79-06-1	Acrylicamide	Acrylicamide::Propenamide	130	135
79-06-1	Propenamide	Acrylicamide::Propenamide	130	135
79-09-4	Propanoic acid		100	102
79-10-7	Acroleic acid	Acroleic acid::Ethylene carboxylic acid::Propene acid	100	102
79-10-7	Acrylic acid	Acroleic acid::Ethylene carboxylic acid::Propene acid	100	102
79-10-7	Ethylene carboxylic acid	Acroleic acid::Ethylene carboxylic acid::Propene acid	100	102
79-10-7	Propene acid	Acroleic acid::Ethylene carboxylic acid::Propene acid	100	102
79-11-8	Chloro acetic acid		100	103
79-14-1	Glycolic acid	Hydroxy acetic acid	100	103
79-14-1	Hydroxy acetic acid	Hydroxy acetic acid	100	103
79-20-9	Methyl Acetate		220	222
79-21-0	Peracetic Acid		100	102
79-21-0	Peracetic Acid	Peracetic Acid	300	300
79-21-0	Peracetic Acid		300	302
79-21-0	Peracetic Acid	Peracetic Acid	300	302
79-22-1	Methyl chloro formate		110	113
79-34-5	Tetrachloro ethane, 1,1,2,2,-		260	261
79-36-7	Dichloro acetyl chloride		110	111
79-41-4	Methacrylic acid	Methyl propenoic acid, 2-	100	102
79-41-4	Methyl propenoic acid, 2-	Methyl propenoic acid, 2-	100	102
79-46-9	Nitro propane, 2-		440	441
79-95-8	Tetrachloro bisphenol-A, 2,2',6,6'-		310	316
79-95-8	Tetrachloro bisphenol-A, 2,2',6,6'-		260	263
80-62-6	Methyl 2-methyl-2-propenoate	Methyl 2-methyl-2-propenoate	220	223
80-62-6	Methyl methacrylate	Methyl 2-methyl-2-propenoate	220	223
84-74-2	Dibutyl 1,2-benzenedicarboxylate	Dibutyl 1,2-benzenedicarboxylate	220	226
84-74-2	Dibutyl phthalate	Dibutyl 1,2-benzenedicarboxylate	220	226
87-68-3	Hexachloro butadiene		260	264
87-86-5	Pentachlorophenol		310	316
88-12-0	Vinyl Pyrrolidinone		270	274
88-72-2	Nitro toluene, 2-		440	442
88-73-3	Chloro 2-nitrobenzene, 1-	Chloro 2-nitrobenzene, 1-	260	263
88-73-3	Chloro 2-nitrobenzene, 1-	Chloro 2-nitrobenzene, 1-	440	442
88-75-5	Hydroxy 2-nitrobenzene, 1-	Hydroxy 2-nitrobenzene, 1-	310	316
88-75-5	Hydroxy 2-nitrobenzene, 1-	Hydroxy 2-nitrobenzene, 1-	440	442
88-75-5	Nitro phenol, o-	Hydroxy 2-nitrobenzene, 1-	310	316
88-75-5	Nitro phenol, o-	Hydroxy 2-nitrobenzene, 1-	440	442

CAS Number	Chemical Name	Synonym	Class	Sub-Class
91-20-3	Naphthalene		290	293
91-66-7	Diethyl aniline crude		140	146
91-66-7	Diethyl aniline, N,N-		140	146
91-67-8	Diethyl m-toluidine, N,N-		140	145
92-67-1	Amino diphenyl, 4-		140	145
92-87-5	Benzidine	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	145
92-87-5	Benzidine	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	149
92-87-5	Biphenyl 4,4'-diamine, 1,1'-	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	145
92-87-5	Biphenyl 4,4'-diamine, 1,1'-	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	149
92-87-5	Diaminobiphenyl, 4,4'-	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	145
92-87-5	Diaminobiphenyl, 4,4'-	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	149
92-87-5	Diaminodiphenyl, p-	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	149
92-87-5	Diaminodiphenyl, p-	Biphenyl 4,4'-diamine, 1,1'-::Diaminobiphenyl, 4,4'-::Diaminodiphenyl, p-	140	145
95-47-6	Xylene, o-		290	292
95-48-7	Cresol o-	Hydroxy toluene, o-	310	316
95-48-7	Hydroxy toluene, o-	Hydroxy toluene, o-	310	316
95-49-8	Chloro 1-methylbenzene, 2-	Chloro 1-methylbenzene, 2-	260	263
95-49-8	Chloro 1-methylbenzene, 2-	Chloro 1-methylbenzene, 2-	310	316
95-49-8	Chloro toluene, o-	Chloro 1-methylbenzene, 2-	260	263
95-49-8	Chloro toluene, o-	Chloro 1-methylbenzene, 2-	310	316
95-50-1	Dichlorobenzen, 1,2-		260	263
95-53-4	Methyl aniline, o-	Methyl aniline, o-	140	145
95-53-4	Toluidine, o-	Methyl aniline, o-	140	145
95-68-1	Xylidine, 2,4-		140	145
95-76-1	Amino 3,4-dichlorobenzene, 1-	Amino 3,4-dichlorobenzene, 1-	260	263
95-76-1	Amino 3,4-dichlorobenzene, 1-	Amino 3,4-dichlorobenzene, 1-	140	145
95-76-1	Dichloro aniline, 3,4-	Amino 3,4-dichlorobenzene, 1-	140	145
95-76-1	Dichloro aniline, 3,4-	Amino 3,4-dichlorobenzene, 1-	260	263
96-12-8	Dibromo -3-chloropropane, 1,2-		260	261
96-24-2	Chloro 1,2-propanediol, 3-		310	314
96-29-7	Butanone oxime, 2-	Butanone oxime, 2-	150	150
96-29-7	Methyl ethyl ketoxime	Butanone oxime, 2-	150	150
96-33-3	Methyl acrylate		220	223
96-64-0	Soman (GD), FINABEL 0.7.C		460	462
96-64-0	Soman (GD), MIL-STD-282		460	462
97-93-8	Triethyl aluminum		470	470
97-95-0	Ethyl Butanol		310	312
98-01-1	Furaldehyde, 2-	Furaldehyde, 2-	270	277
98-01-1	Furfural	Furaldehyde, 2-	270	277
98-07-7	Benzo trichloride		260	263

98-07-1	Benzene trichloride		260	263
98-08-8	Trifluoromethylbenzene			
98-09-9	Benzene sulfone chloride	Benzene sulfone chloride	500	505
98-09-9	Benzene sulfonyl chloride	Benzene sulfone chloride	500	505
98-13-5	Phenyl trichlorosilane	Phenyl trichlorosilane	480	480
98-13-5	Trichloro phenylsilane	Phenyl trichlorosilane	480	480

APPENDIX
CHEMICAL INDEX - Chemical Abstract System (CAS) Number - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class
98-51-1	P-Tert Butyl Toluene		290	292
98-56-6	Chloro benzotrifluoride, 4-		260	263
98-82-8	Cumene	Isopropyl benzene::Phenyl propane, 2-	290	292
98-82-8	Isopropyl benzene	Isopropyl benzene::Phenyl propane, 2-	290	292
98-82-8	Phenyl propane, 2-	Isopropyl benzene::Phenyl propane, 2-	290	292
98-85-1	Phenyl ethanol, 1-		310	318
98-88-4	Benzene carbonyl chloride	Benzene carbonyl chloride	110	112
98-88-4	Benzoyl chloride	Benzene carbonyl chloride	110	112
98-95-3	Nitro benzene		440	441
99-63-8	Isophthaloyldichloride		110	112
99-99-0	Nitro toluene, p-		440	442
100-00-5	Nitro chlorobenzene, p-		440	442
100-00-5	Nitro chlorobenzene, p-		260	263
100-41-4	Ethyl benzene	Phenyl ethane	290	292
100-41-4	Phenyl ethane	Phenyl ethane	290	292
100-42-5	Phenethylene	Phenethylene::Vinyl benzol	290	292
100-42-5	Styrene	Phenethylene::Vinyl benzol	290	292
100-42-5	Vinyl benzol	Phenethylene::Vinyl benzol	290	292
100-43-6	Vinyl pyridine, 4-		270	271
100-44-7	Benzyl chloride	Chloro toluene, alpha-	260	266
100-44-7	Chloro toluene, alpha-	Chloro toluene, alpha-	260	266
100-47-0	Benzo nitrile	Cyanobenzene::Phenyl cyanide	430	432
100-47-0	Cyanobenzene	Cyanobenzene::Phenyl cyanide	430	432
100-47-0	Phenyl cyanide	Cyanobenzene::Phenyl cyanide	430	432
100-51-6	Benzyl alcohol	Hydroxy toluene	310	312
100-51-6	Hydroxy toluene	Hydroxy toluene	310	312
100-52-7	Benzaldehyde	Benzaldehyde	120	122
101-14-4	Dichloro -4,4'-methylenedianiline, 2,2'-	Dichloro -4,4'-methylenedianiline, 2,2'-	140	149
101-14-4	Methylene bis(2-Chloroaniline), 4,4'-	Dichloro -4,4'-methylenedianiline, 2,2'-	140	149
101-68-8	Diphenyl methane diisocyanate, 4,4'-	Methylene diphenyl diisocyanate, 4,4'-	210	212
101-68-8	Methylene diphenyl diisocyanate, 4,4'-	Methylene diphenyl diisocyanate, 4,4'-	210	212
101-77-9	Diaminodiphenylmethane, 4,4'-	Diaminodiphenylmethane, 4,4'-	140	145
101-77-9	Diaminodiphenylmethane, 4,4'-	Diaminodiphenylmethane, 4,4'-	140	149
101-77-9	Methylene dianiline	Diaminodiphenylmethane, 4,4'-	140	145
101-77-9	Methylene dianiline	Diaminodiphenylmethane, 4,4'-	140	145
102-69-2	Tripropyl amine		140	143
102-71-6	Triethanolamine		140	143
102-82-9	Tributyl amine		140	148
102-82-9	Tributyl amine		140	143
103-67-3	Benzyl methylamine, N-	Methyl benzylamine, N-	140	146
103-67-3	Benzyl methylamine, N-	Methyl benzylamine, N-	290	292
103-67-3	Methyl benzylamine, N-	Methyl benzylamine, N-	290	292
103-67-3	Methyl benzylamine, N-	Methyl benzylamine, N-	140	146
104-49-4	Paraphenylene diisocyanate (PPDI) crude		210	212
105-39-5	Chloroacetic ethylester		220	222

CAS Number	Chemical Name	Synonym	Class	Sub-Class
105-44-2	Methyl Isobutyl Ketoxime		150	150
106-46-7	Dichlorbenzen, 1,4-		260	263
106-47-8	Chloro aniline, p-	Chloro benzenamine, 4-	140	145
106-47-8	Chloro benzenamine, 4-	Chloro benzenamine, 4-	140	145
106-48-9	Chloro phenol, p-	Hydroxy chlorobenzene	310	316
106-48-9	Chloro phenol, p-	Hydroxy chlorobenzene	260	263
106-48-9	Hydroxy chlorobenzene	Hydroxy chlorobenzene	260	263
106-48-9	Hydroxy chlorobenzene	Hydroxy chlorobenzene	310	316
106-89-8	Chloro 2,3-epoxy propane, 1-	Chloro 2,3-epoxy propane, 1-	270	275
106-89-8	Chloro 2,3-epoxy propane, 1-	Chloro 2,3-epoxy propane, 1-	260	261
106-89-8	Epichlorohydrin	Chloro 2,3-epoxy propane, 1-	260	261
106-89-8	Epichlorohydrin	Chloro 2,3-epoxy propane, 1-	270	275
106-93-4	Dibromoethane, 1,2-	Dibromoethane, 1,2-	260	261
106-93-4	Ethylene dibromide	Dibromoethane, 1,2-	260	261
106-94-5	Propyl bromide, n-		260	261
106-99-0	Butadiene, 1,3-	Vinyl ethylene	290	296
106-99-0	Vinyl ethylene	Vinyl ethylene	290	296
107-02-8	Acrolein	Prop-2-en-1-al	120	121
107-02-8	Prop-2-en-1-al	Prop-2-en-1-al	120	121
107-05-1	Allyl chloride	Chlor allylene::Chloro prene, 3-	260	265
107-05-1	Chlor allylene	Chlor allylene::Chloro prene, 3-	260	265
107-05-1	Chloro prene, 3-	Chlor allylene::Chloro prene, 3-	260	265
107-06-2	Dichlorethane, 1,2.-	Ethylene dichloride	260	261
107-06-2	Ethylene dichloride	Ethylene dichloride	260	261
107-07-3	Chloro ethanol, 2-	Ethylene chlorohydrin::Glycol chlorohydrin	310	315
107-07-3	Chloro ethanol, 2-	Ethylene chlorohydrin::Glycol chlorohydrin	260	261
107-07-3	Ethylene chlorohydrin	Ethylene chlorohydrin::Glycol chlorohydrin	310	315
107-07-3	Ethylene chlorohydrin	Ethylene chlorohydrin::Glycol chlorohydrin	260	261
107-07-3	Glycol chlorohydrin	Ethylene chlorohydrin::Glycol chlorohydrin	310	315
107-07-3	Glycol chlorohydrin	Ethylene chlorohydrin::Glycol chlorohydrin	260	261
107-10-8	Propyl amine, n-		140	141
107-13-1	Acrylonitrile	Cyanoethylene::Propenenitrile, 2-:: Propenoic acid nitrile::Vinyl cyanide	430	431
107-13-1	Cyanoethylene	Cyanoethylene::Propenenitrile, 2-:: Propenoic acid nitrile::Vinyl cyanide	430	431
107-13-1	Propenenitrile, 2-	Cyanoethylene::Propenenitrile, 2-:: Propenoic acid nitrile::Vinyl cyanide	430	431
107-13-1	Propenoic acid nitrile	Cyanoethylene::Propenenitrile, 2-:: Propenoic acid nitrile::Vinyl cyanide	430	431
107-13-1	Vinyl cyanide	Cyanoethylene::Propenenitrile, 2-:: Propenoic acid nitrile::Vinyl cyanide	430	431
107-15-3	Diaminoethane, 1,2-	Diaminoethane, 1,2-	140	148
107-15-3	Ethylene diamine	Diaminoethane, 1,2-	140	148
107-18-6	Allyl alcohol	Hydroxy propene::Propen 1-ol, 2-::Vinyl carbinol	310	311
107-18-6	Hydroxy propene	Hydroxy propene::Propen 1-ol, 2-::Vinyl carbinol	310	311
107-18-6	Propen 1-ol, 2-	Hydroxy propene::Propen 1-ol, 2-::Vinyl carbinol	310	311

107-18-6	Vinyl carbinol	Hydroxy propene::Propen 1-ol, 2-::Vinyl carbinol	310	311
107-19-7	Prop-2-yn-1-ol	Prop-2-yn-1-ol	310	311
107-19-7	Propargyl alcohol	Prop-2-yn-1-ol	310	311
107-21-1	Ethane 1,2-diol	Ethane 1,2-diol::Glycol alcohol	310	314



APPENDIX
CHEMICAL INDEX - Chemical Abstract System (CAS) Number - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class
107-21-1	Ethylene glycol	Ethane 1,2-diol::Glycol alcohol	310	314
107-21-1	Glycol alcohol	Ethane 1,2-diol::Glycol alcohol	310	314
107-30-2	Chloro methyl methyl ether	Methoxy chloromethane	240	241
107-30-2	Methoxy chloromethane	Methoxy chloromethane	240	241
107-31-3	Methyl formate		220	221
107-44-8	Sarin (GB), MIL-STD-282		460	462
107-87-9	Methyl Propyl Ketone		390	391
107-92-6	Butyric Acid		100	102
108-05-4	Acetic acid ethenyl ester	Acetic acid ethenyl ester	220	222
108-05-4	Vinyl acetate	Acetic acid ethenyl ester	220	222
108-10-1	Hexone	Isobutyl methyl ketone::Methyl pentan-2-one, 4-	390	391
108-10-1	Isobutyl methyl ketone	Isobutyl methyl ketone::Methyl pentan-2-one, 4-	390	391
108-10-1	Methyl pentan-2-one, 4-	Isobutyl methyl ketone::Methyl pentan-2-one, 4-	390	391
108-21-4	Isopropyl Acetate		220	222
108-24-7	Acetic anhydride		160	161
108-31-6	Maleic anhydride		160	161
108-44-1	Toluidine, m-		140	145
108-59-8	Dimethylmalonate	Dimethylmalonate	220	220
108-59-8	Dimethylmalonate	Dimethylmalonate	220	224
108-77-0	Cyanide chloride	Trichloro 1,3,5-triazine, 2,4,6-	260	263
108-77-0	Cyanide chloride	Trichloro 1,3,5-triazine, 2,4,6-	270	274
108-77-0	Trichloro 1,3,5-triazine, 2,4,6-	Trichloro 1,3,5-triazine, 2,4,6-	270	274
108-77-0	Trichloro 1,3,5-triazine, 2,4,6-	Trichloro 1,3,5-triazine, 2,4,6-	260	263
108-83-8	Di Isobutyl Ketone	Dimethyl-4-Heptanone, 2,6-	390	391
108-83-8	Dimethyl-4-Heptanone, 2,6-	Dimethyl-4-Heptanone, 2,6-	390	391
108-88-3	Methyl benzol	Methyl benzol	290	292
108-88-3	Toluene	Methyl benzol	290	292
108-90-7	Chloro benzene	Phenyl chloride	260	263
108-90-7	Phenyl chloride	Phenyl chloride	260	263
108-93-0	Cyclohexanol	Hexalin	310	312
108-93-0	Hexalin	Hexalin	310	312
108-94-1	Cyclo hexanone	Hexanone::Pimelic ketone	390	391
108-94-1	Hexanone	Hexanone::Pimelic ketone	390	391
108-94-1	Pimelic ketone	Hexanone::Pimelic ketone	390	391
108-95-2	Phenol		310	316
108-98-5	Benzene thiol	Benzene thiol	500	501
108-98-5	Phenyl mercaptan	Benzene thiol	500	501
108-99-6	Methyl pyridine, 3-	Methyl pyridine, 3-	270	271
108-99-6	Picoline, 3-	Methyl pyridine, 3-	270	271
109-02-4	N-Methylmorpholine (NMM)		270	274
109-02-4	N-Methylmorpholine (NMM)		270	278
109-06-8	Methyl pyridine, 2-	Methyl pyridine, 2-	270	271
109-06-8	Picoline, 2-	Methyl pyridine, 2-	270	271
109-43-3	Dibutyl sebacate		220	224
109-52-4	Pentanoic acid		290	291

CAS Number	Chemical Name	Synonym	Class	Sub-Class
109-55-7	1,3-Propanediamine, N,N'-Dimethyl		140	148
109-60-4	Propyl Acetate		220	222
109-61-5	Propylchloroformate		110	113
109-61-5	Propylchloroformate		260	260
109-61-5	Propylchloroformate		220	221
109-63-7	Boron fluoride ethyl ether	Boron fluoride ethyl ether::Boron trifluoride diethyl etherate	590	590
109-63-7	Boron trifluoride diethyl etherate	Boron fluoride ethyl ether::Boron trifluoride diethyl etherate	590	590
109-63-7	Boron trifluoride etherate	Boron fluoride ethyl ether::Boron trifluoride diethyl etherate	590	590
109-66-0	Pentane		290	291
109-73-9	Butyl amine		140	141
109-86-4	Ethylene glycol monomethyl ether	Ethylene glycol monomethyl ether	240	245
109-86-4	Ethylene glycol monomethyl ether	Ethylene glycol monomethyl ether	310	311
109-86-4	Methoxy ethanol, 2	Ethylene glycol monomethyl ether	310	311
109-86-4	Methoxy ethanol, 2	Ethylene glycol monomethyl ether	240	245
109-89-7	Diethyl amine	Ethyl ethanamine, N-	140	142
109-89-7	Ethyl ethanamine, N-	Ethyl ethanamine, N-	140	142
109-99-9	Tetrahydrofuran		270	277
110-00-9	Furan		270	277
110-18-9	Tetramethylethylene diamine (TMEDA)		140	148
110-49-6	Acetic acid 2 methoxy ethyl ester	Acetic acid 2 methoxy ethyl ester::Ethylene glycol monomethyl ether acetate	240	245
110-49-6	Ethylene glycol monomethyl ether acetate	Acetic acid 2 methoxy ethyl ester::Ethylene glycol monomethyl ether acetate	240	245
110-49-6	Methoxy ethylacetate, 2-	Acetic acid 2 methoxy ethyl ester::Ethylene glycol monomethyl ether acetate	240	245
110-54-3	Hexane, n-		290	291
110-80-5	Cellosolve acetate	Cellosolve acetate::Ethyl Cellosolve®::Ethylene glycol monoethyl ether	240	245
110-80-5	Ethoxy ethanol, 2-	Cellosolve acetate::Ethyl Cellosolve®::Ethylene glycol monoethyl ether	240	245
110-80-5	Ethyl Cellosolve®	Cellosolve acetate::Ethyl Cellosolve®::Ethylene glycol monoethyl ether	240	245
110-80-5	Ethylene glycol monoethyl ether	Cellosolve acetate::Ethyl Cellosolve®::Ethylene glycol monoethyl ether	240	245
110-82-7	Cyclo hexane		290	291
110-86-1	Pyridine		270	271
110-91-8	Diethylene imide oxide	Diethylene imide oxide	270	274
110-91-8	Diethylene imide oxide	Diethylene imide oxide	270	278
110-91-8	Morpholine	Diethylene imide oxide	270	274
110-91-8	Morpholine	Diethylene imide oxide	270	278
111-15-9	Acetic acid 2 ethoxy ethyl ester	Acetic acid 2 ethoxy ethyl ester::Ethyl glycol acetate::Ethylene glycol mono ethyl ether acetate	240	245
111-15-9	Ethoxy ethylacetat	Acetic acid 2 ethoxy ethyl ester::Ethyl glycol acetate::Ethylene glycol mono ethyl ether acetate	240	245
111-15-9	Ethyl glycol acetate	Acetic acid 2 ethoxy ethyl ester::Ethyl glycol acetate::Ethylene glycol mono ethyl ether acetate	240	245
111-15-9	Ethylene glycol mono ethyl ether acetate	Acetic acid 2 ethoxy ethyl ester::Ethyl glycol acetate::Ethylene glycol mono ethyl ether acetate	240	245

		etnyl etner acetate		
111-30-8	Glutaral	Glutaral::Pentanedial, 1,5-	120	121
111-30-8	Glutaraldehyde	Glutaral::Pentanedial, 1,5-	120	121
111-30-8	Pentanedial, 1,5-	Glutaral::Pentanedial, 1,5-	120	121
111-40-0	Diethylene triamine		140	148
111-41-1	Amino ethylethanolamine		140	148
111-41-1	Amino ethylethanolamine		140	142
111-41-1	Amino ethylethanolamine		310	311
111-42-2	Diethanolamine		140	142

APPENDIX
CHEMICAL INDEX - Chemical Abstract System (CAS) Number - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class	CAS Number	Chemical Name	Synonym	Class	Sub-Class
111-44-4	Dichloro ethyl ether		240	241	123-51-3	Isoamyl alcohol	Methyl butan-1-ol, 3-	310	312
111-44-4	Dichloro ethyl ether		260	261	123-51-3	Methyl butan-1-ol, 3-	Methyl butan-1-ol, 3-	310	312
111-46-6	Diethylene Glycol		310	314	123-72-8	Butanal, n-	Butyraldehyde, n-	120	121
111-65-9	Octane, n-		290	291	123-72-8	Butyraldehyde, n-	Butyraldehyde, n-	120	121
111-69-3	Adipic acid dinitrile	Adipic acid dinitrile::Adipic acid nitrile::Adipyl dinitrile::Dicyanobutane, 1,4-	430	431	123-73-9	Butenal, 2-	Butenal, 2-::Ethane diol dipropionate, 1,2-::Methyl acrolein::Propylene aldehyde	120	121
111-69-3	Adipic acid nitrile	Adipic acid dinitrile::Adipic acid nitrile::Adipyl dinitrile::Dicyanobutane, 1,4-	430	431	123-73-9	Croton aldehyde	Butenal, 2-::Ethane diol dipropionate, 1,2-::Methyl acrolein::Propylene aldehyde	120	121
111-69-3	Adiponitrile	Adipic acid dinitrile::Adipic acid nitrile::Adipyl dinitrile::Dicyanobutane, 1,4-	430	431	123-73-9	Ethane diol dipropionate, 1,2-	Butenal, 2-::Ethane diol dipropionate, 1,2-::Methyl acrolein::Propylene aldehyde	120	121
111-69-3	Adipyl dinitrile	Adipic acid dinitrile::Adipic acid nitrile::Adipyl dinitrile::Dicyanobutane, 1,4-	430	431	123-73-9	Methyl acrolein	Butenal, 2-::Ethane diol dipropionate, 1,2-::Methyl acrolein::Propylene aldehyde	120	121
111-69-3	Dicyanobutane, 1,4-	Adipic acid dinitrile::Adipic acid nitrile::Adipyl dinitrile::Dicyanobutane, 1,4-	430	431	123-73-9	Propylene aldehyde	Butenal, 2-::Ethane diol dipropionate, 1,2-::Methyl acrolein::Propylene aldehyde	120	121
111-76-2	Butoxy ethanol, 2-	Ethylene glycol monobutyl ether	240	245	123-75-1	Azolidine	Azolidine	270	274
111-76-2	Ethylene glycol monobutyl ether	Ethylene glycol monobutyl ether	240	245	123-75-1	Pyrrolidine	Azolidine	270	274
111-77-3	Diethylene Glycol Monomethyl Ether		240	245	123-86-4	Butyl acetate, n-		220	222
111-87-5	Octanol, n-		310	311	123-91-1	Dioxane, 1,4-		270	278
111-90-0	2-(2-Ethoxyethoxy) ethanol		240	245	123-92-2	Iso Amyl Acetate		220	222
112-07-2	Butyl Cellosolve Acetate		240	245	124-09-4	Hexamethylene diamine		140	148
112-24-3	Triethylenetetramine		140	148	124-40-3	Dimethyl amine		140	142
112-24-3	Triethylenetetramine		140	141	124-41-4	Sodium methylate		550	550
112-25-4	Ethylene Glycol Monoethyl Ether		240	245	124-63-0	Methanesulfonyl chloride		500	505
112-34-5	2-(2-Butoxyethoxy) ethanol	Diethylene glycol monobutyl ether	310	311	126-73-8	Skydrol 500 B-4		460	462
112-34-5	2-(2-Butoxyethoxy) ethanol	Diethylene glycol monobutyl ether	240	245	127-08-2	Potassium acetate		340	340
112-34-5	Diethylene glycol monobutyl ether	Diethylene glycol monobutyl ether	310	311	127-09-3	Sodium acetate		550	550
112-34-5	Diethylene glycol monobutyl ether	Diethylene glycol monobutyl ether	240	245	127-18-4	Ethylene tetrachloride	Ethylene tetrachloride	260	264
112-35-6	Methoxytriglycol		240	245	127-18-4	Tetrachloro ethylene, 1,1,2,2-	Ethylene tetrachloride	260	264
112-50-5	Ethoxytriglycol		240	245	127-19-5	Dimethyl acetamide, N,N-		130	132
112-57-2	Tetraethylene pentamine		140	148	140-29-4	Benzyl cyanide	Phenyl acetonitrile	430	432
112-57-2	Tetraethylene pentamine		140	141	140-29-4	Phenyl acetonitrile	Phenyl acetonitrile	430	432
112-59-4	Hexyl Carbitol Solvent		240	245	140-31-8	Amino ethylpiperazine		140	141
112-80-1	Oleic Acid		100	102	140-31-8	Amino ethylpiperazine		270	274
115-10-6	Dimethyl ether		240	241	140-31-8	Amino ethylpiperazine		140	148
115-20-8	Trichloro ethanol, 2,2,2-		310	315	140-88-5	Acrylic acid ethyl ester	Acrylic acid ethyl ester	220	223
117-81-7	DEHP	DEHP	220	226	140-88-5	Ethyl acrylate	Acrylic acid ethyl ester	220	223
117-81-7	Diethyl hexyl phthalate	DEHP	220	226	141-32-2	Acrylic acid n-butyl ester	Acrylic acid n-butyl ester::Propenoic acid butyl ester, 2-	220	223
119-36-8	Methyl salicylate		220	226	141-32-2	Butyl acrylate, n-	Acrylic acid n-butyl ester::Propenoic acid butyl ester, 2-	220	223
120-12-7	Anthracene	Anthracin	290	293	141-32-2	Propenoic acid butyl ester, 2-	Acrylic acid n-butyl ester::Propenoic acid butyl ester, 2-	220	223
120-12-7	Anthracin	Anthracin	290	293	141-43-5	Amino ethanol, 2-	Amino ethanol, 2-	140	141
120-82-1	Trichloro benzene, 1,2,4-		260	263	141-43-5	Amino ethanol, 2-	Amino ethanol, 2-	310	311
121-44-8	Diethyl ethanamine, N,N-	Diethyl ethanamine, N,N-	140	143	141-43-5	Ethanol amine	Amino ethanol, 2-	140	141
121-44-8	Triethyl amine	Diethyl ethanamine, N,N-	140	143	141-43-5	Ethanol amine	Amino ethanol, 2-	310	311
121-45-9	Trimethyl phosphite		460	462	141-78-6	Acetic acid ethyl ester	Acetic acid ethyl ester	220	222
121-69-7	Dimethyl aniline, N,N-	Dimethyl phenylamine, N,N-	140	146	141-78-6	Ethyl acetate	Acetic acid ethyl ester	220	222
121-69-7	Dimethyl phenylamine, N,N-	Dimethyl phenylamine, N,N-	140	146	142-82-5	Heptane		290	291
121-75-5	Malathion		460	462	142-96-1	Butyl ether, n-		240	241
122-60-1	Phenyl glycidyl ether		270	275	143-22-6	Butoxytriglycol		240	245
123-39-7	Methyl formamide, N-		130	132	143-33-9	Sodium cyanide		340	345
123-42-2	Diacetone Alcohol		390	391	144-62-7	Ethane dioic acid	Ethane dioic acid	100	104

APPENDIX

CHEMICAL INDEX - Chemical Abstract System (CAS) Number - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class	CAS Number	Chemical Name	Synonym	Class	Sub-Class
144-62-7	Oxalic acid	Ethane dioic acid	100	104	592-34-7	Butylchloroformate		110	113
149-57-5	Ethyl hexanoic acid		100	102	592-41-6	Hexene		290	294
151-50-8	Potassium cyanide		340	345	593-53-3	Methyl fluoride		260	261
151-56-4	Aziridine	Aziridine	270	274	593-74-8	Dimethyl mercury in decane		470	470
151-56-4	Ethylene imine	Aziridine	270	274	594-27-4	Tetramethyl tin		470	470
154-93-8	Carmustine		990	991	594-45-6	Ethansulphonic acid		500	504
288-47-1	Thiazol, 1,3-		270	274	616-47-7	Methyl imidazole, 1-		270	274
302-01-2	Hydrazine		280	280	624-48-6	Dimethyl maleate		220	224
328-84-7	Benzene, Dichloro-4-Trifluoro		260	263	624-49-7	Dimethyl fumarate		220	224
353-42-4	Boron trifluoride dimethyl etherate		590	590	624-83-9	Methyl isocyanate		210	211
382-10-5	Hexafluoro isobutylene	Trifluoro 2-(trifluoromethyl)propene, 3,3,3-	260	261	628-63-7	Acetic acid pentyl ester	Acetic acid pentyl ester::Amyl ester acetic acid::Pentyl acetate	220	222
382-10-5	Trifluoro 2-(trifluoromethyl)propene, 3,3,3-	Trifluoro 2-(trifluoromethyl)propene, 3,3,3-	260	261	628-63-7	Amyl acetate, n-	Acetic acid pentyl ester::Amyl ester acetic acid::Pentyl acetate	220	222
420-04-2	Cyanamide		130	132	628-63-7	Amyl ester acetic acid	Acetic acid pentyl ester::Amyl ester acetic acid::Pentyl acetate	220	222
460-00-4	Bromo 4-fluorobenzene, 1-	Bromo 4-fluorobenzene, 1-	260	263	628-63-7	Pentyl acetate	Acetic acid pentyl ester::Amyl ester acetic acid::Pentyl acetate	220	222
460-00-4	Bromo fluorobenzene, 4-	Bromo 4-fluorobenzene, 1-	260	263	628-76-2	Dichloropentane		260	261
461-82-5	Anilin, 4-Trifluoromethoxy-		140	145	630-08-0	Carbon monoxide		350	350
462-06-6	Fluorobenzene		260	263	755-95-3	Diiodo-1,1,2,2-tetrafluorobutane, 1,4-		260	261
501-53-1	Benzyl chloro formate		110	113	756-79-6	Dimethyl Methyl Phosphonate		460	462
503-38-8	Diphosgene		220	221	811-97-2	Norflurane	Norflurane	260	261
503-38-8	Diphosgene		110	113	811-97-2	Tetrafluoroethane, 1,1,1,2-	Norflurane	260	261
503-38-8	Diphosgene		260	260	814-68-6	Acryloyl Chloride		110	111
504-29-0	Amino pyridine, 2-		270	271	818-61-1	Ethylene glycol acrylate		220	223
505-60-2	Sulfur Mustard (HD), FINABEL 0.7.C		500	502	822-06-0	Hexamethylene diisocyanate		210	211
505-60-2	Sulfur Mustard (HD), MIL-STD-282		500	502	872-50-4	Methyl 2-pyrrolidone, N-		130	132
512-56-1	Trimethyl phosphate		460	462	920-37-6	Chloro acrylonitrile, 2-		260	264
534-07-6	Dichloro -2-propanone, 1,3-	Dichloro -2-propanone, 1,3-	260	261	920-37-6	Chloro acrylonitrile, 2-		430	431
534-07-6	Dichloro -2-propanone, 1,3-	Dichloro -2-propanone, 1,3-	390	391	921-03-9	Trichloro acetone, 1,1,3-		390	391
534-07-6	Dichloro acetone, 1,3-	Dichloro -2-propanone, 1,3-	260	261	921-03-9	Trichloro acetone, 1,1,3-		260	261
534-07-6	Dichloro acetone, 1,3-	Dichloro -2-propanone, 1,3-	390	391	927-68-4	Bromoethyl Acetate, 2-		220	222
534-52-1	Dinitro-o-cresol, 4,6-	Dinitro-o-cresol, 4,6-	310	316	927-68-4	Bromoethyl Acetate, 2-		260	261
534-52-1	Dinitro-o-cresol, 4,6-	Dinitro-o-cresol, 4,6-	440	442	999-97-3	Hexamethyl disilazane	Hexamethyl disilazane, 1,1,1,3,3,3-	480	480
534-52-1	Dinitrocresol	Dinitro-o-cresol, 4,6-	310	316	999-97-3	Hexamethyl disilazane	Hexamethyl disilazane, 1,1,1,3,3,3-	480	480
534-52-1	Dinitrocresol	Dinitro-o-cresol, 4,6-	440	442	1003-09-4	Brom thiophene, 2-		500	509
541-25-3	Lewisite (L), FINABEL 0.7.C		470	470	1118-46-3	Butyl stannium trichloride	Butyl stannium trichloride	470	470
541-25-3	Lewisite (L), MIL-STD-282		470	470	1118-46-3	Tin chloride, mono-n-butyl	Butyl stannium trichloride	470	470
541-41-3	Ethylchloroformate		220	221	1310-58-3	Potassium hydroxide		380	380
541-41-3	Ethylchloroformate		260	260	1310-65-2	Lithium hydroxide		380	380
541-41-3	Ethylchloroformate		110	113	1310-73-2	Caustic soda	Caustic soda	380	380
541-73-1	Dichlorbenzen, 1,3-		260	263	1310-73-2	Sodium hydroxide	Caustic soda	380	380
542-75-6	Dichloro propene, 1,3-		260	261	1313-82-2	Disodium sulfide		340	340
563-80-4	Methyl Isopropyl Ketone		390	391	1319-77-3	Cresols, mixed isomers	Cresylic acid::Methyl phenols	310	316
584-08-7	Potassium carbonate		340	340	1319-77-3	Cresylic acid	Cresylic acid::Methyl phenols	310	316
584-84-9	Toluene diisocyanate, 2,4-		210	212	1319-77-3	Methyl phenols	Cresylic acid::Methyl phenols	310	316
592-34-7	Butylchloroformate		220	221	1321-74-0	Divinyl Benzene		290	292
592-34-7	Butylchloroformate		260	260	1330-20-7	Xylene, mixed isomers		290	292



APPENDIX
CHEMICAL INDEX - Chemical Abstract System (CAS) Number - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class	CAS Number	Chemical Name	Synonym	Class	Sub-Class
1333-82-0	Chromic acid (CrO3)		370	370	4109-96-0	Dichloro silane		480	480
1333-82-0	Chromic acid (H2SO4 x CrO3)		370	370	4553-62-2	Methyl 1,5-pentantedinitrile, 2-		430	431
1336-21-6	Ammonium hydroxide	Caustic ammonia	380	380	4635-87-4	Pentene nitrile, 3-		430	431
1336-21-6	Caustic ammonia	Caustic ammonia	380	380	5216-25-1	Chloro benzotrichloride, 4-		260	263
1338-23-4	Methyl Ethyl Ketone Peroxide	Methyl Ethyl Ketone Peroxide	300	302	5329-14-6	Amido sulfonic acid	Amido sulfonic acid::Sulfamidic acid	500	509
1338-23-4	Methyl Ethyl Ketone Peroxide	Methyl Ethyl Ketone Peroxide	300	300	5329-14-6	Amido sulfonic acid	Amido sulfonic acid::Sulfamidic acid	370	370
1341-49-7	Ammonium bifluoride	Ammonium hydrogendifluoride	350	350	5329-14-6	Sulfamic acid	Amido sulfonic acid::Sulfamidic acid	370	370
1341-49-7	Ammonium bifluoride	Ammonium hydrogendifluoride	340	340	5329-14-6	Sulfamic acid	Amido sulfonic acid::Sulfamidic acid	500	509
1341-49-7	Ammonium hydrogendifluoride	Ammonium hydrogendifluoride	350	350	5329-14-6	Sulfamidic acid	Amido sulfonic acid::Sulfamidic acid	370	370
1341-49-7	Ammonium hydrogendifluoride	Ammonium hydrogendifluoride	340	340	5329-14-6	Sulfamidic acid	Amido sulfonic acid::Sulfamidic acid	500	509
1461-22-9	Tin chloride, tri-n-butyl		470	470	5394-63-8	Diketene Acetone		270	278
1493-13-6	Trifluoro methansulfonic acid		500	504	5394-63-8	Diketene Acetone		390	391
1552-12-1	Cyclo octadiene		290	296	5989-27-5	Limonene d-	Methyl 4-isopropenyl-1-cyclohexene, 1-	290	296
1569-01-3	Propoxypropanol		240	245	5989-27-5	Methyl 4-isopropenyl-1-cyclohexene, 1-	Methyl 4-isopropenyl-1-cyclohexene, 1-	290	296
1634-04-4	Methoxy 2-methylpropane, 2-	Methoxy 2-methylpropane, 2-	240	241	6092-54-2	Hexyl chloro formate, 2-		220	221
1634-04-4	Methyl tert-butyl ether	Methoxy 2-methylpropane, 2-	240	241	6303-21-5	Hypophosphorus acid	Phosphinic acid	370	370
1658-42-0	Methyl -2-pyridyl acetate		220	222	6303-21-5	Phosphinic acid	Phosphinic acid	370	370
1675-54-3	Bis (4-(2,3-epoxypropoxy)phenyl)propane	Bis (4-(2,3-epoxypropoxy)phenyl)propane::Isopropylidenediphenol diglycidyl ether, 4,4'-	270	275	6834-92-0	Sodium silicate		340	340
1675-54-3	Bis phenol A diglycidyl ether	Bis (4-(2,3-epoxypropoxy)phenyl)propane::Isopropylidenediphenol diglycidyl ether, 4,4'-	270	275	6881-94-3	Diethylene Glycol Monopropyl Ether		240	245
1675-54-3	Isopropylidenediphenol diglycidyl ether, 4,4'-	Bis (4-(2,3-epoxypropoxy)phenyl)propane::Isopropylidenediphenol diglycidyl ether, 4,4'-	270	275	7087-68-5	Diisopropylethylamine (DIPEA)		140	141
1717-00-6	Refrigerant 141B		260	261	7439-97-6	Mercury		330	330
1761-71-3	Methylen Isocyclohexylamine, 4,4-		140	148	7446-09-5	Sulfur dioxide		350	350
1885-14-9	Phenyl chlor formiate		220	221	7446-09-5	Sulfur dioxide		360	365
2062-98-8	Perfluoro 2-propoxy propionyl fluoride		240	241	7446-11-9	Sulfur trioxide		360	365
2062-98-8	Perfluoro 2-propoxy propionyl fluoride		260	261	7447-41-8	Lithium chloride		340	340
2062-98-8	Perfluoro 2-propoxy propionyl fluoride		110	111	7452-59-7	Octyl chlor formiate		220	221
2068-78-2	Vincristine sulfate		990	991	7452-59-7	Octyl chlor formiate		110	113
2551-62-4	Sulfur hexafluoride		350	350	7487-94-7	Mercuric II chloride		340	340
2551-62-4	Sulfur hexafluoride		500	509	7550-45-0	Titan(IV) chloride	Titan(IV) chloride	360	360
2634-33-5	Benzisothiazol, 1,2-	Benzisothiazol, 1,2-	390	390	7550-45-0	Titanium tetrachloride	Titan(IV) chloride	360	360
2634-33-5	Benzisothiazol, 1,2-	Benzisothiazol, 1,2-	270	270	7553-56-2	Iodine		330	330
2634-33-5	Benzisothiazol, 1,2-	Benzisothiazol, 1,2-	270	274	7601-90-3	Perchloric acid		370	370
2634-33-5	Benzisothiazol, 1,2-	Benzisothiazol, 1,2-	500	500	7631-90-5	Sodium bisulphite		500	507
2634-33-5	Benzisothiazol, 1,2-	Benzisothiazol, 1,2-	390	391	7632-51-1	Vanadium tetrachloride		360	360
2634-33-5	Benzisothiazol, 1,2-	Benzisothiazol, 1,2-	500	509	7637-07-2	Boron trifluoride		360	360
2682-20-4	2-Methyl-4-isothiazolin-3-one	2-Methyl-4-isothiazolin-3-one	270	274	7637-07-2	Boron trifluoride		350	350
2682-20-4	2-Methyl-4-isothiazolin-3-one	2-Methyl-4-isothiazolin-3-one	390	391	7647-01-0	Hydrochloric acid		370	370
2682-20-4	2-Methyl-4-isothiazolin-3-one	2-Methyl-4-isothiazolin-3-one	500	509	7647-01-0	Hydrogen chloride		350	350
2682-20-4	2-Methyl-4-isothiazolin-3-one	2-Methyl-4-isothiazolin-3-one	500	500	7647-01-0	Hydrogen chloride		370	370
2682-20-4	2-Methyl-4-isothiazolin-3-one	2-Methyl-4-isothiazolin-3-one	270	270	7647-14-5	Sodium chloride		990	991
2682-20-4	2-Methyl-4-isothiazolin-3-one	2-Methyl-4-isothiazolin-3-one	390	390	7647-18-9	Antimony pentachloride	Pentachloroantimony	360	360
2807-30-9	Propyl Cellosolve, n-		240	245	7647-18-9	Pentachloroantimony	Pentachloroantimony	360	360
3173-53-3	Cyclo hexyl isocanyte		210	211	7664-38-2	Phosphoric acid		370	370
3536-96-7	Vinyl magnesium chloride		470	470	7664-39-3	Hydrofluoric acid		350	350
3778-73-2	Ilofamide		990	991	7664-39-3	Hydrofluoric acid		370	370

APPENDIX

CHEMICAL INDEX - Chemical Abstract System (CAS) Number - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class	CAS Number	Chemical Name	Synonym	Class	Sub-Class
7664-39-3	Hydrogen fluoride		370	370	8014-95-7	Oleum	Sulfuric acid fuming	370	370
7664-39-3	Hydrogen fluoride		350	350	8014-95-7	Sulfuric acid fuming	Sulfuric acid fuming	370	370
7664-41-7	Ammonia	30081410	350	350	8030-30-6	VM & P Naphtha		290	291
7664-41-7	Ammonia		380	380	8032-32-4	Naphtha		290	292
7664-41-7	Ammonia		350	350	8052-41-3	Low boiling point naphtha - unspecified	Low boiling point naphtha - unspecified	290	291
7664-41-7	Ammonia	30081410	380	380	8052-41-3	Stoddard solvent	Low boiling point naphtha - unspecified	290	291
7664-93-9	Sulfuric acid		370	370	9016-87-9	Polymethylene polyphenyle isocyanate (p-MDI)		210	212
7681-49-4	Sodium fluoride		340	340	10024-97-2	Nitrous oxide		350	350
7681-52-9	Sodium hypochlorite		340	340	10025-67-9	Disulphur dichloride	Disulphur dichloride	500	502
7681-57-4	Sodium metabisulphite		340	340	10025-67-9	Sulfur monochloride	Disulphur dichloride	500	502
7697-37-2	Nitric acid		370	370	10025-78-2	Trichloro silane		480	480
7705-08-0	Ferric (III) chloride		340	340	10025-87-3	Phosphorus oxychloride		360	360
7719-09-7	Thionyl chloride		360	360	10026-04-7	Silicon tetrachloride		360	360
7719-12-2	Phosphorus trichloride		360	360	10026-04-7	Silicon tetrachloride		480	480
7722-64-7	Potassium permanganate		340	340	10034-85-2	Hydriodic acid		370	370
7722-84-1	Hydrogen peroxide		300	301	10035-10-6	Hydrobromic acid		370	370
7726-95-6	Bromine		330	330	10035-10-6	Hydrogen bromide		350	350
7758-94-3	Ferric (II) chloride		340	340	10035-10-6	Hydrogen bromide		370	370
7782-41-4	Fluorine		350	350	10102-43-9	Nitric oxide		350	350
7782-50-5	Chlorine		330	330	10102-44-0	Nitrogen Dioxide (liquid)	Nitrogen Dioxide (liquid)	350	350
7782-50-5	Chlorine		350	350	10102-44-0	Nitrogen dioxide		350	350
7783-06-4	Hydrogen sulfide		350	350	10112-91-1	Calomel	Calomel	340	340
7783-06-4	Hydrogen sulfide		500	502	10112-91-1	Mercuric I chloride	Calomel	340	340
7783-07-5	Hydrogen selenide		350	350	10217-52-4	Hydrazine hydrate		280	280
7783-54-2	Nitrogen trifluoride		350	350	10294-34-5	Boron trichloride		360	360
7783-82-6	Tungsten hexafluoride		350	350	10294-34-5	Boron trichloride		350	350
7784-34-1	Arsenic (III) chloride	Arsenic trichloride	340	340	10544-72-6	Nitrogen tetroxide		350	350
7784-34-1	Arsenic trichloride	Arsenic trichloride	340	340	10545-99-0	Chlorine sulfide	Sulphur dichloride	500	502
7784-42-1	Arsine		350	350	10545-99-0	Sulphur dichloride	Sulphur dichloride	500	502
7789-00-6	Potassium chromate		340	340	11097-69-1	PCB 1254		260	263
7789-21-1	Fluorosulfonic acid		370	370	12125-01-8	Ammonium fluoride		340	340
7790-91-2	Chlorine trifluoride		350	350	12125-02-9	Ammonium chloride		340	340
7790-94-5	Chlorosulfonic acid		370	370	13284-42-9	Pentene nitrile, 2-		430	431
7790-94-5	Chlorosulfonic acid		500	504	13360-57-1	Diamino sulfo chloride		260	261
7803-51-2	Phosphine		350	350	13463-39-3	Nickel carbonyl	Tetracarbonylnickel	470	470
7803-62-5	Silane		480	480	13463-39-3	Tetracarbonylnickel	Tetracarbonylnickel	470	470
8001-58-9	Creosote		310	316	13831-31-7	Acetoxyacetyl Chloride		110	111
8002-05-9	Crude oil, California	Mineral oil	290	291	15520-10-2	Dytek® A		140	148
8002-05-9	Crude oil, California	Mineral oil	290	294	15663-27-1	Cisplatin		990	991
8006-64-2	Turpentine		290	294	16752-77-5	Methomyl		230	233
8006-64-2	Turpentine		290	296	16872-11-0	Fluoroboric acid		370	370
8007-56-5	Aqua regia	Aqua regia	370	370	16961-83-4	Fluorosilicic acid		370	370
8007-56-5	Nitrohydrochloric Acid	Aqua regia	370	370	19287-45-7	Diborane		350	350
8008-20-6	Kerosene		290	291	24991-55-7	Polyethylene glycol dimethyl ether		240	245
8012-95-1	Mineral oil		290	291	25136-40-9	Doxorubicin HCl		990	991

APPENDIX

CHEMICAL INDEX - Chemical Abstract System (CAS) Number - Chemical Names and Synonyms

CAS Number	Chemical Name	Synonym	Class	Sub-Class	CAS Number	Chemical Name	Synonym	Class	Sub-Class
25340-17-4	Diethyl benzene		290	292	mix	PCB in transformer oil		260	263
25899-50-7	Pentene nitrile, cis-2-		430	431	mix	Skydrol 4D	Skydrol 4D	590	590
26471-62-5	Toluene diisocyanate, 1,3-		210	212	mix	Skydrol 5	Skydrol 5	590	590
29911-27-1	Dipropylene Glycol Monopropyl Ether		240	245	mix	Skydrol PE-5	Skydrol PE-5	590	590
29911-28-2	Butyl Dipropasol Solvent		240	245	mix	Spectracide® (50% Malathion, 44% Aromatic Solvent)	Spectracide® (50% Malathion, 44% Aromatic Solvent)	590	590
29921-57-1	Isopropyl bromoacetate		260	260	mix	White Liquor		590	590
29921-57-1	Isopropyl bromoacetate		220	222	mix	White spirit		290	291
29921-57-1	Isopropyl bromoacetate		110	110	mix	m-Cresol 55%, p-Cresol 30%, Phenol 15%		310	316
30894-74-7	Dichloro -6-isopropyl-S-triazine, 2,4-		270	274	mix	t-Sodium-amylate / t-amyl alcohol		590	590
31218-83-4	Safrotin		460	462					
33069-62-4	Paclitaxel (Hospira)		990	991					
33419-42-0	Etoposide (Toposar®, Teva)		990	991					
41575-94-4	Carboplatin		990	991					
50782-69-9	VX Nerve Agent, FINABEL 0.7.C		460	462					
50782-69-9	VX Nerve Agent, MIL-STD-282		460	462					
50815-00-4	JP-4 Jet Fuel		290	291					
52583-42-3	Nitric acid, red fuming		370	370					
63121-00-6	Oxaliplatin		990	991					
64475-85-0	Mineral spirit		290	291					
68334-30-5	Diesel fuel		290	291					
68476-30-2	Fuel-oil no 2		290	291					
68956-56-9	Citrus Terpenes Mixture		140	148					
71486-22-1	Vinorelbine		990	991					
82410-32-0	Ganciclovir		990	991					
83016-70-0	Urethane Catalyst Alkanol		240	245					
86290-81-5	Gasoline, unleaded		290	291					
94114-58-6	JP-8 Jet Fuel		290	291					
94239-04-0	Pyridene, 2-fluoro-6-(trifluoromethyl)		270	271					
95058-81-4	Gemcitabine		990	991					
97697-37-4	Nitric/Hydrofluoric Pickling Solution		370	370					
100286-90-6	Irinotecan		990	991					
308066-70-8	Gasoline, unleaded E10 (87 Octane)		290	291					
mix	Black Liquor		590	590					
mix	Chemguard S-764P14A	Chemguard S-764P14A	590	590					
mix	Chemidize 727 ND		590	590					
mix	Dahlgren Decon solution	Dahlgren Decon solution	590	590					
mix	Diesel Fuel Grade D-2		290	290					
mix	Diesel automotive test fuel		290	291					
mix	Dowtherm Heat Transfer Fluid	Dowtherm Heat Transfer Fluid	590	590					
mix	DuPont Activator 193S		590	590					
mix	DuPont Activator 4505S		590	590					
mix	DuPont Activator 4507S		590	590					
mix	Gasoline, leaded		290	291					
mix	Green Liquor		590	590					
mix	PCB		260	263					